


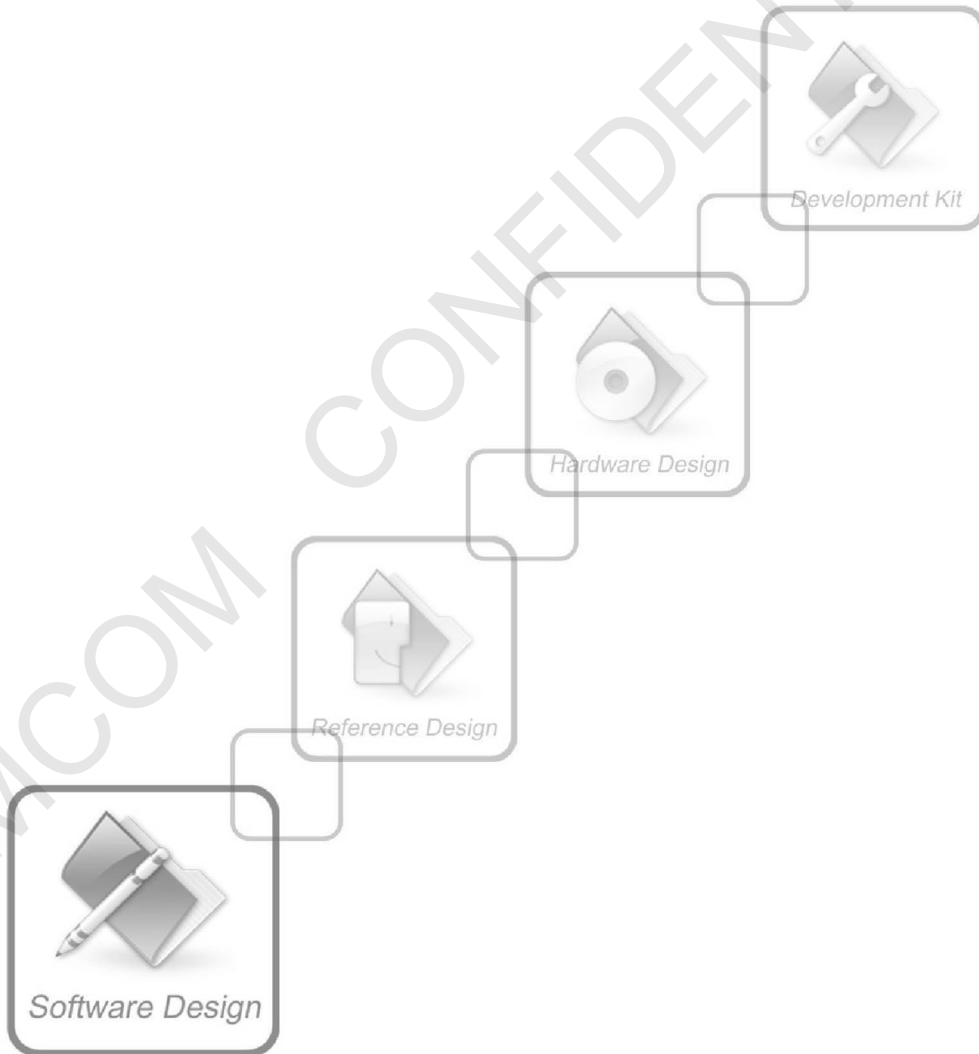

# SIM5300E AT Command Manual



---

Document Title	SIM5300E AT Command Manual
Version:	1.02
Date:	2017-04-20
Status:	Public
Document Control ID:	SIM5300E AT Command Manual V1.02

---

### **General Notes**

SIMCom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by SIMCom. The information provided is based upon requirements specifically provided to SIMCom by the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

### **Copyright**

This document contains proprietary technical information which is the property of SIMCom Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

**Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2017**

---

## VERSION HISTORY

---

Date	Version	Description of change	Author
2016-8-17	1.00	Origin	Xingyue.Zhao
2016-9-30	1.01	Email ,HTTP, FTP	Xingyue.Zhao
2017-4-20	1.02	Add TTS,SPIC, JD,SSL	Jie.hu

SIMCOM CONFIDENTIAL FILE

# Content

<b>GENERAL NOTES .....</b>	<b>I</b>
<b>COPYRIGHT .....</b>	<b>I</b>
<b>COPYRIGHT © SHANGHAI SIMCOM WIRELESS SOLUTIONS LTD. 2017 .....</b>	<b>I</b>
<b>CONTENT .....</b>	<b>III</b>
<b>1. INTRODUCTION .....</b>	<b>1</b>
1.1 SCOPE OF THE DOCUMENT .....	1
1.2 RELATED DOCUMENTS.....	1
1.3 CONVENTIONS AND ABBREVIATIONS.....	1
1.4 AT COMMAND SYNTAX .....	1
1.4.1 Basic syntax .....	2
1.4.2 S Parameter syntax.....	2
1.4.3 Extended Syntax.....	2
1.4.4 Combining AT commands on the same Command line .....	2
1.4.5 Entering successive AT commands on separate lines .....	2
1.5 SUPPORTED CHARACTER SETS .....	3
1.6 FLOW CONTROL .....	3
1.6.1 Software flow control (XON/XOFF flow control).....	3
1.6.2 Hardware flow control (RTS/CTS flow control) .....	4
<b>2. AT COMMANDS ACCORDING TO V.25TER .....</b>	<b>5</b>
2.1 OVERVIEW OF ATC ACCORDING TO V.25TER .....	5
2.2 DETAILED DESCRIPTION OF ATC ACCORDING TO V.25TER .....	6
2.2.1 A/ Re-issues the Last Command Given .....	6
2.2.2 ATA Answer an Incoming Call.....	6
2.2.3 ATD Mobile Originated Call to Dial A Number.....	6
2.2.4 ATDL Redial Last Telephone Number Used .....	8
2.2.5 ATE Set Command Echo Mode.....	9
2.2.6 ATH Disconnect Existing Connection.....	9
2.2.7 ATI Display Product Identification Information.....	9
2.2.8 +++ Switch from Data Mode or PPP Online Mode to Command Mode .....	10
2.2.9 ATO Switch from Command Mode to Data Mode .....	10
2.2.10 ATQ Set Result Code Presentation Mode.....	11
2.2.11 ATSO Set Number of Rings before Automatically Answering the Call .....	11
2.2.12 ATSA Set Response Formatting Character .....	12
2.2.13 ATSA7 Set Number of Seconds to Wait for Connection Completion .....	12
2.2.14 ATV TA Response Format.....	13
2.2.15 ATX Set CONNECT Result Code Format and Monitor Call Progress .....	14
2.2.16 ATZ Reset Default Configuration .....	15

2.2.17	AT&D	Set DTR Function Mode .....	15
2.2.18	AT+GMI	Request Manufacturer Identification.....	16
2.2.19	AT+GMM	Request TA Model Identification .....	16
2.2.20	AT+GMR	Request TA Revision Identification of Software Release.....	16
2.2.21	AT+GOI	Request Global Object Identification .....	17
2.2.22	AT+GSN	Request TA Serial Number Identification (IMEI) .....	17
2.2.23	AT+ICF	Set TE-TA Control Character Framing .....	17
2.2.24	AT+IFC	Set TE-TA Local Data Flow Control.....	18
2.2.25	AT+IPR	Set TE-TA Fixed Local Rate.....	19
2.2.26	AT+HVOIC	Disconnect Voice Call Only .....	20
<b>3.</b>	<b>AT COMMANDS ACCORDING TO 3GPP TS 27.007</b> .....		<b>21</b>
3.1	OVERVIEW OF ATC ACCORDING TO 3GPP TS 27.007 .....		21
3.2	DETAILED DESCRIPTIONS OF ATC ACCORDING TO 3GPP TS 27.007 .....		22
3.2.1	AT+CACM	Accumulated Call Meter (ACM) Reset or Query.....	22
3.2.2	AT+CAMM	Accumulated Call Meter Maximum (ACM max) Set or Query .....	23
3.2.3	AT+CAOC	Advice of Charge.....	24
3.2.4	AT+CBST	Select Bearer Service Type .....	25
3.2.5	AT+CCFC	Call Forwarding Number and Conditions Control.....	26
3.2.6	AT+CCWA	Call Waiting Control.....	28
3.2.7	AT+CEER	Extended Error Report .....	30
3.2.8	AT+CGMI	Request Manufacturer Identification.....	31
3.2.9	AT+CGMM	Request Model Identification .....	31
3.2.10	AT+CGMR	Request TA Revision Identification of Software Release.....	31
3.2.11	AT+CGSN	Request Product Serial Number Identification (Identical with +GSN).....	32
3.2.12	AT+CSCS	Select TE Character Set .....	32
3.2.13	AT+CSTA	Select Type of Address.....	33
3.2.14	AT+CHLD	Call Hold and Multiparty.....	34
3.2.15	AT+CIMI	Request International Mobile Subscriber Identity.....	34
3.2.16	AT+CLCC	List Current Calls of ME.....	35
3.2.17	AT+CLCK	Facility Lock.....	36
3.2.18	AT+CLIP	Calling Line Identification Presentation .....	38
3.2.19	AT+CLIR	Calling Line Identification Restriction .....	40
3.2.20	AT+CMEE	Report Mobile Equipment Error .....	41
3.2.21	AT+COLP	Connected Line Identification Presentation.....	41
3.2.22	AT+COPS	Operator Selection .....	43
3.2.23	AT+CPAS	Phone Activity Status.....	44
3.2.24	AT+CPIN	Enter PIN .....	45
3.2.25	AT+CPWD	Change Password .....	46
3.2.26	AT+CR	Service Reporting Control.....	47
3.2.27	AT+CRC	Set Cellular Result Codes for Incoming Call Indication .....	48
3.2.28	AT+CREG	Network Registration.....	49
3.2.29	AT+CRLP	Select Radio Link Protocol Parameters .....	50
3.2.30	AT+CRSM	Restricted SIM Access.....	51
3.2.31	AT+CSQ	Signal Quality Report .....	52

3.2.32	<i>AT+VTD</i>	<i>Tone Duration</i>	52
3.2.33	<i>AT+VTS</i>	<i>DTMF and Tone Generation</i>	53
3.2.34	<i>AT+CMUX</i>	<i>Multiplexer Control</i>	54
3.2.35	<i>AT+CNUM</i>	<i>Subscriber Number</i>	55
3.2.36	<i>AT+CPOL</i>	<i>Preferred Operator List</i>	56
3.2.37	<i>AT+COPN</i>	<i>Read Operator Names</i>	57
3.2.38	<i>AT+CFUN</i>	<i>Set Phone Functionality</i>	57
3.2.39	<i>AT+CCLK</i>	<i>Clock</i>	58
3.2.40	<i>AT+CMUT</i>	<i>Mute Control</i>	59
3.2.41	<i>AT+CSIM</i>	<i>Generic SIM Access</i>	60
3.2.42	<i>AT+CPUC</i>	<i>Price Per Unit and Currency Table</i>	60
3.2.43	<i>AT+CCWE</i>	<i>Call Meter Maximum Event</i>	61
3.2.44	<i>AT+CBC</i>	<i>Battery Charge</i>	62
3.2.45	<i>AT+CUSD</i>	<i>Unstructured Supplementary Service Data</i>	62
3.2.46	<i>AT+CSSN</i>	<i>Supplementary Services Notification</i>	63
<b>4.</b>	<b>AT COMMANDS ACCORDING TO 3GPP TS 27.005</b>		<b>66</b>
4.1	OVERVIEW OF AT COMMANDS ACCORDING TO 3GPP TS 27.005		66
4.2	DETAILED DESCRIPTIONS OF ATC ACCORDING TO 3GPP TS 27.005		66
4.2.1	<i>AT+CMGD</i>	<i>Delete SMS Message</i>	67
4.2.2	<i>AT+CMGF</i>	<i>Select SMS Message Format</i>	67
4.2.3	<i>AT+CMGL</i>	<i>List SMS Messages from Preferred Store</i>	68
4.2.4	<i>AT+CMGR</i>	<i>Read SMS Message</i>	71
4.2.5	<i>AT+CMGS</i>	<i>Send SMS Message</i>	75
4.2.6	<i>AT+CMGW</i>	<i>Write SMS Message to Memory</i>	76
4.2.7	<i>AT+CMSS</i>	<i>Send SMS Message from Storage</i>	78
4.2.8	<i>AT+CNMI</i>	<i>New SMS Message Indications</i>	79
4.2.9	<i>AT+CPMS</i>	<i>Preferred SMS Message Storage</i>	81
4.2.10	<i>AT+CSCA</i>	<i>SMS Service Center Address</i>	82
4.2.11	<i>AT+CSCB</i>	<i>Select Cell Broadcast SMS Messages</i>	83
4.2.12	<i>AT+CSDH</i>	<i>Show SMS Text Mode Parameters</i>	84
4.2.13	<i>AT+CSMP</i>	<i>Set SMS Text Mode Parameters</i>	85
4.2.14	<i>AT+CSMS</i>	<i>Select Message Service</i>	86
<b>5.</b>	<b>AT COMMANDS SPECIAL FOR SIMCOM</b>		<b>87</b>
5.1	OVERVIEW OF ATC FOR SIMCOM		87
5.2	DETAILED DESCRIPTIONS OF ATC FOR SIMCOM		89
5.2.1	<i>AT+CSNS</i>	<i>Single Numbering Scheme</i>	89
5.2.2	<i>AT+CMOD</i>	<i>Configure Alternating Mode Calls</i>	89
5.2.3	<i>AT+CPOWD</i>	<i>Power Off</i>	90
5.2.4	<i>AT+CADC</i>	<i>Read ADC</i>	90
5.2.5	<i>AT+CLTS</i>	<i>Get Local Timestamp</i>	91
5.2.6	<i>AT+CBAND</i>	<i>Get and Set Mobile Operation Band</i>	93
5.2.7	<i>AT+CSCLK</i>	<i>Configure Slow Clock</i>	93
5.2.8	<i>AT+CENG</i>	<i>Switch on or off Engineering Mode</i>	94

5.2.9	<i>AT+SCLASS0 Store Class 0 SMS to SIM When Received Class 0 SMS</i> .....	97
5.2.10	<i>AT+CCID Show ICCID</i> .....	97
5.2.11	<i>AT+CMTE Set Critical Temperature Operating Mode or Query Temperature</i> .....	98
5.2.12	<i>AT+MORING Show State of Mobile Originated Call</i> .....	98
5.2.13	<i>AT+CIURC Enable or Disable Initial URC Presentation</i> .....	99
5.2.14	<i>AT+CCALR Call Ready Query</i> .....	100
5.2.15	<i>AT+GSV Display Product Identification Information</i> .....	100
5.2.16	<i>AT+SGPIO Control the GPIO</i> .....	100
5.2.17	<i>AT+SPWM Generate the Pulse-Width-Modulation</i> .....	101
5.2.18	<i>AT+SLEDS Set the Timer Period of Net Light</i> .....	102
5.2.19	<i>AT+CNELIGHT Close the Net Light or Open It to Shining</i> .....	103
5.2.20	<i>AT+CSDT Switch on or off Detecting SIM Card</i> .....	103
5.2.21	<i>AT+CSMINS SIM Inserted Status Reporting</i> .....	104
5.2.22	<i>AT+CSGS Netlight Indication of GPRS Status</i> .....	104
5.2.23	<i>AT+SJDR Jamming detection</i> .....	105
5.2.24	<i>AT+CNMP Selection of Radio Access Technology</i> .....	106
5.2.25	<i>AT+CSACT Choose the network-attached Status</i> .....	107
5.2.26	<i>AT+GSMBUSY Reject Incoming Call</i> .....	108
5.2.27	<i>AT+CDRIND CS Voice/Data Call Termination Indication</i> .....	109
5.2.28	<i>AT+CGSMCLASS Change GPRS Multislot Class</i> .....	109
5.2.29	<i>AT+CLVL Loud Speaker Volume Level</i> .....	110
5.2.30	<i>AT+CMIC Change the Microphone Gain Level</i> .....	111
5.2.31	<i>AT+SIDET Change the Side Tone Gain Level</i> .....	111
5.2.32	<i>AT+ECHO Echo Cancellation Control</i> .....	112
5.2.33	<i>AT+CALM Alert Sound Mode</i> .....	113
5.2.34	<i>AT+CALS Alert Sound Select</i> .....	113
5.2.35	<i>AT+CMGDA Delete All SMS</i> .....	114
5.2.36	<i>AT+SIMTONE Generate Specifically Tone</i> .....	115
5.2.37	<i>AT+STTONE Play SIM Toolkit Tone</i> .....	116
5.2.38	<i>AT+CLDTMF Local DTMF Tone Generation</i> .....	117
5.2.39	<i>AT+SNDLEVEL Set the Sound Level of Special AT Command</i> .....	118
5.2.40	<i>AT+CHF Configure Hands Free Operation</i> .....	119
5.2.41	<i>AT+CHFA Swap the Audio Channels</i> .....	119
5.2.42	<i>AT+DTAM Set Local or Remote Audio Play</i> .....	120
5.2.43	<i>AT+CTTS TTS Operation</i> .....	120
5.2.44	<i>AT+CTTSPARAM Set TTS Parameters</i> .....	121
5.2.45	<i>AT+CTTSPAUSE Set Italian TTS Punctuation Pause Time</i> .....	123
5.2.46	<i>AT+SPIC Times Remained to Input SIM PIN/PUK</i> .....	124
<b>6.</b>	<b>AT COMMANDS FOR NETWORK SUPPORT</b> .....	<b>125</b>
6.1	OVERVIEW OF ATC FOR NETWORK SUPPORT.....	125
6.2	DETAILED DESCRIPTIONS OF ATC FOR GPRS SUPPORT.....	125
6.2.1	<i>AT+CGATT Attach or Detach from GPRS Service</i> .....	125
6.2.2	<i>AT+CGDCONT Define PDP Context</i> .....	126
6.2.3	<i>AT+CGQMIN Quality of Service Profile (Minimum Acceptable)</i> .....	127

6.2.4	AT+CGQREQ	Quality of Service Profile (Requested)	128
6.2.5	AT+CGACT	PDP Context Activate or Deactivate	130
6.2.6	AT+CGDATA	Enter Data State	130
6.2.7	AT+CGPADDR	Show PDP Address	131
6.2.8	AT+CGCLASS	GPRS Mobile Station Class	132
6.2.9	AT+CGREP	Control Unsolicited GPRS Event Reporting	132
6.2.10	AT+CGREG	Network Registration Status	134
6.2.11	AT+CGSMS	Select Service for MO SMS Messages	135
6.2.12	AT+CGEQMIN	3G Quality of Service Profile	135
6.2.13	AT+CGEQREQ	3G Quality of Service Profile(Requested)	139
6.2.14	AT+CGEQNEG	3G Quality of Service Profile(Negotiated)	143
<b>7.</b>	<b>AT COMMANDS FOR TCPIP APPLICATION TOOLKIT</b>		<b>146</b>
7.1	OVERVIEW		146
7.2	DETAILED DESCRIPTIONS OF COMMANDS		147
7.2.1	AT+CIPMUX	Start Up Multi-IP Connection	147
7.2.2	AT+CIPSTART	Start Up TCP or UDP Connection	147
7.2.3	AT+CIPSEND	Send Data Through TCP or UDP Connection	151
7.2.4	AT+CIPQSEND	Select Data Transmitting Mode	153
7.2.5	AT+CIPACK	Query Previous Connection Data Transmitting State	153
7.2.6	AT+CIPCLOSE	Close TCP or UDP Connection	154
7.2.7	AT+CIPSHUT	Deactivate GPRS PDP Context	154
7.2.8	AT+CLPORT	Set Local Port	155
7.2.9	AT+CSTT	Start Task and Set APN, USER NAME, PASSWORD	156
7.2.10	AT+CIICR	Bring Up Wireless Connection with GPRS	157
7.2.11	AT+CIFSR	Get Local IP Address	157
7.2.12	AT+CIFSREX	Get Local IP Address	158
7.2.13	AT+CIPSTATUS	Query Current Connection Status	158
7.2.14	AT+CDNSCFG	Configure Domain Name Server	160
7.2.15	AT+CDNSGIP	Query the IP Address of Given Domain Name	160
7.2.16	AT+CIPHEAD	Add an IP Head at the Beginning of a Package Received	161
7.2.17	AT+CIPATS	Set Auto Sending Timer	162
7.2.18	AT+CIPSPRT	Set Prompt of '>' When Module Sends Data	162
7.2.19	AT+CIPSERVER	Configure Module as Server	163
7.2.20	AT+CIPCSGP	Set GPRS for Connection Mode	164
7.2.21	AT+CIPSRIP	Show Remote IP Address and Port When Received Data	164
7.2.22	AT+CIPDPDP	Set Whether to Check State of GPRS Network Timing	165
7.2.23	AT+CIPMODE	Select TCPIP Application Mode	166
7.2.24	AT+CIPCCFG	Configure Transparent Transfer Mode	166
7.2.25	AT+CIPSHOWTP	Display Transfer Protocol in IP Head When Received Data	168
7.2.26	AT+CIPUDPMODE	UDP Extended Mode	168
7.2.27	AT+CIPRXGET	Get Data from Network Manually	169
7.2.28	AT+CIPRDTIMER	Set Remote Delay Timer	172
7.2.29	AT+CIPSGTXT	Select GPRS PDP context	172
7.2.30	AT+CIPOPTION	Set TCP Option	173



7.2.31	<i>AT+CIPSENDHEX</i>	<i>Set CIPSEND Data Format to Hex</i>	173
7.2.32	<i>AT+CIPHEXS</i>	<i>Set Output-data Format with suffix</i>	174
7.2.33	<i>AT+CIPSSL</i>	<i>Enable TCP SSL function</i>	174
<b>8.</b>	<b>AT COMMANDS FOR PING APPLICATION</b>		<b>176</b>
8.1	OVERVIEW		176
8.2	DETAILED DESCRIPTIONS OF COMMANDS		176
8.2.1	<i>AT+CIPPING</i>	<i>PING Request</i>	176
8.2.2	<i>AT+CIPCTL</i>	<i>Set the Mode When Receiving an IP Packet</i>	177
8.2.3	<i>AT+CIPFLT</i>	<i>Set the Rules of IP Filter</i>	178
<b>9.</b>	<b>AT COMMANDS FOR IP APPLICATION</b>		<b>179</b>
9.1	OVERVIEW		179
9.2	DETAILED DESCRIPTIONS OF COMMANDS		179
9.2.1	<i>AT+SAPBR</i>	<i>Bearer Settings for Applications Based on IP</i>	179
<b>10.</b>	<b>AT COMMANDS FOR HTTP APPLICATION</b>		<b>181</b>
10.1	OVERVIEW		181
10.2	DETAILED DESCRIPTIONS OF COMMANDS		181
10.2.1	<i>AT+HTTPINIT</i>	<i>Initialize HTTP Service</i>	181
10.2.2	<i>AT+HTTPTERM</i>	<i>Terminate HTTP Service</i>	182
10.2.3	<i>AT+HTTPPARA</i>	<i>Set HTTP Parameters Value</i>	182
10.2.4	<i>AT+HTTPDATA</i>	<i>Input HTTP Data</i>	183
10.2.5	<i>AT+HTTPACTION</i>	<i>HTTP Method Action</i>	184
10.2.6	<i>AT+HTTPREAD</i>	<i>Read the HTTP Server Response</i>	186
10.2.7	<i>AT+HTTPSTATUS</i>	<i>Read HTTP Status</i>	187
<b>11.</b>	<b>AT COMMANDS FOR FTP APPLICATION</b>		<b>187</b>
11.1	OVERVIEW		188
11.2	DETAILED DESCRIPTIONS OF COMMANDS		188
11.2.1	<i>AT+FTPPORT</i>	<i>Set FTP Port</i>	188
11.2.2	<i>AT+FTPMODE</i>	<i>Set Active or Passive FTP Mode</i>	189
11.2.3	<i>AT+FTPTYPE</i>	<i>Set FTP Transfer Type</i>	189
11.2.4	<i>AT+FTPPUTOPT</i>	<i>Set FTP Put Type</i>	190
11.2.5	<i>AT+FTPCID</i>	<i>Set FTP Bearer Profile Identifier</i>	191
11.2.6	<i>AT+FTPREST</i>	<i>Set Resume Broken Download</i>	191
11.2.7	<i>AT+FTPSERV</i>	<i>Set FTP Server Address</i>	192
11.2.8	<i>AT+FTPUN</i>	<i>Set FTP User Name</i>	192
11.2.9	<i>AT+FTPPW</i>	<i>Set FTP Password</i>	192
11.2.10	<i>AT+FTPGETNAME</i>	<i>Set Download File Name</i>	193
11.2.11	<i>AT+FTPGETPATH</i>	<i>Set Download File Path</i>	193
11.2.12	<i>AT+FTPPUTNAME</i>	<i>Set Upload File Name</i>	194
11.2.13	<i>AT+FTPPUTPATH</i>	<i>Set Upload File Path</i>	194
11.2.14	<i>AT+FTPGET</i>	<i>Download File</i>	195
11.2.15	<i>AT+FTPPUT</i>	<i>Upload File</i>	196

11.2.16	AT+FTPDELE	Delete Remote File	197
11.2.17	AT+FTPSIZE	Get the Size of Specified File on the Remote Machine	198
11.2.18	AT+FTPSTATE	Get FTP Current State	199
11.2.19	AT+FTPEXTPUT	Extend Upload File	199
11.2.20	AT+FTPMKD	Make Directory on the Remote Machine	200
11.2.21	AT+FTPTRMD	Remove Directory on the Remote Machine	201
11.2.22	AT+FTPLIST	List Contents of Directory on the Remote Machine	201
11.2.23	AT+FTPEXTGET	Download File From the Remote Machine to Flash	202
11.2.24	AT+FTPGET	Download File	204
11.2.25	AT+FTPPUT	Upload File	204
11.2.26	AT+FTPQUIT	Quit FTP transfer session	205
11.2.27	AT+FTPSETNAME	Rename the Specified File on the Remote Machine	206
11.2.28	AT+FTPMGMT	Get the Last Modification Timestamp of Specified File on the Remote Machine	207
<b>12.</b>	<b>AT COMMANDS FOR NTP</b>		<b>207</b>
12.1	OVERVIEW		207
12.2	AT COMMANDS FOR NTP		207
<b>13.</b>	<b>AT COMMANDS FOR MMS</b>		<b>209</b>
13.1	OVERVIEW		209
13.2	DETAILED DESCRIPTIONS OF COMMANDS		210
13.2.1	AT+CMMSURL	Set the URL of the MMS Center	210
13.2.2	AT+CMMSPROTO	Set the Protocol Parameter and MMS Proxy	210
13.2.3	AT+CMMSCID	Set the Network Parameters for MMS	211
13.2.4	AT+CMMSSEDCFG	Set the Parameters for sending MMS	211
13.2.5	AT+CMMSEDIT	Enter or Exit Edit Mode	214
13.2.6	AT+CMMSDOWN	Download the File Data or Little from UART	214
13.2.7	AT+CMMSDELFILE	Delete the file of the edited MMS by file index	215
13.2.8	AT+CMMSSEND	Start MMS sending	216
13.2.9	AT+CMMSRECP	Add recipients	216
13.2.10	AT+CMMSCC	Add copy recipients	217
13.2.11	AT+CMMSBCC	Add Secret Recipients	217
13.2.12	AT+CMMSDELRECP	Delete recipients	218
13.2.13	AT+CMMSDELCC	Delete copy recipients	218
13.2.14	AT+CMMSDELBCC	Delete secret recipients	219
13.2.15	AT+CMMSRECV	Receive MMS	219
13.2.16	AT+CMMSVIEW	Get the MMS into buffer and show the information	220
13.2.17	AT+CMMSREAD	Read the given file of the MMS in the buffer	221
13.2.18	AT+CMMSRDPUSH	Read the information of the MMS Push message	222
13.2.19	AT+CMMSUA	Set User Agent	224
13.2.20	AT+CMMSPROFILE	Set User Agent Profile	224
13.2.21	AT+CMMSSTIMEOUT	Set MMS Timeout	225
13.2.22	AT+CMMSSTATUS	Get MMS Status	225
13.2.23	AT+CMMSINIT	Initialize MMS Function	226
13.2.24	AT+CMMSTERM	Exit MMS Function	226

13.2.25	AT+CMMSTYPECTL	Set the Assembling Method of MMS to be Sent	226
<b>14.</b>	<b>AT COMMANDS FOR EMAIL APPLICATION</b>		<b>227</b>
14.1	OVERVIEW		227
14.2	DETAILED DESCRIPTIONS FOR EMAIL APPLICATION		228
14.2.1	AT+EMAILCID	Set Email Bearer Profile Identifier	228
14.2.2	AT+EMAILTO	Set Timeout Value of SMTP/POP3 Server Response	228
14.2.3	AT+SMTPSRV	Set SMTP Server Address and Port	229
14.2.4	AT+SMTPAUTH	Set User Name and Password for SMTP Authentication	230
14.2.5	AT+SMTPFROM	Set Sender Address and Name	230
14.2.6	AT+SMTPRCPT	Set the Email Recipient(TO/CC/BCC) Address and Name	231
14.2.7	AT+SMTPSUB	Set the Email Subject	232
14.2.8	AT+SMTPBODY	Set the Email Body	233
14.2.9	AT+SMTPFILE	Set the Email Attachment	233
14.2.10	AT+SMTPSEND	Send Emails	234
14.2.11	AT+SMTPFT	Transfer the Email Attachment	235
14.2.12	AT+SMTPCS	Set the Email Charset	236
14.2.13	AT+SMTPEXTFLIE	SMTP Extend File Mode	237
14.2.14	AT+POP3SRV	Set POP3 Server and Account	239
14.2.15	AT+POP3IN	Log in POP3 Server	239
14.2.16	AT+POP3NUM	Get Email Number and Total Size	240
14.2.17	AT+POP3LIST	Get the Specific Size	241
14.2.18	AT+POP3UIDL	Get the Specific Email Unique-id	242
14.2.19	AT+POP3CMD	Get Multi-line Response	243
14.2.20	AT+POP3READ	Read Multi-line Response	244
14.2.21	AT+POP3DEL	Mark the Specific Email to Delete	245
14.2.22	AT+POP3RSET	Unmark the Emails that Be Marked as Deleted	246
14.2.23	AT+POP3OUT	Log Out POP3 Server	247
<b>15.</b>	<b>SUPPORTED UNSOLICITED RESULT CODE</b>		<b>249</b>
15.1	SUMMARY OF CME ERROR CODES		249
15.2	SUMMARY OF CMS ERROR CODES		252
<b>CONTACT US:</b>			<b>256</b>

---

# 1. Introduction

## 1.1 Scope of the document

This document presents the AT Command Set for SIM5300E .

## 1.2 Related documents

You can visit SIMCom Website using the following link:

[URL:www.simcomm2m.com](http://www.simcomm2m.com)

## 1.3 Conventions and abbreviations

In this document, the GSM engines are referred to as following term:

ME (Mobile Equipment);

MS (Mobile Station);

TA (Terminal Adapter);

DCE (Data Communication Equipment) or facsimile DCE (FAX modem, FAX board);

In application, controlling device controls the GSM engine by sending AT Command via its serial interface. The controlling device at the other end of the serial line is referred to as following term:

TE (Terminal Equipment);

DTE (Data Terminal Equipment) or plainly "the application" which is running on an embedded system;

## 1.4 AT Command syntax

The "AT" or "at" or "aT" or "At" prefix must be set at the beginning of each Command line. To terminate a Command line enter <CR>.

Commands are usually followed by a response that includes. "<CR><LF><response><CR><LF>"

Throughout this document, only the responses are presented, <CR><LF> are omitted intentionally.

The AT Command set implemented by SIM5300E is a combination of 3GPP TS 27.005, 3GPP TS 27.007 and ITU-T recommendation V.25ter and the AT commands specified by SIMCom.

**Note:** Only enter AT Commands through serial port after SIM5300E have been powered on and Unsolicited Result Code "RDY" is received from serial port. If auto-bauding is enabled, the Unsolicited Result Codes "RDY" and so on are not indicated when you start up the ME, and the "AT" prefix, or "at" prefix must be set

at the beginning of each command line.

All these AT commands can be split into three categories syntactically: "**basic**", "**S parameter**", and "**extended**". These are as follows:

### 1.4.1 Basic syntax

These AT commands have the format of "**AT<x><n>**", or "**AT&<x><n>**", where "**<x>**" is the Command, and "**<n>**" is/are the argument(s) for that Command. An example of this is "**ATE<n>**", which tells the DCE whether received characters should be echoed back to the DTE according to the value of "**<n>**". "**<n>**" is optional and a default will be used if missing.

### 1.4.2 S Parameter syntax

These AT commands have the format of "**ATS<n>=<m>**", where "**<n>**" is the index of the **S** register to set, and "**<m>**" is the value to assign to it. "**<m>**" is optional; if it is missing, then a default value is assigned.

### 1.4.3 Extended Syntax

These commands can operate in several modes, as in the following table:

**Table 1: Types of AT commands and responses**

Test Command	AT+<x>=?	The mobile equipment returns the list of parameters and value ranges set with the corresponding Write Command or by internal processes.
Read Command	AT+<x>?	This command returns the currently set value of the parameter or parameters.
Write Command	AT+<x>=<...>	This command sets the user-definable parameter values.
Execution Command	AT+<x>	The execution command reads non-variable parameters affected by internal processes in the GSM engine.

### 1.4.4 Combining AT commands on the same Command line

You can enter several AT commands on the same line. In this case, you do not need to type the "**AT**" or "**at**" prefix before every command. Instead, you only need type "**AT**" or "**at**" the beginning of the command line. Please note to use a semicolon as the command delimiter after an extended command; in basic syntax or S parameter syntax, the semicolon need not enter, for example: ATE1Q0S0=1V1X4;+IPR=115200;

The Command line buffer can accept a maximum of 1024 characters (counted from the first command without "AT" or "at" prefix). If the characters entered exceeded this number then none of the Command will executed and TA will return "**ERROR**".

### 1.4.5 Entering successive AT commands on separate lines

When you need to enter a series of AT commands on separate lines, please Note that you need to wait the final response (for example OK, CME error, CMS error) of last AT Command you entered before you enter the next AT Command.

## 1.5 Supported character sets

The SIM5300E AT Command interface defaults to the IRA character set. The SIM5300E supports the following character sets:

GSM format

UCS2

HEX

IRA

The character set can be set and interrogated using the "**AT+CSCS**" Command (3GPP TS 27.007).The character set is defined in GSM specification 3GPP TS 27.005.

The character set affects transmission and reception of SMS and SMS Cell Broadcast messages, the entry and display of phone book entries text field and SIM Application Toolkit alpha strings.

## 1.6 Flow control

Flow control is very important for correct communication between the GSM engine and DTE. For in the case such as a data or fax call, the sending device is transferring data faster than the receiving side is ready to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control. SIM5300E support both two kinds of flow control.

In Multiplex mode, it is recommended to use the hardware flow control.

### 1.6.1 Software flow control (XON/XOFF flow control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

The default flow control approach of SIM5300E is hardware flow control (RTS/CTS flow control), to enable software flow control in the DTE interface and within GSM engine, type the following AT Command:

```
AT+IFC=1, 1
```

Ensure that any communications software package (e.g. Hyper terminal) uses software flow control.

**Note:** Software Flow control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP) as the DTE interface may interpret binary data as flow control characters.

## 1.6.2 Hardware flow control (RTS/CTS flow control)

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer should be suspended, the CTS line is set inactive until the transfer from the receiving buffer has completed. When the receiving buffer is ok to receive more data, CTS goes active once again.

To achieve hardware flow control, ensure that the RTS/CTS lines are present on your application platform.

SIMCOM CONFIDENTIAL FILE

## 2. AT Commands According to V.25TER

These AT Commands are designed according to the ITU-T (International Telecommunication Union, Telecommunication sector) V.25ter document.

### 2.1 Overview of ATC According to V.25TER

Command	Description
A/	Re-issues the last command given
ATA	Answer an incoming call
ATD	Mobile originated call to dial a number
ATDL	Redial last telephone number used
ATE	Set command echo mode
ATH	Disconnect existing connection
ATI	Display product identification information
+++	Switch from data mode or ppp online mode to command mode
ATO	Switch from command mode to data mode
ATQ	Set result code presentation mode
ATS0	Set number of rings before automatically answering the call
ATS4	Set response formatting character
ATS7	Set number of seconds to wait for connection completion
ATV	TA response format
ATX	Set connect result code format and monitor call progress
ATZ	Reset default configuration
AT&D	Set DTR function mode
AT+GMI	Request manufacturer identification
AT+GMM	Request TA model identification
AT+GMR	Request TA revision identification of software release
AT+GOI	Request global object identification
AT+GSN	Request TA serial number identification (IMEI)
AT+ICF	Set TE-TA control character framing
AT+IFC	Set TE-TA local data flow control
AT+IPR	Set TE-TA fixed local rate
AT+HVOIC	Disconnect Voice Call Only



## 2.2 Detailed Description of ATC According to V.25TER

### 2.2.1 A/ Re-issues the Last Command Given

A/ Re-issues the Last Command Given	
Execution Command <b>A/</b>	Response Re-issues the previous Command
Reference V.25ter	

### 2.2.2 ATA Answer an Incoming Call

ATA Answer an Incoming Call	
Execution Command <b>ATA</b>	<p>Response</p> <p>TA sends off-hook to the remote station.</p> <p>Response in case of data call, if successfully connected CONNECT&lt;text&gt; TA switches to data mode.</p> <p>Note: &lt;text&gt; output only if ATX&lt;value&gt; parameter setting with the &lt;value&gt;&gt;0</p> <p>When TA returns to Command mode after call release <b>OK</b></p> <p>Response in case of voice call, if successfully connected <b>OK</b></p> <p>Response if no connection <b>NO CARRIER</b></p>
Reference V.25ter	<p>Note:</p> <ul style="list-style-type: none"> <li>Any additional commands on the same Command line are ignored.</li> <li>This Command may be aborted generally by receiving a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</li> </ul>

### 2.2.3 ATD Mobile Originated Call to Dial A Number

ATD Mobile Originated Call to Dial A Number	
Execution Command <b>ATD&lt;n&gt;[&lt;mgsms&gt;];</b>	<p>Response</p> <p>This Command can be used to set up outgoing voice, data or fax calls. It also serves to control supplementary services.</p> <p>Note: This Command may be aborted generally by receiving an ATH</p>

Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.

If error is related to ME functionality

**+CME ERROR: <err>**

If no DIALTONE and (parameter setting ATX2 or ATX4)

**NO DIALTONE**

If busy and (parameter setting ATX3 or ATX4)

**BUSY**

If a connection cannot be established

**NO CARRIER**

If the remote station does not answer

**NO ANSWER**

If connection successful and non-voice call.

CONNECT<text> TA switches to data mode.

Note: <text> output only if ATX<value> parameter setting with the <value> >0

When TA returns to Command mode after call release

**OK**

If connection successful and voice call

**OK**

#### Parameters

**<n>**

String of dialing digits and optionally V.25ter modifiers dialing digits:

**0-9, \*, #, +, A, B, C**

Following V.25ter modifiers are ignored:

**,(comma), T, P, I, W, @**

Emergency call:

**<n>** Standardized emergency number 112 (no SIM needed)

**<mgsms>** String of GSM modifiers:

**I** Activates CLIR (Disables presentation of own number to called party)

**i** Deactivates CLIR (Enable presentation of own number to called party)

**G** Activates Closed User Group invocation for this call only

**g** Deactivates Closed User Group invocation for this call only

**<,>** Only required to set up voice call , return to Command state

Reference V.25ter

Note:

Parameter "I" and "i" only if no \*#code is within the dial string<n> is default for last number that can be dialed by ATDL.

\*# codes sent with ATD are treated as voice calls. Therefore, the Command must be terminated with a semicolon ";" See ATX Command for setting result code and call monitoring parameters.

Responses returned after dialing with ATD.

For voice call two different responses mode can be determined. TA returns "OK" immediately either after dialing was completed or after the call is established. The setting is controlled by AT+COLP. Factory default is AT+COLP=0, this cause the TA returns "OK" immediately after dialing was completed, otherwise TA will returns "OK", "BUSY", "NO DIALTONE", "NO CARRIER".

Using ATD during an active voice call:

When a user originates a second voice call while there is already an active voice call, the first call will be automatically put on hold.

The current states of all calls can be easily checked at any time by using the AT+CLCC Command.

## 2.2.4 ATDL Redial Last Telephone Number Used

### ATDL Redial Last Telephone Number Used

Execution Command

**ATDL**

Response

This Command redials the last voice and data call number used.

Note: This Command may be aborted generally by receiving an ATH Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.

If error is related to ME functionality

**+CME ERROR: <err>**

If no dialtone and (parameter setting ATX2 or ATX4)

**NO DIALTONE**

If busy and (parameter setting ATX3 or ATX4)

**BUSY**

If a connection cannot be established

**NO CARRIER**

If the remote station does not answer

**NO ANSWER**

	<p>If connection successful and non-voice call. CONNECT&lt;text&gt; TA switches to data mode When TA returns to Command mode after call release</p> <p><b>OK</b></p> <p>If successfully connected and voice call</p>
Reference V.25ter	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This Command may be aborted generally by receiving an ATH Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</li> <li>&lt;text&gt; output only if ATX&lt;value&gt; parameter setting with the &lt;value&gt; &gt;0</li> </ul>

## 2.2.5 ATE Set Command Echo Mode

ATE Set Command Echo Mode	
Execution Command <b>ATE&lt;value&gt;</b>	<p>Response</p> <p>This setting determines whether or not the TA echoes characters received from TE during Command state.</p> <p><b>OK</b></p>
Parameter	<p><b>&lt;value&gt;</b></p> <p>0 Echo mode off</p> <p>1 Echo mode on</p>
Reference V.25ter	

## 2.2.6 ATH Disconnect Existing Connection

ATH Disconnect Existing Connection	
Execution Command <b>ATH</b>	<p>Response</p> <p>Disconnect existing call by local TE from Command line and terminate call</p> <p><b>OK</b></p>
Reference V.25ter	<p><b>Note:</b> OK is issued after circuit 109(DCD) is turned off, if it was previously on.</p>

## 2.2.7 ATI Display Product Identification Information

ATI Display Product Identification Information	
--	--

Execution Command <b>ATI</b>	Response TA issues product information text  Example: <b>SIM5300E R15.51</b>  <b>OK</b>
Reference V.25ter	

## 2.2.8 +++ Switch from Data Mode or PPP Online Mode to Command Mode

<b>+++ Switch from Data Mode or PPP Online Mode to Command Mode</b>	
Execution Command <b>+++</b>	Response The +++ character sequence causes the TA to cancel the data flow over the AT interface and switch to Command mode. This allows you to enter AT Command while maintaining the data connection to the remote server. <b>OK</b>  To prevent the +++ escape sequence from being misinterpreted as data, it should comply to following sequence: No characters entered for T1 time (1 second) "+++" characters entered with no characters in between (1 second) No characters entered for T1 timer (1 second) Switch to Command mode, otherwise go to step 1.
Reference V.25ter	<b>Note:</b> To return from Command mode back to data mode: Enter ATO.

## 2.2.9 ATO Switch from Command Mode to Data Mode

<b>ATO Switch from Command Mode to Data Mode</b>	
Execution Command <b>ATO[n]</b>	Response TA resumes the connection and switches back from Command mode to data mode. <b>CONNECT</b>  If connection is not successfully resumed <b>ERROR</b>  else

TA returns to data mode from command mode CONNECT <text>

Note: <text> only if parameter setting ATX>0

Reference V.25ter

### 2.2.10 ATQ Set Result Code Presentation Mode

#### ATQ Set Result Code Presentation Mode

Execution Command

**ATQ<n>**

Response

This parameter setting determines whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting.

If <n>=0:

**OK**

If <n>=1:

**(null)**

Parameters

<n>

**0**

TA transmits result code

**1**

Result codes are suppressed and not transmitted

Reference V.25ter

### 2.2.11 ATSO Set Number of Rings before Automatically Answering the Call

#### ATSO Set Number of Rings before Automatically Answering the Call

Read Command

**ATSO?**

Response

<n>

**OK**

Write Command <b>ATS0=&lt;n&gt;</b>	Response This parameter setting determines the number of rings before auto-answer. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<n> <b>0</b> Automatic answering is disable. <b>1-255</b> Number of rings the modem will wait for before answering the phone if a ring is detected.
Reference V.25ter	<b>Note:</b> If <n> is set too high, the calling party may hang up before the call can be answered automatically.

### 2.2.12 **ATS4 Set Response Formatting Character**

<b>ATS4 Set Response Formatting Character</b>	
Read Command <b>ATS4?</b>	Response <n>  <b>OK</b>
Write Command <b>ATS4=&lt;n&gt;</b>	Response This parameter setting determines the character generated by the TA for result code and information text. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<n> <b>10</b> Response formatting character
Reference V.25ter	<b>Note:</b> Default 10 = LF. It only supports default value.

### 2.2.13 **ATS7 Set Number of Seconds to Wait for Connection Completion**

<b>ATS7 Set Number of Seconds to Wait for Connection Completion</b>
---

Read Command <b>ATS7?</b>	Response <b>&lt;n&gt;</b>  <b>OK</b>
Write Command <b>ATS7=&lt;n&gt;</b>	Response This parameter setting determines the amount of time to wait for the connection completion in case of answering or originating a call. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;n&gt;</b> <b>1-255</b> Number of seconds to wait for connection completion( <b>60</b> is the default value)
Reference V.25ter	<b>Note:</b> If called party has specified a high value for ATS0=<n>, call setup may fail. The correlation between ATS7 and ATS0 is important. Example: Call may fail if ATS7=30 and ATS0=20. ATS7 is only applicable to data call.

## 2.2.14 ATV TA Response Format

ATV TA Response Format	
Execution Command <b>ATV&lt;value&gt;</b>	Response This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses. When <value>=0 <b>0</b>  When <value>=1 <b>OK</b>
Parameters	<b>&lt;value&gt;</b> <b>0</b> Information response: <text><CR><LF> Short result code format: <numeric code><CR> <b>1</b> Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF> The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.
Reference V.25ter	



ATV1	ATV0	Description
OK	0	Acknowledges execution of a Command
CONNECT	1	A connection has been established; the DCE is moving from Command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection failed
ERROR	4	Command not recognized, Command line maximum length exceeded, parameter value invalid, or other problem with processing the Command line
NO DIALTONE	6	No dialtone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)
PROCEEDING	9	An AT command is being processed
CONNECT <text>	Manufacturer-specific	Same as CONNECT, but includes manufacturer-specific text that may specify DTE speed, line speed, error control, data compression, or other status

## 2.2.15 ATX Set CONNECT Result Code Format and Monitor Call Progress

ATX Set CONNECT Result Code Format and Monitor Call Progress	
Execution Command <b>ATX&lt;value&gt;</b>	Response This parameter setting determines whether or not the TA detected the presence of DIALTONE and busy signal and whether or not TA transmits particular result codes. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> <b>0</b> CONNECT result code only returned, DIALTONE and busy detection are both disabled. <b>1</b> CONNECT<text> result code only returned, DIALTONE and busy detection are both disabled. <b>2</b> CONNECT<text> result code returned, DIALTONE detection is enabled, busy detection is disabled. <b>3</b> CONNECT<text> result code returned, DIALTONE detection is disabled, busy detection is enabled. <b>4</b> CONNECT<text> result code returned, DIALTONE and busy

detection are both enabled.

Reference V.25ter

## 2.2.16 ATZ Reset Default Configuration

### ATZ Reset Default Configuration

Execution Command

**ATZ[<value>]**

Response

TA sets all current parameters to the user defined profile.

**OK**

If error is related to ME functionality:

**+CME ERROR: <err>**

Parameters

**<value>**

**0** Restore profile 0

**1** Restore profile 1

Reference V.25ter

Note:

The command "ATZ" can set the default value of " AT&D"," ATE"," ATQ"," ATV"," ATX"," AT+CR"," AT+CRC".

## 2.2.17 AT&D Set DTR Function Mode

### AT&D Set DTR Function Mode

Execution Command

**AT&D[<value>]**

Response

This parameter determines how the TA responds when circuit 108/2 (DTR) is changed from the ON to the OFF condition during data mode.

**OK**

If error is related to ME functionality:

**+CME ERROR: <err>**

Parameters

**<value>**

**0** TA ignores status on DTR.

**1** ON->OFF on DTR: Change to Command mode with remaining the connected call.

**2** ON->OFF on DTR: Disconnect call, change to Command mode. During state DTR = OFF is auto-answer off.

Reference V.25ter

## 2.2.18 AT+GMI Request Manufacturer Identification

AT+GMI Request Manufacturer Identification	
Test Command <b>AT+GMI=?</b>	Response <b>OK</b>
Execution Command <b>AT+GMI</b>	TA reports one or more lines of information text which permit the user to identify the manufacturer. <b>SIMCOM_Ltd</b>  <b>OK</b>
Reference V.25ter	

## 2.2.19 AT+GMM Request TA Model Identification

AT+GMM Request TA Model Identification	
Test Command <b>AT+GMM=?</b>	Response <b>OK</b>
Execution Command <b>AT+GMM</b>	TA reports one or more lines of information text which permit the user to identify the specific model of device. <b>&lt;model&gt;</b>  <b>OK</b>
Parameters	<b>&lt;model&gt;</b> Product model identification text
Reference V.25ter	

## 2.2.20 AT+GMR Request TA Revision Identification of Software Release

AT+GMR Request TA Revision Identification of Software Release	
Test Command <b>AT+GMR=?</b>	Response <b>OK</b>
Execution Command <b>AT+GMR</b>	TA reports one or more lines of information text which permit the user to identify the revision of software release. <b>Revision: &lt;revision&gt;</b>  <b>OK</b>
Parameters	<b>&lt;revision&gt;</b> Revision of software release
Reference V.25ter	

## 2.2.21 AT+GOI Request Global Object Identification

AT+GOI Request Global Object Identification	
Test Command <b>AT+GOI=?</b>	Response <b>OK</b>
Execution Command <b>AT+GOI</b>	Response TA reports one or more lines of information text which permit the user to identify the device, based on the ISO system for registering unique object identifiers. <b>&lt;Object Id&gt;</b>  <b>OK</b>
Parameters	<b>&lt;Object Id&gt;</b> Identifier of device type see X.208, 209 for the format of <Object Id>
Reference V.25ter	

## 2.2.22 AT+GSN Request TA Serial Number Identification (IMEI)

AT+GSN Request TA Serial Number Identification(IMEI)	
Test Command <b>AT+GSN=?</b>	Response <b>OK</b>
Execution Command <b>AT+GSN</b>	Response TA reports the IMEI (international mobile equipment identifier) number in information text which permit the user to identify the individual ME device. <b>&lt;sn&gt;</b>  <b>OK</b>
Parameters	<b>&lt;sn&gt;</b> IMEI of the telephone(International Mobile station Equipment Identity)
Reference V.25ter	<b>Note:</b> The serial number (IMEI) is varied by individual ME device.

## 2.2.23 AT+ICF Set TE-TA Control Character Framing

AT+ICF Set TE-TA Control Character Framing	
Test Command <b>AT+ICF=?</b>	Response <b>+ICF: (list of supported &lt;format&gt;s),(list of supported &lt;parity&gt;s)</b>  <b>OK</b>

Read Command <b>AT+ICF?</b>	Response <b>+ICF: &lt;format&gt;,&lt;parity&gt;</b>  <b>OK</b>
Write Command <b>AT+ICF=&lt;format&gt;[,&lt;parity&gt;]</b>	Response This parameter setting determines the serial interface character framing format and parity received by TA from TE. <b>OK</b>
Parameters	<p><b>&lt;format&gt;</b></p> <p><b>1</b>            8 data 0 parity 2 stop  <b>2</b>            8 data 1 parity 1 stop  <b>3</b>            8 data 0 parity 1 stop  <b>4</b>            7 data 0 parity 2 stop  <b>5</b>            7 data 1 parity 1 stop  <b>6</b>            7 data 0 parity 1 stop</p> <p><b>&lt;parity&gt;</b></p> <p><b>0</b>            odd  <b>1</b>            even  <b>3</b>            space (0)</p>
Reference V.25ter	<b>Note:</b> The Command is applied for Command state; In <format> parameter, "0 parity" means no parity;

## 2.2.24 AT+IFC Set TE-TA Local Data Flow Control

<b>AT+IFC Set TE-TA Local Data Flow Control</b>	
Test Command <b>AT+IFC=?</b>	Response <b>+IFC: (list of supported &lt;dce_by_dte&gt;),(list of supported&lt;dte_by_dce&gt;)</b>  <b>OK</b>
Read Command <b>AT+IFC?</b>	Response <b>+IFC: &lt;dce_by_dte&gt;,&lt;dte_by_dce&gt;</b>  <b>OK</b>
Write Command <b>AT+IFC=&lt;dce_by_dte&gt;,&lt;dte_by_dce&gt;</b>	Response This parameter setting determines the data flow control on the serial interface for data mode. <b>OK</b>
Parameters	<p><b>&lt;dce_by_dte&gt;</b> Specifies the method will be used by TE at receive of data from TA</p> <p><b>0</b>            No flow control  <b>1</b>            Software flow control</p>

	<p>2 Hardware flow control</p> <p><b>&lt;dte_by_dce&gt;</b> Specifies the method will be used by TA at receive of data from TE</p> <p><b>0</b> No flow control</p> <p><b>1</b> Software flow control</p> <p><b>2</b> Hardware flow control</p>
Reference V.25ter	

## 2.2.25 AT+IPR Set TE-TA Fixed Local Rate

AT+IPR Set TE-TA Fixed Local Rate	
<p>Test Command</p> <p><b>AT+IPR=?</b></p>	<p>Response</p> <p><b>+IPR: (list of supported auto detectable &lt;rate&gt;s),(list of supported fixed-only &lt;rate&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+IPR?</b></p>	<p>Response</p> <p><b>+IPR: &lt;rate&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+IPR=&lt;rate&gt;</b></p>	<p>Response</p> <p>This parameter setting determines the data rate of the TA on the serial interface. The rate of Command takes effect following the issuance of any result code associated with the current Command line.</p> <p><b>OK</b></p>
<p>Parameters</p>	<p><b>&lt;rate&gt;</b> that means baud rate per second</p> <p><b>0</b></p> <p><b>1200</b></p> <p><b>2400</b></p> <p><b>4800</b></p> <p><b>9600</b></p> <p><b>19200</b></p> <p><b>38400</b></p> <p><b>57600</b></p> <p><b>115200</b></p> <p><b>230400</b></p> <p><b>460800</b></p>
Reference V.25ter	<p><b>Note:</b></p> <p>Factory setting is AT+IPR=0 ( auto-bauding ) .</p>

### AUTO-BAUDING

Synchronization between DTE and DCE ensure that DTE and DCE are correctly synchronized and the baud rate used by the DTE is detected by the DCE (= ME). To allow the baud rate to be synchronized, simply issue an "AT" string. This is necessary when you start up the module while auto-bauding is enabled. It is recommended to wait 3 to 5 seconds before sending the first AT character. Otherwise undefined characters might be returned.

If you want to use auto-bauding and auto-answer at the same time, you can easily enable the DTE-DCE synchronization, when you activate auto-bauding first and then configure the auto-answer mode.

#### Restrictions on auto-bauding operation

The serial interface has to be operated at 8 data bits, no parity and 1 stop bit (factory setting).

Only the strings "AT" or "at" can be detected when auto-bauding is enabled.

AT+IPR=0 setting to auto-bauding will take effect after module resets.

Unsolicited Result Codes that may be issued before the ME detects the new baud rate (by receiving the first AT Command string) will be sent at the previously detected baud rate .The Unsolicited Result Codes "RDY" and so on are not indicated when you start up the ME while auto-bauding is enabled.

#### Auto-bauding and baud rate after restart

The most recently detected baud rate cannot be stored when module is powered down.

## 2.2.26 AT+HVOIC Disconnect Voice Call Only

AT+HVOIC Disconnect Voice Call Only	
Execution Command <b>AT+HVOIC</b>	Response Disconnect existing voice call by local TE from Command line and terminate call with existing PPP or CSD connection on. <b>OK</b>
Reference V.25ter	

# 3. AT Commands According to 3GPP TS 27.007

## 3.1 Overview of ATC According to 3GPP TS 27.007

Command	Description
AT+CACM	Accumulated call meter(ACM) reset or query
AT+CAMM	Accumulated call meter maximum(ACM max) set or query
AT+CAOC	Advice of charge
AT+CBST	Select bearer service type
AT+CCFC	Call forwarding number and conditions control
AT+CCWA	Call waiting control
AT+CEER	Extended error report
AT+CGMI	Request manufacturer identification
AT+CGMM	Request model identification
AT+CGMR	Request TA revision identification of software release
AT+CGSN	Request product serial number identification (identical with +GSN)
AT+CSCS	Select TE character set
AT+CSTA	Select type of address
AT+CHLD	Call hold and multiparty
AT+CIMI	Request international mobile subscriber identity
AT+CLCC	List current calls of ME
AT+CLCK	Facility lock
AT+CLIP	Calling line identification presentation
AT+CLIR	Calling line identification restriction
AT+CMEE	Report mobile equipment error
AT+COLP	Connected line identification presentation
AT+COPS	Operator selection
AT+CPAS	Phone activity status
AT+CPIN	Enter PIN
AT+CPWD	Change password
AT+CR	Service reporting control
AT+CRC	Set cellular result codes for incoming call indication



AT+CREG	Network registration
AT+CRLP	Select radio link protocol parameters
AT+CRSM	Restricted SIM access
AT+CSQ	Signal quality report
AT+VTD	Tone duration
AT+VTS	DTMF and tone generation
AT+CMUX	Multiplexer control
AT+CNUM	Subscriber number
AT+CPOL	Preferred operator list
AT+COPN	Read operator names
AT+CFUN	Set phone functionality
AT+CCLK	Clock
AT+CMUT	Mute Control
AT+CSIM	Generic SIM access
AT+CPUC	Price per unit and currency table
AT+CCWE	Call meter maximum event
AT+CBC	Battery charge
AT+CUSD	Unstructured supplementary service data
AT+CSSN	Supplementary services notification

## 3.2 Detailed Descriptions of ATC According to 3GPP TS 27.007

### 3.2.1 AT+CACM Accumulated Call Meter (ACM) Reset or Query

AT+CACM Accumulated Call Meter(ACM) Reset or Query	
Test Command <b>AT+CACM=?</b>	Response <b>OK</b>
Read Command <b>AT+CACM?</b>	Response TA returns the current value of ACM. <b>+CACM: &lt;acm&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CACM=&lt;passwd&gt;</b>	Response TA resets the Advice of Charge related accumulated call meter (ACM) value in

	<p>SIM file EF (ACM). ACM contains the total number of home units for both the current and preceding calls.</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;acm&gt;</b> String type (string should be included in quotation marks); three bytes of the current ACM value in hexa-decimal format (e.g. "00001E" indicates decimal value 30)</p> <p><b>000000 – FFFFFFFF</b></p> <p><b>&lt;passwd&gt;</b> String type (string should be included in quotation marks): <b>SIM PIN2</b></p>
Reference	3GPP TS 27.007 [13]

### 3.2.2 AT+CAMM Accumulated Call Meter Maximum (ACM max) Set or Query

AT+CAMM Accumulated Call Meter Maximum(ACM max) Set or Query	
<p>Test Command</p> <p><b>AT+CAMM=?</b></p>	<p>Response</p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CAMM?</b></p>	<p>Response</p> <p>TA returns the current value of ACM max.</p> <p><b>+CAMM: &lt;acmmax&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command</p> <p><b>AT+CAMM=&lt;acmmax&gt;[,&lt;passwd&gt;]</b></p>	<p>Response</p> <p>TA sets the Advice of Charge related accumulated call meter maximum value in SIM file EF (ACM max). ACM max contains the maximum number of home units allowed to be consumed by the subscriber.</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;acmmax&gt;</b> String type (string should be included in quotation marks); three bytes of the max. ACM value in hex-decimal format (e.g. "00001E" indicates decimal value 30)</p> <p><b>000000</b>      disable ACMmax feature</p>

000001-FFFFFF

<passwd> String type (string should be included in quotation marks)  
SIM PIN2

Reference 3GPP TS 27.007 [13]

### 3.2.3 AT+CAOC Advice of Charge

AT+CAOC Advice of Charge	
Test Command <b>AT+CAOC=?</b>	Response <b>+CAOC: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CAOC?</b>	Response <b>+CAOC: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CAOC=&lt;mode&gt;</b>	Response TA sets the Advice of Charge supplementary service function mode. If <mode>=0, TA returns the current call meter value <b>+CAOC: &lt;ccm&gt;</b>  <b>OK</b> If <mode>=1, TA deactivates the unsolicited reporting of CCM value <b>OK</b> If <mode>=2, TA activates the unsolicited reporting of CCM value <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Execution Command <b>AT+CAOC</b>	Response <b>+CAOC: &lt;ccm&gt;</b>  <b>OK</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Query CCM value <b>1</b> Deactivate the unsolicited reporting of CCM value <b>2</b> Activate the unsolicited reporting of CCM value  <b>&lt;ccm&gt;</b> String type (string should be included in quotation marks); three bytes of the current CCM value in hex-decimal format (e.g. "00001E" indicates decimal value 30); bytes are similarly coded as ACMmax value in

the SIM 000000-FFFFFF

Reference

3GPP TS 27.007 [13]

### 3.2.4 AT+CBST Select Bearer Service Type

AT+CBST Select Bearer Service Type	
Test Command <b>AT+CBST=?</b>	Response <b>+CBST: (list of supported &lt;speed&gt;s),(list of supported &lt;name&gt;s),(list of supported &lt;ce&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CBST?</b>	Response <b>+CBST: &lt;speed&gt;,&lt;name&gt;,&lt;ce&gt;</b>  <b>OK</b>
Write Command <b>AT+CBST=&lt;speed&gt;[,&lt;name&gt;[,&lt;ce&gt;]]</b>	Response TA selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;speed&gt;</b> <b>0</b> Auto-bauding (automatic selection of the speed; this setting is possible in case of 3.1kHz modern and non-transparent service) <b>4</b> 2400 bps (V.22bis) <b>5</b> 2400 bps (V.26ter) <b>6</b> 4800 bps (V.32) <b>7</b> 9600 bps (V.32) <b>12</b> 9600 bps (V.34) <b>14</b> 14400 bps (V.34) <b>68</b> 2400 bps (V.110 or X.31 flag stuffing) <b>70</b> 4800 bps (V.110 or X.31 flag stuffing) <b>71</b> 9600 bps (V.110 or X.31 flag stuffing) <b>75</b> 14400 bps (V.110 or X.31 flag stuffing) <b>79</b> 19200 bps (V.110 or X.31 flag stuffing) <b>80</b> 28800 bps (V.110 or X.31 flag stuffing) <b>81</b> 38400 bps (V.110 or X.31 flag stuffing) <b>82</b> 48000 bps (V.110 or X.31 flag stuffing) <b>83</b> 56000 bps (V.110 or X.31 flag stuffing; this setting can be used

in service	conjunction with asynchronous non-transparent UDI or RDI in order to get FTM)
<b>84</b>	64000 bps (X.31 flag stuffing; this setting can be used in conjunction with asyn-chronous non-transparent UDI service in order to get FTM)
<b>115</b>	56000 bps (bit transparent)
<b>116</b>	64000 bps (bit transparent)
<b>120</b>	32000 bps (PIAFS32k)
<b>121</b>	64000 bps (PIAFS64k)
<b>130</b>	28800 bps (multimedia)
<b>131</b>	32000 bps (multimedia)
<b>132</b>	33600 bps (multimedia)
<b>133</b>	56000 bps (multimedia)
<b>134</b>	64000 bps (multimedia)
<b>&lt;name&gt;</b>	
<b>0</b>	Data circuit asynchronous (UDI or 3.1 kHz modem)
<b>1</b>	data circuit synchronous (UDI or 3.1 kHz modem)
<b>4</b>	Data circuit asynchronous (RDI)\
<b>5</b>	data circuit synchronous (RDI)
<b>&lt;ce&gt;</b>	
<b>0</b>	Transparent
<b>1</b>	Non-transparent
<b>2</b>	Both, transparent preferred
<b>3</b>	Both, non-transparent preferred

Reference

3GPP TS 27.007 [14]

**Note:**

GSM 02.02[1]: lists the allowed combinations of the sub parameters.

### 3.2.5 AT+CCFC Call Forwarding Number and Conditions Control

#### AT+CCFC Call Forwarding Number and Conditions Control

Test Command

**AT+CCFC=?**

Response

**+CCFC: (list of supported <reason>s)**

**OK**

Write Command

**AT+CCFC=<reason>, <mode>[,<number> [,<type>,<class>,<subaddr>[, <satype>[,time]]]]]**

Response

TA controls the call forwarding supplementary service.Registration,erasure, activation, deactivation, and status query are supported.Only ,<reads> and <mode> should be entered with mode (0-2,4)

If <mode>≠2 and Command successful

**OK**

If <mode>=2 and Command successful (only in connection with <reason> 0 –3)

For registered call forwarding numbers:

when <mode>=2 and command successful:

**+CCFC:**

<status>,<class1>[,<number>,<type>[,<subaddr>,<satype>[,<time>]]]

[<CR><LF>+CCFC:

<status>,<class2>[,<number>,<type>[,<subaddr>,<satype>[,<time>]]][...]

**OK**

If no call forwarding numbers are registered (and therefore all classes are inactive):

**+CCFC: <status>, <class>**

**OK**

where <status>=0 and <class>=7

If error is related to ME functionality:

**+CME ERROR: <err>**

#### Parameters

**<reason>**

- 0** Unconditional
- 1** Mobile busy
- 2** No reply
- 3** Not reachable
- 4** All call forwarding
- 5** All conditional call forwarding

**<mode>**

- 0** Disable
- 1** Enable
- 2** Query status
- 3** Registration
- 4** Erasure

**<number>** String type (Phone number of forwarding address in format specified by <type>)

**<type>** Type of address

**<subaddr>** String type (subaddress of format specified by <satype>)

**<satype>** Type of sub-address in integer

	<p><b>&lt;class&gt;</b></p> <p><b>1</b> Voice (telephony)</p> <p><b>2</b> Data (refers to all bearer services; with &lt;mode&gt;=2 this may refer only to some bearer service if TA does not support values 16, 32, 64 and 128)</p> <p><b>3</b> Default value(1+2)</p> <p><b>4</b> Fax (facsimile services)</p> <p><b>7</b> All classes</p> <p><b>&lt;time&gt;</b> 1..30 When "no reply" is enabled or queried, this gives the time in seconds to wait before call is forwarded, default value is 20.Supported only if it is multiples of 5.</p> <p><b>&lt;status&gt;</b></p> <p><b>0</b> Not active</p> <p><b>1</b> Active</p>
Reference	
3GPP TS 27.007	

### 3.2.6 AT+CCWA Call Waiting Control

AT+CCWA Call Waiting Control	
Test Command <b>AT+CCWA=?</b>	Response <b>+CCWA: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CCWA?</b>	Response <b>+CCWA: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CCWA=&lt;n&gt;[,&lt;mode&gt;[,&lt;class&gt;]]</b>	Response TA controls the Call Waiting supplementary service. Activation, deactivation and status query are supported. If <mode>≠2 and Command successful <b>OK</b>  If <mode>=2 and Command successful <b>+CCWA: &lt;status&gt;,&lt;class1&gt;</b> <b>+CCWA: &lt;status&gt;,&lt;class2&gt;</b> <b>[...]</b>  <b>OK</b>

If error is related to ME functionality:

**+CME ERROR: <err>**

Note:

<status>=0 should be returned only if service is not active for any <class> i.e. +CCWA: 0, 7 will be returned in this case.

When mode=2, all active call waiting classes will be reported. In this mode the Command is aborted by pressing any key.

Unsolicited result code

**RING**

**+CCWA: <number>,<type>,<class>,,<CLI validity>**

Parameters

**<number>** String type (string should be included in quotation marks) phone number of calling address in format specified by <type>

**<type>** Type of address octet in integer format;

**129** Unknown type

**161** National number type

**145** International number type

**177** Network specific number

**<CLI validity>**: integer type

**0** CLI valid

**1** CLI has been withheld by the originator.

**2** CLI is not available due to interworking problems or limitations of originating network.

**<n>**

**0** Disable presentation of an unsolicited result code

**1** Enable presentation of an unsolicited result code

**<mode>** When <mode> parameter not given, network is not interrogated

**1** Enable call waiting

**2** Query status

**<class>** Is a sum of integers each representing a class of information

**1** Voice (telephony)

**2** Data (refers to all bearer services; with <mode>=2 this may refer only to some bearer service if TA does not support values 16, 32, 64 and 128)

**3** Default value(1+2)

**4** Fax (facsimile services)

**7** All classes

**16** data circuit sync

**32** data circuit async



	<b>64</b> dedicated packet access <b>128</b> dedicated PAD access  <b>&lt;status&gt;</b> <b>0</b> Not active <b>1</b> Active
Reference 3GPP TS 27.007	

### 3.2.7 AT+CEER Extended Error Report

AT+CEER Extended Error Report	
Test Command <b>AT+CEER=?</b>	Response <b>+CEER: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CEER?</b>	Response <b>+CEER: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CEER=&lt;n&gt;</b>	Response <b>OK</b>
Execution Command <b>AT+CEER</b>	Response In case of CC and SM categories: <b>+CEER: &lt;category&gt;</b>  <b>OK</b>  In case of SS category network error cause and network GSM cause. <b>+CEER: &lt;cause&gt;</b>  <b>OK</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> The reason for last call release as text code <b>1</b> The reason for last call release as number code  <b>&lt;category&gt;</b> may be <b>"No report available"</b> <b>"CC setup error"</b> <b>"CC modification error"</b> <b>"CC release"</b> <b>"SM attach error"</b> <b>"SM detach"</b>

	<p>"SM activation error"</p> <p>"SM deactivation"</p> <p>"SS network error cause"</p> <p>"SS network reject cause"</p> <p>"SS network GSM cause"</p> <p>&lt;cause&gt; Contains a digit representing code of the error cause sent by network or internally.</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.8 AT+CGMI Request Manufacturer Identification

AT+CGMI Request Manufacturer Identification	
Test Command <b>AT+CGMI=?</b>	Response <b>OK</b>
Execution Command <b>AT+CGMI</b>	Response TA returns manufacturer identification text. <b>&lt;manufacturer&gt;</b>  <b>OK</b>
Parameters	<b>&lt;manufacturer&gt;</b> The ID of manufacturer
Reference	
3GPP TS 27.007 [13]	

### 3.2.9 AT+CGMM Request Model Identification

AT+CGMM Request Model Identification	
Test Command <b>AT+CGMM=?</b>	Response <b>OK</b>
Execution Command <b>AT+CGMM</b>	Response TA returns product model identification text. <b>&lt;model&gt;</b>  <b>OK</b>
Parameters	<b>&lt;model&gt;</b> Product model identification text
Reference	
3GPP TS 27.007 [13]	

### 3.2.10 AT+CGMR Request TA Revision Identification of Software Release

<b>AT+CGMR Request TA Revision Identification of Software Release</b>	
Test Command <b>AT+CGMR=?</b>	Response <b>OK</b>
Execution Command <b>AT+CGMR</b>	Response TA returns product software version identification text. <b>Revision: &lt;revision&gt;</b>  <b>OK</b>
Parameters	<b>&lt;revision&gt;</b> Product software version identification text
Reference 3GPP TS 27.007 [13]	

### 3.2.11 AT+CGSN Request Product Serial Number Identification (Identical with +GSN)

<b>AT+CGSN Request Product Serial Number Identification (Identical with +GSN)</b>	
Test Command <b>AT+CGSN=?</b>	Response <b>OK</b>
Execution Command <b>AT+CGSN</b>	Response see +GSN <b>&lt;sn&gt;</b>  <b>OK</b>
Parameters	<b>&lt;sn&gt;</b> International mobile equipment identity (IMEI)
Reference 3GPP TS 27.007 [13]	

### 3.2.12 AT+CSCS Select TE Character Set

<b>AT+CSCS Select TE Character Set</b>	
Test Command <b>AT+CSCS=?</b>	Response <b>+CSCS: (list of supported &lt;chset&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSCS?</b>	Response <b>+CSCS: &lt;chset&gt;</b>  <b>OK</b>
Write Command <b>AT+CSCS=&lt;chset&gt;</b>	Response Sets which character set <chset> are used by the TE. The TA can then convert

	<p>character strings correctly between the TE and ME character sets.</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;chset&gt;</b></p> <p><b>"GSM"</b> GSM 7 bit default alphabet (3GPP TS 23.038);</p> <p><b>"UCS2"</b> "16-bit universal multiple-octet coded character set (ISO/IEC10646); UCS2 character strings are converted to hexadecimal numbers from 0000 to FFFF; e.g. "004100620063" equals three 16-bit characters with decimal values 65, 98 and 99</p> <p><b>"IRA"</b> International reference alphabet (ITU-T T.50)</p> <p><b>"HEX"</b> Character strings consist only of hexadecimal numbers from 00 to FF;</p>
Reference	3GPP TS 27.007 [13]

### 3.2.13 AT+CSTA Select Type of Address

AT+CSTA Select Type of Address	
<p>Test Command</p> <p><b>AT+CSTA=?</b></p>	<p>Response</p> <p><b>+CSTA: (list of supported &lt;type&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CSTA?</b></p>	<p>Response</p> <p><b>+CSTA: &lt;type&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CSTA=&lt;type&gt;</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If &lt;type&gt; is not in the parameter range:</p> <p><b>ERROR</b></p>
Parameters	<p><b>&lt;type&gt;</b> Current address type setting.Type of address octet in integer format;</p> <p><b>129</b> Unknown type</p> <p><b>161</b> National number type</p> <p><b>145</b> International number type</p> <p><b>177</b> Network specific number</p>
Reference	<p><b>Note:</b></p> <p>The ATD Command overrides this setting when a number is dialed.</p>
Reference	3GPP TS 27.007 [13]

### 3.2.14 AT+CHLD Call Hold and Multiparty

AT+CHLD Call Hold and Multiparty	
Test Command <b>AT+CHLD=?</b>	Response <b>+CHLD: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Write Command <b>AT+CHLD=&lt;n&gt;</b>	Response TA controls the supplementary services Call Hold, Multiparty and Explicit Call Transfer. Calls can be put on hold, recovered, released, added to conversation, and transferred. These supplementary services are only applicable to tele service 11 (Speech: Telephony). <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> release all held calls or set User Determined User Busy for a waiting/incoming call; if both exists then only the waiting call will be rejected <b>1</b> release all active calls and accepts the other (held or waiting) <i>Note: In the scenario: An active call, a waiting call and held call, when the active call is terminated, we will make the Waiting call as active.</i> <b>1x</b> release a specific call (x specific call number as indicated by +CLCC) <b>2</b> place all active calls (if exist) on hold and accepts the other call (held or waiting/in-coming). If only one call exists which is active, place it on hold and if only held call exists make it active call <b>2x</b> place all active calls on hold except call x with which communication is supported <sup>3</sup> adds a held call to the conversation. <b>3</b> adds a held call to the conversation.
Reference	

### 3.2.15 AT+CIMI Request International Mobile Subscriber Identity

AT+CIMI Request International Mobile Subscriber Identity	
Test Command <b>AT+CIMI=?</b>	Response <b>OK</b>

Execution Command <b>AT+CIMI</b>	Response TA returns <IMSI> for identifying the individual SIM which is attached to ME. <b>&lt;IMSI&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;IMSI&gt;</b> International Mobile Subscriber Identity (string without double quotes)
Reference	3GPP TS 27.007 [13]

### 3.2.16 AT+CLCC List Current Calls of ME

<b>AT+CLCC List Current Calls of ME</b>	
Test Command <b>AT+CLCC=?</b>	Response <b>+CLCC: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CLCC?</b>	Response <b>+CLCC: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CLCC=&lt;n&gt;</b>	Response <b>OK</b>
Execution Command <b>AT+CLCC</b>	Response TA returns a list of current calls of ME. <b>Note: If Command succeeds but no calls are available, no information response is sent to TE.</b> <b>[+CLCC: &lt;id1&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;[,&lt;number&gt;,&lt;type&gt;,&lt;alphaID&gt;]</b> <b>[&lt;CR&gt;&lt;LF&gt;+CLCC: &lt;id2&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;[,&lt;number&gt;,&lt;type&gt;,&lt;alphaID&gt;][...]]</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> Don't report a list of current calls of ME automatically when the current call status changes.

**1** Report a list of current calls of ME automatically when the current call status changes.

**<idx>**

**1..7** Call identification number

This number can be used in +CHLD command operations

**<dir>**

**0** Mobile originated (MO) call

**1** Mobile terminated (MT) call

**<stat>** State of the call:

**0** Active

**1** Held

**2** Dialing (MO call)

**3** Alerting (MO call)

**4** Incoming (MT call)

**5** Waiting (MT call)

**6** Disconnect

**<mode>** Bearer/tele service:

**0** Voice

**1** Data

**2** Fax

**<mpty>**

**0** Call is not one of multiparty (conference) call parties

**1** Call is one of multiparty (conference) call parties

**<number>** String type (string should be included in quotation marks) phone number in format specified by <type>

**<type>** Type of address

**<alphaid>** String type (string should be included in quotation marks) alphanumeric representation of <number> corresponding to the entry found in phone book.

Reference

3GPP TS 27.007 [13][14]

### 3.2.17 AT+CLCK Facility Lock

**AT+CLCK Facility Lock**

<p>Test Command <b>AT+CLCK=?</b></p>	<p>Response <b>+CLCK: (list of supported &lt;fac&gt;s)</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CLCK=&lt;fac&gt;,&lt;mode&gt;[,&lt;password&gt;[,&lt;class&gt;]]</b></p>	<p>Response</p> <p>This Command is used to lock, unlock or interrogate a ME or a network facility &lt;fac&gt;. Password is normally needed to do such actions. When querying the status of a network service (&lt;mode&gt;=2) the response line for 'not active' case (&lt;status&gt;=0) should be returned only if service is not active for any &lt;class&gt;.</p> <p>If &lt;mode&gt;≠2 and Command is successful</p> <p><b>OK</b></p> <p>If &lt;mode&gt;=2 and Command is successful</p> <p><b>+CLCK: &lt;status&gt;[,&lt;class1&gt;[&lt;CR&gt;&lt;LF&gt;+CLCK: &lt;status&gt;,&lt;class2&gt;[...]]</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;fac&gt;</b></p> <p><b>"AO"</b> BAOC (Barr All Outgoing Calls)</p> <p><b>"OI"</b> BOIC (Barr Outgoing International Calls)</p> <p><b>"AI"</b> BAIC (Barr All Incoming Calls)</p> <p><b>"IR"</b> BIC-Roam (Barr Incoming Calls when Roaming outside the home country)</p> <p><b>"OX"</b> BOIC-exHC (Barr Outgoing International Calls except to Home Country)</p> <p><b>"AB"</b> All Barring services (refer 3GPP TS 22.030 [19]) (applicable only for &lt;mode&gt;=0)</p> <p><b>"AG"</b> All outGoing barring services (refer 3GPP TS 22.030 [19]) (applicable only for &lt;mode&gt;=0)</p> <p><b>"AC"</b> Il inComing barring services (refer 3GPP TS 22.030 [19]) (applicable only for &lt;mode&gt;=0)</p> <p><b>"PS"</b> PH SIM (lock PHone to SIM/UICC card) (MT asks password when other than current SIM/UICC card inserted;MT may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p><b>"PN"</b> Network Personalization, Correspond to NCK code</p> <p><b>"PU"</b> Network subset Personalization Correspond to NSCK code</p> <p><b>"PP"</b> Service Provider Personalization Correspond to SPCK code</p> <p><b>"PC"</b> Corporate Personalization (refer 3GPP TS 22.022 [33])</p>



"SC" SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued) Correspond to PIN1 code.

"FD" SIM card or active application in the UICC (GSM or USIM) fixed dialling memory feature (if PIN2 authentication has not been done during the current session, PIN2 is required as <passwd>)

<mode>

0 unlock

1 lock

2 query status

<passwd> String type (Shall be the same as password specified for the facility from the MT user interface or with command Change Password +CPWD)

<class>

1 Voice (telephony)

2 Data refers to all bearer services; with <mode>=2 this may refer only to some bearer service if TA does not support values 16, 32, 64 and 128)

4 Fax (facsimile services)

7 All classes

<status>

0 Not active

1 Active

Reference  
3GPP TS 27.007 [14]

Note:  
CME errors if SIM not inserted or PIN is not entered.

### 3.2.18 AT+CLIP Calling Line Identification Presentation

AT+CLIP Calling Line Identification Presentation	
Test Command AT+CLIP=?	Response +CLIP: (list of supported <n>s)  OK
Read Command AT+CLIP?	Response +CLIP: <n>, <m>  OK

	<p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command  <b>AT+CLIP=&lt;n&gt;</b></p>	<p>Response</p> <p>TA enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p> <p>Unsolicited Result Code</p> <p>When the presentation of the CLI at the TE is enabled (and calling subscriber allows), an unsolicited result code is returned after every RING (or +CRING: &lt;tyn pe&gt;) at a mobile terminating call.</p> <p><b>+CLIP: &lt;number&gt;,&lt;type&gt;[,&lt;subaddr&gt;,&lt;satype&gt;,&lt;alphald&gt;,&lt;CLI validity&gt;]</b></p>
<p>Parameters</p>	<p><b>&lt;number&gt;</b> String type (string should be included in quotation marks) phone number of calling address in format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b> Type of address octet in integer format;</p> <p><b>129</b> Unknown type</p> <p><b>161</b> National number type</p> <p><b>145</b> International number type</p> <p><b>177</b> Network specific number</p> <p><b>&lt;subaddr&gt;</b> String type (subaddress of format specified by &lt;satype&gt;)</p> <p><b>&lt;satype&gt;</b> Integer type (type of subaddress)</p> <p><b>&lt;alphald&gt;</b> String type (string should be included in quotation marks) alphanumeric representation of &lt;number&gt; corresponding to the entry found in phone book.</p> <p><b>&lt;CLI validity&gt;</b></p> <p><b>0</b> CLI valid</p> <p><b>1</b> CLI has been withheld by the originator.</p> <p><b>2</b> CLI is not available due to interworking problems or limitations of originating network.</p> <p><b>&lt;n&gt;</b></p> <p><b>0</b> Disable +CLIP notification.</p> <p><b>1</b> Enable +CLIP notification.</p> <p><b>&lt;m&gt;</b></p>

	<b>0</b>	CLIP not provisioned
	<b>1</b>	CLIP provisioned
	<b>2</b>	unknown (e.g. no network, etc.)
Reference		

### 3.2.19 AT+CLIR Calling Line Identification Restriction

AT+CLIR Calling Line Identification Restriction	
Test Command <b>AT+CLIR=?</b>	Response <b>+CLIR: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CLIR?</b>	Response <b>+CLIR: &lt;n&gt;, &lt;m&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CLIR=&lt;n&gt;</b>	Response TA restricts or enables the presentation of the CLI to the called party when originating a call. The Command overrides the CLIR subscription (default is restricted or allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite Command. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;n&gt;</b> (parameter sets the "Call line identification" adjustment for outgoing calls:): <b>0</b> presentation indicator is used according to the subscription of the CLIR service <b>1</b> CLIR invocation <b>2</b> CLIR suppression(default)  <b>&lt;m&gt;</b> (parameter shows the subscriber CLIR service status in network): <b>0</b> CLIR not provisioned <b>1</b> CLIR provisioned in permanent mode

	<b>2</b>	Unknown (e.g. no network, etc.)
	<b>3</b>	CLIR temporary mode presentation restricted
	<b>4</b>	CLIR temporary mode presentation allowed
Reference		

### 3.2.20 AT+CMEE Report Mobile Equipment Error

AT+CMEE Report Mobile Equipment Error	
Test Command <b>AT+CMEE=?</b>	Response <b>+CMEE: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CMEE?</b>	Response <b>+CMEE: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CMEE=&lt;n&gt;</b>	Response TA disables or enables the use of result code <b>+CME ERROR: &lt;err&gt;</b> as an indication of an error relating to the functionality of the ME. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR:&lt;err&gt;</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> Disable <b>+CME ERROR: &lt;err&gt;</b> result code and use <b>ERROR</b> instead. <b>1</b> Enable <b>+CME ERROR: &lt;err&gt;</b> result code and use numeric <b>&lt;err&gt;</b> <b>2</b> Enable <b>+CME ERROR: &lt;err&gt;</b> result code and use verbose <b>&lt;err&gt;</b> values
Reference 3GPP TS 27.007 [13]	

### 3.2.21 AT+COLP Connected Line Identification Presentation

AT+COLP Connected Line Identification Presentation
--

<p>Test Command <b>AT+COLP=?</b></p>	<p>Response <b>+COLP: (list of supported &lt;n&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command <b>AT+COLP?</b></p>	<p>Response <b>+COLP: &lt;n&gt;,&lt;m&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command <b>AT+COLP=&lt;n&gt;</b></p>	<p>Response</p> <p>TA enables or disables the presentation of the COL (Connected Line) at the TE for a mobile originated call. It has no effect on the execution of the supplementary service COLR in the network.</p> <p>Intermediate result code is returned from TA to TE before any +CR or V.25ter responses.</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Intermediate result code</p> <p>When enabled (and called subscriber allows), an intermediate result code is returned before any +CR or V.25ter responses: <b>+COLP: &lt;number&gt;,&lt;type&gt;[,&lt;subaddr&gt;,&lt;satype&gt; ,&lt;alphald&gt;]</b></p>
<p>Parameters</p>	<p><b>&lt;n&gt;</b> (parameter sets/shows the result code presentation status in the TA):</p> <p><b>0</b> Disable +COLP notification</p> <p><b>1</b> Enable +COLP notification</p> <p><b>&lt;m&gt;</b> (parameter shows the subscriber COLP service status in the network):</p> <p><b>0</b> COLP not provisioned</p> <p><b>1</b> COLP provisioned</p> <p><b>2</b> Unknown (e.g. no network, etc.)</p> <p><b>&lt;number&gt;</b> String type (string should be included in quotation marks) phone number of format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b> Type of address octet in integer format;</p> <p><b>129</b> Unknown type</p> <p><b>161</b> National number type</p> <p><b>145</b> International number type</p> <p><b>177</b> Network specific number</p>

	<p><b>&lt;subaddr&gt;</b> String type (string should be included in quotation marks) sub address of format specified by &lt;satype&gt;</p> <p><b>&lt;satype&gt;</b> Type of sub address octet in integer format (refer GSM 04.08 [8] sub clause 10.5.4.8)</p> <p><b>&lt;alphaid&gt;</b> String type (string should be included in quotation marks) alphanumeric representation of &lt;number&gt; corresponding to the entry found in phone book.</p>
Reference	
3GPP TS 27.007	

### 3.2.22 AT+COPS Operator Selection

AT+COPS Operator Selection	
<p>Test Command</p> <p><b>AT+COPS=?</b></p>	<p>Response</p> <p>TA returns a list of quadruplets, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network, networks referenced in SIM, and other networks.</p> <p><b>+COPS: (list of supported&lt;stat&gt;,long alphanumeric&lt;oper&gt;,short alphanumeric &lt;oper&gt;,numeric &lt;oper&gt;)s[,,(list of supported &lt;mode&gt;s), (list of supported &lt;format&gt;s)]</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Read Command</p> <p><b>AT+COPS?</b></p>	<p>Response</p> <p>TA returns the current mode and the currently selected operator. If no operator is selected, &lt;format&gt; and &lt;oper&gt; are omitted.</p> <p><b>+COPS: &lt;mode&gt;[,&lt;format&gt;[,&lt;oper&gt;[,&lt;Act&gt;]]]</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>

<p>Write Command</p> <p><b>AT+COPS=&lt;mode&gt;,[&lt;format&gt;],[&lt;oper&gt;,[&lt;AcT&gt;]]]</b></p>	<p>Response</p> <p>TA forces an attempt to select and register the GSM network operator. If the selected operator is not available, no other operator shall be selected (except &lt;mode&gt;=4). The selected operator name format shall apply to further read commands (+COPS?).</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;stat&gt;</b></p> <p><b>0</b> Unknown Networks</p> <p><b>1</b> Network Available</p> <p><b>2</b> Current(Registered)</p> <p><b>3</b> Forbidden Network</p> <p><b>&lt;mode&gt;</b></p> <p><b>0</b> Automatic mode; &lt;oper&gt; field is ignored</p> <p><b>1</b> Manual (&lt;oper&gt; field shall be present, and &lt;AcT&gt; optionally)</p> <p><b>2</b> manual deregister from network</p> <p><b>3</b> It sets &lt;format&gt; value. In this case &lt;format&gt; becomes a mandatory input</p> <p><b>4</b> Manual/automatic (&lt;oper&gt; field shall be present); if manual selection fails, automatic mode (&lt;mode&gt;=0) is entered</p> <p><b>&lt;format&gt;</b></p> <p><b>0</b> Long format alphanumeric &lt;oper&gt;</p> <p><b>1</b> Short format alphanumeric &lt;oper&gt;</p> <p><b>2</b> Numeric &lt;oper&gt;; GSM Location Area Identification number</p> <p><b>&lt;oper&gt;</b> Refer to [27.007] operator in format as per &lt;format&gt;</p> <p><b>&lt;AcT&gt;</b></p> <p><b>0</b> GSM</p> <p><b>2</b> UMTS</p>
<p>Reference</p> <p>3GPP TS 27.007 [14]</p>	

### 3.2.23 AT+CPAS Phone Activity Status

#### AT+CPAS Phone Activity Status

Test Command <b>AT+CPAS=?</b>	Response <b>+CPAS: (list of supported &lt;pas&gt;s)</b>  <b>OK</b>
Execution Command <b>AT+CPAS</b>	Response TA returns the activity status of ME. <b>+CPAS: &lt;pas&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;pas&gt;</b> <b>0</b> Ready (MT allows commands from TA/TE) <b>1</b> Unavailable(MT does not allow commands from TA/TE) <b>2</b> Unknown (MT is not guaranteed to respond to instructions) <b>3</b> Ringing (MT is ready for commands from TA/TE, but the ringer is active) <b>4</b> Call in progress (MT is ready for commands from TA/TE, but a call is in progress) <b>5</b> Asleep(MT is unable to process commands from TA/TE because it is in a low functionality state)
Reference 3GPP TS 27.007 [13]	

### 3.2.24 AT+CPIN Enter PIN

<b>AT+CPIN Enter PIN</b>	
Test Command <b>AT+CPIN=?</b>	Response <b>OK</b>
Read Command <b>AT+CPIN?</b>	Response TA returns an alphanumeric string indicating whether some password is required or not. <b>+CPIN: &lt;code&gt;</b>  <b>OK</b>
Write Command <b>AT+CPIN=&lt;pin&gt;[,&lt;new pin&gt;]</b>	Response TA stores a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <new pin>, is used to replace the old pin in the SIM. <b>OK</b>



	<p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;code&gt;</b></p> <p><b>READY</b> MT is not pending for any password</p> <p><b>SIM PIN</b> MT is waiting SIM PIN to be given</p> <p><b>SIM PUK</b> MT is waiting for SIM PUK to be given</p> <p><b>PH_SIM PIN</b> ME is waiting for phone to SIM card (antitheft)</p> <p><b>PH_SIM PUK</b> ME is waiting for SIM PUK (antitheft)</p> <p><b>SIM PIN2</b> PIN2, e.g. for editing the FDN book possible only if preceding Command was acknowledged with +CME ERROR:17</p> <p><b>SIM PUK2</b> Possible only if preceding Command was acknowledged with error +CME ERROR: 18.</p> <p><b>&lt;pin&gt;</b> String type; password</p> <p><b>&lt;new pin&gt;</b> String type; If the PIN required is SIM PUK or SIMPUK2: new password</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.25 AT+CPWD Change Password

AT+CPWD Change Password	
<p>Test Command  <b>AT+CPWD=?</b></p>	<p>Response</p> <p>TA returns a list of pairs which present the available facilities and the maximum length of their password.</p> <p><b>+CPWD:list of supported(&lt;fac&gt;,&lt;pwdlength&gt;)s</b></p> <p><b>OK</b></p>
<p>Write Command  <b>AT+CPWD=&lt;fac&gt;,&lt;oldpwd&gt;,&lt;newpwd&gt;</b></p>	<p>Response</p> <p>TA sets a new password for the facility lock function.</p> <p><b>OK</b></p>
Parameters	<p><b>&lt;pwdlength&gt;</b> Integer max. length of password</p> <p><b>&lt;fac&gt;</b></p> <p><b>"AO"</b> "BAOC (Barr All Outgoing Calls)</p> <p><b>"OI"</b> BOIC (Barr Outgoing International Calls)</p> <p><b>"OX"</b> BOIC-exHC (Barr Outgoing International Calls except to Home Country)</p> <p><b>"AI"</b> BAIC (Barr All Incoming Calls)</p> <p><b>"IR"</b> BIC-Roam (Barr Incoming Calls when Roaming outside the home country)</p> <p><b>"AB"</b> All Barring services</p>

	<p><b>"P2"</b> SIM PIN2</p> <p><b>"SC"</b> SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued) Correspond to PIN1 code.</p> <p><b>&lt;oldpwd&gt;</b> String type (string should be included in quotation marks): password specified for the facility from the user interface or with command. If an old password has not yet been set, &lt;oldpwd&gt; is not to enter.</p> <p><b>&lt;newpwd&gt;</b> String type (string should be included in quotation marks): new password</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.26 AT+CR Service Reporting Control

AT+CR Service Reporting Control	
Test Command <b>AT+CR=?</b>	Response <b>+CR: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CR?</b>	Response <b>+CR: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CR=&lt;mode&gt;</b>	Response TA controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE at a call set up. <b>OK</b>  Intermediate result code If enabled, an intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) is transmitted. <b>+CR:&lt;serv&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Disable reporting <b>1</b> Enable reporting

	<p><b>&lt;serv&gt;</b></p> <p><b>ASYNC</b> Asynchronous transparent</p> <p><b>SYNC</b> Synchronous transparent</p> <p><b>REL ASYNC</b> Asynchronous non-transparent</p> <p><b>REL SYNC</b> Synchronous non-transparent</p> <p><b>GPRS</b> For GPRS</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.27 AT+CRC Set Cellular Result Codes for Incoming Call Indication

AT+CRC Set Cellular Result Codes for Incoming Call Indication	
Test Command <b>AT+CRC=?</b>	Response <b>+CRC: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CRC?</b>	Response <b>+CRC: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CRC=&lt;mode&gt;</b>	Response TA controls whether or not the extended format of incoming call indication is used. <b>OK</b>  Unsolicited Result Code When enabled, an incoming call is indicated to the TE with unsolicited result code <b>+CRING: &lt;type&gt;</b> instead of the normal RING.
Parameters	<p><b>&lt;type&gt;</b></p> <p><b>ASYNC</b> Asynchronous transparent</p> <p><b>SYNC</b> Synchronous transparent</p> <p><b>REL ASYNC</b> Asynchronous non-transparent</p> <p><b>REL SYNC</b> Synchronous non-transparent</p> <p><b>FAX</b> Facsimile</p> <p><b>VOICE</b> Voice</p> <p><b>&lt;mode&gt;</b></p> <p><b>0</b> Disable extended format</p> <p><b>1</b> Enable extended format</p> <p>Omitted Use previous value</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.28 AT+CREG Network Registration

AT+CREG Network Registration	
Test Command <b>AT+CREG=?</b>	Response <b>+CREG: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CREG?</b>	Response TA returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <lac> and <ci> are returned only when <n>=2 and ME is registered in the network. The last parameter <AcT> is controlled by "AT+CSACT" <b>+CREG: &lt;n&gt;,&lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;[,&lt;AcT&gt;]]</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CREG=[&lt;n&gt;]</b>	Response TA controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the ME network registration status. <b>OK</b>  Unsolicited Result Code If <n>=1 and there is a change in the MT network registration status <b>+CREG: &lt;stat&gt;</b> If <n>=2 and there is a change in the MT network registration status or a change of the network cell: <b>+CREG: &lt;stat&gt;[, &lt;lac&gt;,&lt;ci&gt;[,&lt;AcT&gt;]]</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> Disable network registration unsolicited result code <b>1</b> Enable network registration unsolicited result code+CREG: <stat> <b>2</b> Enable network registration unsolicited result code with location information +CREG: <stat>[,<lac>,<ci>]  <b>&lt;stat&gt;</b> <b>0</b> Not registered, MT is not currently searching a new operator to register to <b>1</b> Registered, home network <b>2</b> Not registered, but MT is currently searching a new operator

	<p>to register to</p> <p><b>3</b> Registration denied</p> <p><b>4</b> Unknown</p> <p><b>5</b> Registered, roaming</p> <p><b>&lt;lac&gt;</b> String type (string should be included in quotation marks); two byte location area code in hexadecimal format</p> <p><b>&lt;ci&gt;</b> String type (string should be included in quotation marks); two byte cell ID in hexadecimal format</p>
Reference	3GPP TS 27.007 [13]

### 3.2.29 AT+CRLP Select Radio Link Protocol Parameters

AT+CRLP Select Radio Link Protocol Parameters	
<p>Test Command</p> <p><b>AT+CRLP=?</b></p>	<p>Response</p> <p>TA returns values supported. RLP versions 0 and 1 share the same parameter set.</p> <p><b>+CRLP: (list of supported &lt;iws&gt;s),(list of supported &lt;mws&gt;s),(list of supported &lt;T1&gt;s),(list of supported &lt;N2&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CRLP?</b></p>	<p>Response</p> <p>TA returns current settings for RLP version. RLP versions 0 and 1 share the same parameter set.</p> <p><b>+CRLP: &lt;iws&gt;,&lt;mws&gt;,&lt;T1&gt;,&lt;N2&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CRLP=[&lt;iws&gt;,&lt;mws&gt;,&lt;T1&gt;,&lt;N2&gt;]</b></p>	<p>Response</p> <p>TA sets radio link protocol (RLP) parameters used when non-transparent data calls are setup.</p> <p><b>OK</b></p>
Parameters	<p><b>&lt;iws&gt;</b></p> <p><b>0-61</b> Interworking window size (IWF to MS)</p> <p><b>&lt;mws&gt;</b></p> <p><b>0-61</b> Mobile window size (MS to IWF)</p> <p><b>&lt;T1&gt;</b></p> <p><b>39-255</b> Acknowledgment timer T1 in 10 ms units</p>

	<p><b>&lt;N2&gt;</b>  <b>1-255</b>            Retransmission attempts N2</p>
Reference 3GPP TS 27.007 [13]	SIMCom redefined the range of values used by the parameters.

### 3.2.30 AT+CRSM Restricted SIM Access

AT+CRSM Restricted SIM Access	
Test Command <b>AT+CRSM=?</b>	Response <b>OK</b>
Write Command <b>AT+CRSM=&lt;Command&gt;[,&lt;fileid&gt;[,&lt;P1&gt;,&lt;P2&gt;,&lt;P3&gt;[,&lt;data&gt;]]]</b>	<p>Response  <b>+CRSM: &lt;sw1&gt;, &lt;sw2&gt; [,&lt;response&gt;]</b>   <b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;Command&gt;</b>  <b>176</b>            READ BINARY  <b>178</b>            READ RECORD  <b>192</b>            GET RESPONSE  <b>214</b>            UPDATE BINARY  <b>220</b>            UPDATE RECORD  <b>242</b>            STATUS</p> <p>All other values are reserved; refer GSM 11.11.</p> <p><b>&lt;fileid&gt;</b> Integer type; this is the identifier for an elementary data file on SIM. Mandatory for every Command except STATUS</p> <p><b>&lt;P1&gt;,&lt;P2&gt;,&lt;P3&gt;</b> Integer type, range 0 – 255  Parameters to be passed on by the ME to the SIM; refer GSM 11.11.</p> <p><b>&lt;data&gt;</b> Information which shall be written to the SIM (hex-decimal character format)</p> <p><b>&lt;sw1&gt;, &lt;sw2&gt;</b> Integer type, range 0 - 255  Status information from the SIM about the execution of the actual Command. These parameters are delivered to the TE in both cases, on successful or failed execution of the Command; refer GSM 11.11.</p> <p><b>&lt;response&gt;</b> Response of a successful completion of the Command previously issued (hexadecimal character format)</p>

Reference  
3GPP TS 27.007  
GSM 11.11

### 3.2.31 AT+CSQ Signal Quality Report

AT+CSQ Signal Quality Report	
Test Command <b>AT+CSQ=?</b>	Response <b>+CSQ: (list of supported &lt;rssis&gt;),(list of supported &lt;bers&gt;)</b>  <b>OK</b>
Execution Command <b>AT+CSQ</b>	Response <b>+CSQ: &lt;rssis&gt;,&lt;bers&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Execution Command returns received signal strength indication <rssis> and channel bit error rate <bers> from the ME. Test Command returns values supported by the TA.
Parameters	<b>&lt;rssis&gt;</b> <b>0</b> -115 dBm or less <b>1</b> -111 dBm <b>2...30</b> -110... -54 dBm <b>31</b> -52 dBm or greater <b>99</b> not known or not detectable  <b>&lt;bers&gt;</b> (in percent): <b>0...7</b> As RXQUAL values in the table in GSM 05.08 [20] subclause 7.2.4 <b>99</b> Not known or not detectable
Reference	3GPP TS 27.007 [13]

### 3.2.32 AT+VTD Tone Duration

AT+VTD Tone Duration	
Test Command <b>AT+VTD=?</b>	Response <b>+VTD: (list of supported &lt;n&gt;s)</b>  <b>OK</b>

Read Command <b>AT+VTD?</b>	Response <b>+VTD: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+VTD=&lt;n&gt;</b>	Response This command refers to an integer <n> that defines the length of tones emitted as a result of the +VTS command. This does not affect the D command. <b>OK</b>
Parameters	<b>&lt;n&gt;</b> <b>0-255</b> Duration of the tone in 1/10 seconds
Reference 3GPP TS 27.007 [13]	

### 3.2.33 AT+VTS DTMF and Tone Generation

AT+VTS DTMF and Tone Generation	
Test Command <b>AT+VTS=?</b>	Response <b>+VTS: (list of supported &lt;dtmf&gt;s),(list of supported &lt;duration&gt;s)</b>  <b>OK</b>
Write Command Generate tone Duration is set by +VTD <b>AT+VTS=&lt;dtmf-string&gt;</b> <b>AT+VTS=&lt;dtmf&gt;,{&lt;dtmf&gt;,&lt;duration&gt;}</b>	Response This Command allows the transmission of DTMF tones and arbitrary tones in voice mode. These tones may be used (for example) when announcing the start of a recording period. Note: D is used only for dialing. <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> <i>Note: The Command is writing only.</i>
Parameters	<b>&lt;dtmf-string&gt;</b> Which has a max length of 20 characters, must be entered between double quotes ("") and consists of combinations of the following separated by commas. But a single character does not require quotes. 1) <b>&lt;dtmf&gt;</b> A single ASCII characters in the set <b>0-9, #, *, A-D</b> . This is interpreted as a sequence of DTMF tones whose duration is set by the +VTD Command. 2) <b>{&lt;dtmf&gt;, &lt;duration&gt;}</b> This is interpreted as a DTMF tone whose duration is determined by <duration>.  <b>&lt;duration&gt;</b> Duration of the tone in 1/10 seconds range: <b>0-255</b>
Reference 3GPP TS 27.007 [13]	



### 3.2.34 AT+CMUX Multiplexer Control

AT+CMUX Multiplexer Control	
Test Command <b>AT+CMUX=?</b>	Response <b>+CMUX: (list of supported &lt;mode&gt;s),(list of supported &lt;subset&gt;s), (&lt;port_speed&gt;s),(list of supported &lt;N1&gt;s),(list of supported &lt;T1&gt;s),(list of supported &lt;N2&gt;s),(list of supported&lt;T2&gt;s)</b> OK
Read Command <b>AT+CMUX?</b>	Response: <b>+CMUX:[&lt;mode&gt;[,&lt;subset&gt;[,&lt;port_speed&gt;[,&lt;N1&gt;[,&lt;T1&gt;[,&lt;N2&gt;[,&lt;T2&gt;]]]]]]]</b>  OK
Write Command <b>AT+CMUX=&lt;mode&gt;</b>	Response If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;mode&gt;</b> Multiplexer transparency mechanism</p> <p><b>0</b> Basic option</p> <p><b>&lt;subset&gt;</b> The way in which the multiplexer control channel is set up</p> <p><b>0</b> UIH frames used only</p> <p><b>&lt;port_speed&gt;</b> Transmission rate</p> <p><b>1</b> 9600 bits/t</p> <p><b>2</b> 19200 bits/t</p> <p><b>3</b> 38400 bits/t</p> <p><b>4</b> 57600 bits/t</p> <p><b>5</b> 115200 bit/s</p> <p><b>6</b> 230400 bits/t</p> <p><b>7</b> 1 Mbit/s</p> <p>Proprietary values, available if MUX NEW PORT SPEED FTR is activated</p> <p><b>&lt;N1&gt;</b> Maximum frame size</p> <p><b>1-1509</b> currently support</p> <p><b>&lt;T1&gt;</b> Acknowledgement timer in units of ten milliseconds</p> <p><b>1-255</b></p> <p><b>&lt;N2&gt;</b> Maximum number of re-transmissions</p> <p><b>0-5</b></p>

	<p><b>&lt;T2&gt;</b> Max Response Timer for the multiplexer control channel in units of ten milliseconds</p> <p><b>2-255</b></p>																		
<p>Reference</p> <p>3GPP TS 27.007 [13]</p>	<p>Note:</p> <p>The multiplexing transmission rate is according to the current serial baud rate. It is recommended to enable multiplexing protocol under 115200 bit/s baud rate</p> <p>Multiplexer control channels are listed as follows:</p> <table border="1"> <thead> <tr> <th>Channel</th> <th>NumberType</th> <th>DLCI</th> </tr> </thead> <tbody> <tr> <td>None</td> <td>Multiplexer Control</td> <td>0</td> </tr> <tr> <td>1</td> <td>3GPP TS 27.007 and 005</td> <td>1</td> </tr> <tr> <td>2</td> <td>3GPP TS 27.007 and 005</td> <td>2</td> </tr> <tr> <td>3</td> <td>3GPP TS 27.007 and 005</td> <td>3</td> </tr> <tr> <td>4</td> <td>3GPP TS 27.007 and 005</td> <td>4</td> </tr> </tbody> </table>	Channel	NumberType	DLCI	None	Multiplexer Control	0	1	3GPP TS 27.007 and 005	1	2	3GPP TS 27.007 and 005	2	3	3GPP TS 27.007 and 005	3	4	3GPP TS 27.007 and 005	4
Channel	NumberType	DLCI																	
None	Multiplexer Control	0																	
1	3GPP TS 27.007 and 005	1																	
2	3GPP TS 27.007 and 005	2																	
3	3GPP TS 27.007 and 005	3																	
4	3GPP TS 27.007 and 005	4																	

### 3.2.35 AT+CNUM Subscriber Number

AT+CNUM Subscriber Number	
<p>Test Command</p> <p><b>AT+CNUM=?</b></p>	<p>Response</p> <p><b>OK</b></p>
<p>Execution Command</p> <p><b>AT+CNUM</b></p>	<p>Response</p> <p><b>+CNUM: [&lt;alpha1&gt;,&lt;number1&gt;,&lt;type1&gt;[,&lt;speed&gt;,&lt;service&gt;]</b>  <b>[&lt;CR&gt;&lt;LF&gt;+CNUM:[&lt;alpha2&gt;,&lt;number2&gt;,&lt;type2&gt;[,&lt;speed&gt;,&lt;service&gt;]</b>  <b>[...]]</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;alphax&gt;</b> Optional alphanumeric string associated with <i>&lt;numberx&gt;</i>; used character set should be the one selected with Command Select TE Character Set +CSCS</p> <p><b>&lt;numberx&gt;</b> String type (string should be included in quotation marks) phone number of format specified by <i>&lt;typex&gt;</i></p> <p><b>&lt;typex&gt;</b> Type of address octet in integer format (refer GSM04.08[8] subclause 10.5.4.7)</p> <p><b>&lt;speed&gt;</b> As defined by the +CBST Command</p> <p><b>&lt;service&gt;</b> (service related to the phone number:)</p>

	<b>0</b>	Asynchronous modem
	<b>1</b>	Synchronous modem
	<b>2</b>	PAD Access (asynchronous)
	<b>3</b>	Packet Access (synchronous)
	<b>4</b>	Voice
	<b>5</b>	Fax
Reference	3GPP TS 27.007 [13]	

### 3.2.36 AT+CPOL Preferred Operator List

AT+CPOL Preferred Operator List	
Test Command <b>AT+CPOL=?</b>	Response <b>+CPOL: (list of supported &lt;index&gt;s),(list of supported &lt;format&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CPOL?</b>	Response <b>+CPOL:</b> <index1>,<format>,<oper1>[,<GSM_Act1>,<GSM_Compact_Act1>,<UTRAN_Act1>][<CR><LF> <b>+CPOL:</b> <index2>,<format>,<oper2>[,<GSM_Act2>,<GSM_Compact_Act2>,<UTRAN_Act2>] [...]  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CPOL=[&lt;index&gt;][,&lt;format&gt;[,&lt;oper&gt;[,&lt;GSM_Act&gt;,&lt;GSM_Compact_Act&gt;,&lt;UTRAN_Act&gt;,&lt;EUTRAN_Act&gt; ]]]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;index&gt;</b> Integer type. order number of operator in SIM preferred operator list  <b>&lt;format&gt;</b> Indicates whether alphanumeric or numeric format used (see +COPS Command) <b>0</b> Long format alphanumeric <oper> <b>1</b> Short format alphanumeric <oper> <b>2</b> Numeric <oper>  <b>&lt;oper&gt;</b> String type(string should be included in quotation marks)

	<p><b>&lt;GSM_Act&gt;</b> GSM access technology</p> <p><b>0</b> access technology not selected</p> <p><b>1</b> access technology selected</p> <p><b>&lt;GSM_Compact_Act&gt;</b> GSM compact access technology</p> <p><b>0</b> access technology not selected</p> <p><b>1</b> access technology selected</p> <p><b>&lt;UTRAN_Act&gt;</b> UTRAN access technology</p> <p><b>0</b> access technology not selected</p> <p><b>1</b> access technology selected</p> <p><b>&lt;EUTRAN_Act&gt;</b> EUTRAN access technology</p> <p><b>0</b> access technology not selected</p> <p><b>1</b> access technology selected</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.37 AT+COPN Read Operator Names

AT+COPN Read Operator Names	
Test Command	Response
<b>AT+COPN=?</b>	<b>OK</b>
Execution Command	Response
<b>AT+COPN</b>	<p><b>+COPN: &lt;numeric1&gt;,&lt;alpha1&gt;</b></p> <p><b>[&lt;CR&gt;&lt;LF&gt;+COPN: &lt;numeric2&gt;,&lt;alpha2&gt;</b></p> <p><b>[...]]</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;numericn&gt;</b> String type (string should be included in quotation marks): operator in numeric format (see +COPS)</p> <p><b>&lt;alphan&gt;</b> String type (string should be included in quotation marks): operator in long alphanumeric format (see +COPS)</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.38 AT+CFUN Set Phone Functionality

AT+CFUN Set Phone Functionality	
Test Command <b>AT+CFUN=?</b>	Response <b>+CFUN: (list of supported &lt;fun&gt;s),(list of supported &lt;rst&gt;s)</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Read Command <b>AT+CFUN?</b>	Response <b>+CFUN: &lt;fun&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CFUN=&lt;fun&gt;[,&lt;rst&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;fun&gt;</b> <b>0</b> Minimum functionality <b><u>1</u></b> Full functionality (Default) <b>4</b> Disable phone both transmit and receive RF circuits.  <b>&lt;rst&gt;</b> <b>0</b> Do not reset MT before resetting it to <fun> power level. (default) <b>1</b> Reset the MT before setting it to <fun> power level.
Reference 3GPP TS 27.007 [13]	<b>Note:</b> Minimum functionality mode (AT+CFUN=0) and RF disabled functionality mode (AT+CFUN=4) cannot be switched to each other. The <fun> power level will be written to flash except minimum functionality. AT+CFUN=1,1 can be used to reset module purposely at minimum/full functionality mode. Response string "OK" will be returned after module resets if baud rate is set to fixed baud rate.

### 3.2.39 AT+CCLK Clock

AT+CCLK Clock	
Test Command <b>AT+CCLK=?</b>	Response <b>OK</b>
Read Command <b>AT+CCLK?</b>	Response <b>+CCLK: &lt;time&gt;</b>

	<p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command <b>AT+CCLK=&lt;time&gt;</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;time&gt;</b> String type(string should be included in quotation marks) value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits),month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -47...+48). E.g. 6th of May 2010, 00:01:52 GMT+2 hours equals to "10/05/06,00:01:52+08".</p>
<p>Reference 3GPP TS 27.007 [13]</p>	

### 3.2.40 AT+CMUT Mute Control

AT+CMUT Mute Control	
<p>Test Command <b>AT+CMUT=?</b></p>	<p>Response <b>+CMUT: (list of supported &lt;n&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command <b>AT+CMUT?</b></p>	<p>Response <b>+CMUT: &lt;n&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command <b>AT+CMUT=&lt;n&gt;</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
Parameter	<p><b>&lt;n&gt;</b></p> <p><u>0</u>            Mute off</p> <p><b>1</b>            Mute on</p>
<p>Reference 3GPP TS 27.007 [13]</p>	<p>Note Only during a call this command can be set successfully.</p>

### 3.2.41 AT+CSIM Generic SIM Access

AT+CSIM Generic SIM Access	
Test Command <b>AT+CSIM=?</b>	Response <b>OK</b>
Write Command <b>AT+CSIM=&lt;length&gt;,&lt;Command&gt;</b>	Response <b>+CSIM: &lt;length&gt;,&lt;response&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;length&gt;</b> Integer type: length of characters sent to the TE in <Command> or <response> (i.e. twice the number of octets in the raw data).  <b>&lt;Command&gt;</b> String type(string should be included in quotation marks): hex format: GSM 11.11 SIM Command sent from the ME to the SIM.  <b>&lt;response&gt;</b> String type(string should be included in quotation marks): hex format: GSM 11.11 response from SIM to <Command>.
Reference 3GPP TS 27.007 [13]	

### 3.2.42 AT+CPUC Price Per Unit and Currency Table

AT+CPUC Price Per Unit and Currency Table	
Test Command <b>AT+CPUC=?</b>	Response <b>OK</b>
Read Command <b>AT+CPUC?</b>	Response <b>+CPUC: &lt;currency&gt;,&lt;ppu&gt;</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CPUC=&lt;currency&gt;,&lt;ppu&gt;[,&lt;passwd&gt;]</b>	Response <b>OK</b>  <b>+CME ERROR: &lt;err&gt;</b>

Parameters	<p><b>&lt;currency&gt;</b> String type (string should be included in quotation marks); three-character currency code (e.g. "GBP", "DEM"); character set as specified by Command Select TE Character Set +CSCS</p> <p><b>&lt;ppu&gt;</b> String type (string should be included in quotation marks); price per unit; dot is used as a decimal separator(e.g. "2.66")</p> <p><b>&lt;passwd&gt;</b> String type (string should be included in quotation marks); SIM PIN2</p>
Reference	
3GPP TS 27.007 [13]	

### 3.2.43 AT+CCWE Call Meter Maximum Event

AT+CCWE Call Meter Maximum Event	
Test Command <b>AT+CCWE=?</b>	Response <b>+CCWE: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Read Command <b>AT+CCWE?</b>	Response <b>+CCWE: &lt;mode&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CCWE=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Unsolicited result codes supported: <b>+CCWV</b> Shortly before the ACM (Accumulated Call Meter) maximum value is reached, an unsolicited result code +CCWV will be sent, if enabled by this command. The warning is issued approximately when 5 seconds call time remains. It is also issued when starting a call if less than 5 s call time remains.
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Disable call meter warning event <b>1</b> Enable call meter warning event



Reference 3GPP TS 27.007 [13]	3GPP TS 27.007 specifies 30 seconds, so SIMCom deviates from the specification.
----------------------------------	---

### 3.2.44 AT+CBC Battery Charge

AT+CBC Battery Charge	
Test Command <b>AT+CBC=?</b>	Response <b>+CBC: (list of supported &lt;bcs&gt;),(list of supported &lt;bcl&gt;),(&lt;voltage&gt;)</b>  <b>OK</b>
Execution Command <b>AT+CBC</b>	Response <b>+CBC: &lt;bcs&gt;, &lt;bcl&gt;,&lt;voltage&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;bcs&gt;</b> Charge status <b>0</b> ME is not charging <b>1</b> ME is charging <b>2</b> Charging has finished  <b>&lt;bcl&gt;</b> Battery connection level <b>1...100</b> battery has 1-100 percent of capacity remaining vent  <b>&lt;voltage&gt;</b> Battery voltage(mV)
Reference 3GPP TS 27.007 [13]	<b>Note:</b> This command depends on hardware and only be used when battery is charging.

### 3.2.45 AT+CUSD Unstructured Supplementary Service Data

AT+CUSD Unstructured Supplementary Service Data	
Test Command <b>AT+CUSD=?</b>	Response <b>+CUSD: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CUSD?</b>	Response <b>+CUSD: &lt;n&gt;</b>  <b>OK</b>
Write Command	Response

<b>AT+CUSD=&lt;n&gt;[,&lt;str&gt;[,&lt;dcs&gt;]]</b>	<b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;n&gt;</b> A numeric parameter which indicates control of the unstructured supplementary service data</p> <p><b>0</b>            disable the result code presentation in the TE</p> <p><b>1</b>            enable the result code presentation in the TE</p> <p><b>2</b>            cancel session (not applicable to read Command response)</p> <p><b>&lt;str&gt;</b> String type (string should be included in quotation marks) USSD-string</p> <p><b>&lt;dcs&gt;</b> Cell Broadcast Data Coding Scheme in integer format (default 0)</p>
Reference GSM 03.38 [25]	<b>Note:</b> When ussd is not support or return error ,TE will print +CUSD:4.

### 3.2.46 AT+CSSN Supplementary Services Notification

<b>AT+CSSN Supplementary Services Notification</b>	
Test Command <b>AT+CSSN=?</b>	Response returns values supported as a compound value. <b>+CSSN: (list of supported &lt;n&gt;s),(list of supported &lt;m&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSSN?</b>	Response gives corresponding setting value of <n> and <m>. <b>+CSSN: &lt;n&gt;,&lt;m&gt;</b>  <b>OK</b>
Write Command <b>AT+CSSN=&lt;n&gt;[,&lt;m&gt;]</b>	Response enables/disables the presentation of notification result codes from TA to TE. Command Syntax: AT+CSSN = [<n>[,<m>]] URC Response Syntax: <b>+CSSI : &lt;code1&gt;[,&lt;index&gt;]</b> <b>+CSSU: &lt;code2&gt;[&lt;index&gt; [,&lt;number&gt;,&lt;type&gt;]]</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>

Parameters

**<n>** A numeric parameter which indicates whether to show the +CSSI:<code1>[,<index>] result code presentation status after a mobile originated call setup

- 0**           disable
- 1**           enable

**<m>** A numeric parameter which indicates whether to show the +CSSU:<code2>[<index> [,<number>,<type>]]

+CSSU:<code2> result code presentation status during a mobile terminated call setup or during a call, or when a forward check supplementary service notification is received.

- 0**           disable
- 1**           **enable**

**<code1>**

- 0** Unconditional call forwarding is active
- 1** Some of the conditional call forwarding are active
- 2** Call has been forwarded
- 3** Call is waiting
- 4** This is a CUG call (also <index> present)
- 5** Outgoing calls are barred
- 6** Incoming calls are barred
- 7** CLIR suppression rejected
- 8** Call has been deflected

**<index>** Closed user group index

**<code2>**

- 0** This is a forwarded call(MT call setup)
- 1** This is a CUG call (also <index> present) (MT call setup)
- 2** Call has been put on hold (during a voice call)
- 3** Call has been retrieved (during a voice call)
- 4** Multiparty call entered (during a voice call)
- 5** Call on hold has been released (this is not a SS notification) (during a voice call)
- 6** Forward check SS message received (can be received whenever)
- 7** Call is being connected (alerting) with the remote party in alerting state in explicit call transfer operation (during a voice call)
- 8** Call has been connected with the other remote party in explicit call transfer operation (also number and subaddress parameters may be present) (during a voice call or MT call setup)
- 9** This is a deflected call (MT call setup)

	<p><b>10</b> Additional incoming call forwarded</p> <p><b>&lt;number&gt;</b> Parameter string type phone of format specified by &lt;type&gt;</p> <p><b>&lt;index&gt;</b> Parameter type of address octet in integer format</p>
Reference	

SIMCOM CONFIDENTIAL FILE

## 4. AT Commands According to 3GPP TS

### 27.005

The 3GPP TS 27.005 commands are for performing SMS and CBS related operations. SIM5300E supports both Text and PDU modes.

#### 4.1 Overview of AT Commands According to 3GPP TS 27.005

Command	Description
AT+CMGD	Delete SMS message
AT+CMGF	Select SMS message format
AT+CMGL	List SMS messages from preferred store
AT+CMGR	Read SMS message
AT+CMGS	Send SMS message
AT+CMGW	Write SMS message to memory
AT+CMSS	Send SMS message from storage
AT+CNMI	New SMS message indications
AT+CPMS	Preferred SMS message storage
AT+CSCA	SMS service center address
AT+CSCB	Select cell broadcast SMS messages
AT+CSDH	Show SMS text mode parameters
AT+CSMP	Set SMS text mode parameters
AT+CSMS	Select message service

#### 4.2 Detailed Descriptions of ATC According to 3GPP TS 27.005

## 4.2.1 AT+CMGD Delete SMS Message

AT+CMGD Delete SMS Message	
Test Command <b>AT+CMGD=?</b>	Response <b>+CMGD: (list of supported &lt;index&gt;s),(list of supported &lt;delflag&gt;s)</b>  <b>OK</b>
Write Command <b>AT+CMGD=&lt;index&gt;[,&lt;delflag&gt;]</b>	Response TA deletes message from preferred message storage <mem1> location <index>. <b>OK</b>  If error is related to ME functionality: <b>+CMS ERROR:&lt;err&gt;</b>
Parameters	<b>&lt;index&gt;</b> Integer type; value in the range of location numbers supported by the associated memory  <b>&lt;delflag&gt;</b> <b>0</b> Delete the message specified in <index> <b>1</b> Delete all read messages from preferred message storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched <b>2</b> Delete all read messages from preferred message storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched <b>3</b> Delete all read messages from preferred message storage, sent and unsent mobile originated messages leaving unread messages untouched <b>4</b> Delete all messages from preferred message storage including unread messages
Reference	3GPP TS 27.005

## 4.2.2 AT+CMGF Select SMS Message Format

AT+CMGF Select SMS Message Format	
Test Command <b>AT+CMGF=?</b>	Response <b>+CMGF: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CMGF?</b>	Response <b>+CMGF: &lt;mode&gt;</b>

	<b>OK</b>
Write Command <b>AT+CMGF=[&lt;mode&gt;]</b>	Response TA sets parameter to denote which input and output format of messages to use. <b>OK</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> PDU mode <b>1</b> Text mode
Reference 3GPP TS 27.005	

### 4.2.3 AT+CMGL List SMS Messages from Preferred Store

<b>AT+CMGL List SMS Messages from Preferred Store</b>	
Test Command <b>AT+CMGL=?</b>	Response <b>+CMGL: (list of supported &lt;stat&gt;s)</b>  <b>OK</b>
Write Command <b>AT+CMGL=&lt;stat&gt;[,&lt;mode&gt;]</b>	Parameters 1) If text mode: <b>&lt;stat&gt;</b> <b>"REC UNREAD"</b> Received unread messages <b>"REC READ"</b> Received read messages <b>"STO UNSENT"</b> Stored unsent messages <b>"STO SENT"</b> Stored sent messages <b>"ALL"</b> All messages  <b>&lt;mode&gt;</b> <b>0</b> Normal (default) <b>1</b> Not change status of the specified SMS record  2) If PDU mode: <b>&lt;stat&gt;</b> <b>0</b> Received unread messages <b>1</b> Received read messages <b>2</b> Stored unsent messages <b>3</b> Stored sent messages <b>4</b> All messages  <b>&lt;mode&gt;</b>

<u>0</u>	Normal
1	Not change status of the specified SMS record

Response

TA returns messages with status value <stat> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.

1) If text mode (+CMGF=1) and Command successful:

for SMS-SUBMITs and/or SMS-DELIVERs:

**+CMGL:** <index>,<stat>,<oa/da>[,<alpha>][,<scts>][,<tooa/toda>,<length>]

<CR><LF><data>

[<CR><LF>+CMGL:

<index>,<stat>,<da/oa>[,<alpha>][,<scts>][,<tooa/toda>,<length>]

<CR><LF><data>[...]]

for SMS-STATUS-REPORTs:

**+CMGL:** <index>,<stat>,<fo>,<mr>[,<ra>][,<tora>],<scts>,<dt>,<st>

[<CR><LF>+CMGL:

<index>,<stat>,<fo>,<mr>[,<ra>][,<tora>],<scts>,<dt>,<st>[...]]

for SMS-COMMANDs:

**+CMGL:** <index>,<stat>,<fo>,<ct>

[<CR><LF>+CMGL: <index>,<stat>,<fo>,<ct>[...]]

for CBM storage:

**+CMGL:**<index>,<stat>,<sn>,<mid>,<page>,<pages>

<CR><LF><data>

<CR><LF>+CMGL: <index>,<stat>,<sn>,<mid>,<page>,<pages>

<CR><LF><data>[...]]

OK

2) If PDU mode (+CMGF=0) and Command successful:

**+CMGL:**<index>,<stat>[,<alpha>],<length>

<CR><LF><pdu>

<CR><LF>+CMGL: <index>,<stat>[,alpha],<length>

<CR><LF><pdu>[...]]

OK

3) If error is related to ME functionality:

**+CMS ERROR:** <err>



<p>Execution Command</p> <p><b>AT+CMGL</b></p>	<p>If text mode: the same as AT+CMGL="REC UNREAD", received unread messages</p> <p>If PDU mode: the same as AT+CMGL=0, received unread messages See more messages please refer to Write Command.</p>
<p>Parameters</p>	<p><b>&lt;alpha&gt;</b> String type(string should be included in quotation marks) alphanumeric representation of &lt;da&gt; or &lt;oa&gt; corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with Command Select TE Character Set +CSCS (see definition of this Command in 3GPP TS 27.007)</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer Command+CSCS in 3GPP TS 27.007); type of address given by &lt; toda &gt;</p> <p><b>&lt;data&gt;</b> In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format: If &lt; dcs &gt; indicates that GSM 03.38 default alphabet is used and &lt; fo &gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is not set:</p> <p>If TE character set other than "HEX" (refer Command Select TE Character Set +CSCS in 3GPP TS 27.007):ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</p> <p>If TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55))</p> <p>If &lt; dcs &gt; indicates that 8-bit or UCS2 data coding scheme is used, or &lt; fo &gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format:</p> <p>If &lt; dcs &gt; indicates that GSM 03.38 default alphabet is used:</p> <p>If TE character set other than "HEX" (refer Command +CSCS in 3GPP TS 27.007): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</p> <p>If TE character set is "HEX": ME/TA converts each 7-bit character of GSM</p>

alphabet into two IRA character long hexadecimal number

If <dc> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number

**<length>** Integer type value indicating in the text mode (+CMGF=1) the length of the message body <data>(or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)

**<index>** Integer type; value in the range of location numbers supported by the associated memory

**<oa>** GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer Command +CSCS in 3GPP TS 27.007); type of address given by <tooa>

**<pdu>** In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)).In the case of CBS: GSM 03.41 TPDU in hexadecimal format.

**<scts>** GSM 03.40 TP-Service-Center-Time-Stamp in time-string format (refer <dt>)

**<toda>** GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)

**<tooa>** GSM 04.11 TP-Originating-Address Type-of-Address octet i integer format (default refer<toda>)

Reference  
3GPP TS 27.005

## 4.2.4 AT+CMGR Read SMS Message

### AT+CMGR Read SMS Message

Test Command	Response
AT+CMGR=?	OK

Write Command

**AT+CMGR=<index>[,<mode>]**

Response

TA returns SMS message with location value <index> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.

1) If text mode (+CMGF=1) and Command successful:

for SMS-DELIVER:

**+CMGR:**

**<stat>,<oa>[,<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]**

**<CR><LF><data>**

for SMS-SUBMIT:

**+CMGR:**

**<stat>,<da>[,<alpha>][,<toda>,<fo>,<pid>,<dcs>[,<vp>],<sca>,<tosca>,<length>]**

**<CR><LF><data>**

for SMS-STATUS-REPORTs:

**+CMGR: <stat>,<fo>,<mr>[,<ra>][,<tora>],<scts>,<dt>,<st>**

for SMS-COMMANDs:

**+CMGR: <stat>,<fo>,<ct>[,<pid>[,<mn>]][,<da>][,<toda>],<length><CR><LF><cdata>]**

for CBM storage:

**+CMGR: <stat>,<sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data>**

2) If PDU mode (+CMGF=0) and Command successful:

**+CMGR: <stat>[,<alpha>],<length><CR><LF><pdu>**

**OK**

3) If error is related to ME functionality:

**+CMS ERROR: <err>**

Parameters

**<index>** Integer type; value in the range of location numbers supported by the associated memory

**<mode>**

**0** Normal

**1** Not change status of the specified SMS record

**<alpha>** String type (string should be included in quotation marks)

alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific

**<da>** GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by < toda >

**<data>** In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:

if < dcs > indicates that GSM 03.38 default alphabet is used and < fo > indicates that GSM 03.40 TP-User-Data-Header-Indication is not set:

if TE character set other than "HEX" (refer Command Select TE Character Set +CSCS in 3GPP TS 27.007):ME/TA converts GSM alphabet into current TE character set according to rules of Annex A

if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55))

if < dcs > indicates that 8-bit or UCS2 data coding scheme is used, or < fo > indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format:

if < dcs > indicates that GSM 03.38 default alphabet is used:

if TE character set other than "HEX" (refer Command +CSCS in 3GPP TS 27.007): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A

if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number

if < dcs > indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number

**<dcs>** Depending on the Command or result code: GSM 03.38 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format

**<fo>** Depending on the Command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format

**<length>** integer type value indicating in the text mode (+CMGF=1) the length of the message body <data>(or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)

**<mid>** GSM 03.41 CBM Message Identifier in integer format

**<oa>** GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by <tooa>

**<pdu>** In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)).In the case of CBS: GSM 03.41 TPDU in hexadecimal format.

**<pid>** GSM 03.40 TP-Protocol-Identifier in integer format (default 0)

**<sca>** GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by <tosca>

**<scts>** GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer <dt>)

**<stat>**

- |          |                                       |
|----------|---------------------------------------|
| <b>0</b> | "REC UNREAD" Received unread messages |
| <b>1</b> | "REC READ" Received read messages     |
| <b>2</b> | "STO UNSENT" Stored unsent messages   |
| <b>3</b> | "STO SENT" Stored sent messages       |
| <b>4</b> | "ALL" All messages                    |

**<toda>** GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)

	<p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer&lt;toda&gt;)</p> <p><b>&lt;tosca&gt;</b> GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer &lt;toda&gt;)</p> <p><b>&lt;vp&gt;</b> Depending on SMS-SUBMIT &lt;fo&gt; setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer &lt;dt&gt;)</p>
Reference	
3GPP TS 27.005	

## 4.2.5 AT+CMGS Send SMS Message

AT+CMGS Send SMS Message	
Test Command	Response
<b>AT+CMGS=?</b>	<b>OK</b>
Write Command	Response
1) If text mode (+CMGF=1): <b>+CMGS=&lt;da&gt;[,&lt;toda&gt;]</b> <CR>text is entered <ctrl-Z/ESC> ESC quits without sending	TA sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <scts> is returned. Values can be used to identify message upon unsolicited delivery status report result code.
2) If PDU mode (+CMGF=0): <b>+CMGS=&lt;length&gt;</b> <CR>PDU is given <ctrl-Z/ESC>	1) If text mode(+CMGF=1) and sending successful: <b>+CMGS: &lt;mr&gt;</b>  <b>OK</b>  2) If PDU mode(+CMGF=0) and sending successful: <b>+CMGS: &lt;mr&gt;</b>  <b>OK</b>  3)If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by <toda>

	<p><b>&lt;tda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;length&gt;</b> Integer type value (not exceed 160 bytes) indicating in the text mode (+CMGF=1) the length of the message body &lt;data&gt;(or &lt;cdata&gt;) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><b>&lt;mr&gt;</b> GSM 03.40 TP-Message-Reference in integer format</p>
Reference 3GPP TS 27.005	<p><b>Note:</b> In text mode, the maximum length of an SMS depends on the used coding scheme: Reject incoming call when sending messages.</p>

## 4.2.6 AT+CMGW Write SMS Message to Memory

AT+CMGW Write SMS Message to Memory	
Test Command <b>AT+CMGW=?</b>	Response <b>OK</b>
Write Command 1) If text mode (+CMGF=1): <b>AT+CMGW=&lt;oa/da&gt;[,&lt;tooa/to da&gt;][,&lt;stat&gt;]</b> <CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending 2) If PDU mode (+CMGF=0): <b>AT+CMGW=&lt;length&gt;[,&lt;stat&gt;]</b> <CR>PDU is given <ctrl-Z/ESC>	Response TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> allows also other status values to be given.  If writing is successful: <b>+CMGW: &lt;index&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b>
Execution Command <b>AT+CMGW</b>	Response TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> allows also other status values to be given.  If writing is successful: <b>+CMGW: &lt;index&gt;</b>  <b>OK</b>

	<p>If error is related to ME functionality:  <b>+CMS ERROR: &lt;err&gt;</b></p>																				
Parameters	<p><b>&lt;oa&gt;</b> GSM 03.40 TP-Originating-Address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007);type of address given by &lt;tooa&gt;</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by &lt;toda&gt;</p> <p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octetin integer format (default refer &lt;toda&gt;)</p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <table border="0"> <tr> <td><b>129</b></td> <td>Unknown type(ISDN format number)</td> </tr> <tr> <td><b>161</b></td> <td>National number type(ISDN format)</td> </tr> <tr> <td><b>145</b></td> <td>International number type(ISDN format)</td> </tr> <tr> <td><b>177</b></td> <td>Network specific number(ISDN format)</td> </tr> </table> <p><b>&lt;length&gt;</b> Integer type value (not exceed 160 bytes) indicating in the text mode (+CMGF=1) the length of the message body &lt;data&gt;(or &lt;cdata&gt;) in characters;  or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><b>&lt;stat&gt;</b>  in the text mode (+CMGF=1):</p> <table border="0"> <tr> <td><b>"<u>STO UNSENT</u>"</b></td> <td>Stored unsent messages</td> </tr> <tr> <td><b>"STO SENT"</b></td> <td>Stored sent messages</td> </tr> </table> <p>in PDU mode (+CMGF=0):</p> <table border="0"> <tr> <td><b><u>0</u></b></td> <td>Received unread messages</td> </tr> <tr> <td><b>1</b></td> <td>Received read messages</td> </tr> <tr> <td><b>2</b></td> <td>Stored unsent messages</td> </tr> <tr> <td><b>3</b></td> <td>Stored sent messages</td> </tr> </table> <p><b>&lt;pdu&gt;</b> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40</p>	<b>129</b>	Unknown type(ISDN format number)	<b>161</b>	National number type(ISDN format)	<b>145</b>	International number type(ISDN format)	<b>177</b>	Network specific number(ISDN format)	<b>"<u>STO UNSENT</u>"</b>	Stored unsent messages	<b>"STO SENT"</b>	Stored sent messages	<b><u>0</u></b>	Received unread messages	<b>1</b>	Received read messages	<b>2</b>	Stored unsent messages	<b>3</b>	Stored sent messages
<b>129</b>	Unknown type(ISDN format number)																				
<b>161</b>	National number type(ISDN format)																				
<b>145</b>	International number type(ISDN format)																				
<b>177</b>	Network specific number(ISDN format)																				
<b>"<u>STO UNSENT</u>"</b>	Stored unsent messages																				
<b>"STO SENT"</b>	Stored sent messages																				
<b><u>0</u></b>	Received unread messages																				
<b>1</b>	Received read messages																				
<b>2</b>	Stored unsent messages																				
<b>3</b>	Stored sent messages																				



	<p>TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)).In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><b>&lt;index&gt;</b> Index of message in selected storage &lt;mem2&gt;</p>
Reference	3GPP TS 27.005

#### 4.2.7 AT+CMSS Send SMS Message from Storage

AT+CMSS Send SMS Message from Storage	
Test Command <b>AT+CMSS=?</b>	Response <b>OK</b>
Write Command <b>AT+CMSS=&lt;index&gt;[,&lt;da&gt;,&lt;toda&gt;]</b>	<p>Response</p> <p>TA sends message with location value &lt;index&gt; from message storage &lt;mem2&gt; to the network (SMS-SUBMIT). If new recipient address &lt;da&gt; is given, it shall be used instead of the one stored with the message. Reference value &lt;mr&gt; is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: <b>+CMSS: &lt;mr&gt;</b></p> <p><b>OK</b></p> <p>2) If PDU mode(+CMGF=0) and sending successful: <b>+CMSS: &lt;mr&gt;</b></p> <p><b>OK</b></p> <p>3)If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;index&gt;</b> Integer type; value in the range of location numbers supported by the associated memory</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by &lt;toda&gt;</p>

	<p><b>&lt;tda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;mr&gt;</b> GSM 03.40 TP-Message-Reference in integer format</p>
Reference	
3GPP TS 27.005	

## 4.2.8 AT+CNMI New SMS Message Indications

AT+CNMI New SMS Message Indications	
<p>Test Command</p> <p><b>AT+CNMI=?</b></p>	<p>Response</p> <p><b>+CNMI: (list of supported &lt;mode&gt;s),(list of supported &lt;mt&gt;s),(list of supported &lt;bm&gt;s),(list of supported &lt;ds&gt;s),(list of supported &lt;bfr&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CNMI?</b></p>	<p>Response</p> <p><b>+CNMI: &lt;mode&gt;,&lt;mt&gt;,&lt;bm&gt;,&lt;ds&gt;,&lt;bfr&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CNMI=&lt;mode&gt;[,&lt;mt&gt;[,&lt;bm&gt;[,&lt;ds&gt;[,&lt;bfr&gt;]]]]</b></p>	<p>Response</p> <p>TA selects the procedure for how the receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in GSM 03.38.</p> <p><b>OK</b></p> <p><b>ERROR</b></p> <p>Unsolicited result code</p> <p>1. Indicates that new message has been received</p> <p>If &lt;mt&gt;=1:</p> <p><b>+CMTI: &lt;mem3&gt;, &lt;index&gt;</b></p> <p>If &lt;mt&gt;=2 (PDU mode enabled):</p> <p><b>+CMT: [&lt;alpha&gt;],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b></p> <p>If &lt;mt&gt;=2 (text mode enabled):</p> <p><b>+CMT: &lt;oa&gt;, &lt;scts&gt;[,&lt;tooa&gt;, &lt;fo&gt;, &lt;pid&gt;, &lt;dcs&gt;, &lt;sca&gt;, &lt;tosca&gt;, &lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b></p> <p>2. Indicates that new cell broadcast message has been received</p> <p>If &lt;bm&gt;=2 (PDU mode enabled):</p>

	<p><b>+CBM: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b></p> <p>If &lt;bm&gt;=2 (text mode enabled):  <b>+CBM: &lt;sn&gt;, &lt;mid&gt;, &lt;dc&gt;, &lt;page&gt;, &lt;pages&gt;&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b></p> <p>3. Indicates that new SMS status report has been received  If &lt;ds&gt;=1 (PDU mode enabled):  <b>+CDS: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b></p> <p>If &lt;ds&gt;=1 (text mode enabled):  <b>+CDS: &lt;fo&gt;, &lt;mr&gt;[, &lt;ra&gt;][, &lt;tora&gt;], &lt;scts&gt;, &lt;dt&gt;, &lt;st&gt;</b></p>
Parameters	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</p> <p><b>1</b> Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.</p> <p><b><u>2</u></b> Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</p> <p><b>3</b> Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.</p> <p><b>&lt;mt&gt;</b> (the rules for storing received SMS depend on its data coding scheme (refer GSM 03.38 [2]), preferred memory storage (+CPMS) setting and this value):</p> <p><b>0</b> No SMS-DELIVER indications are routed to the TE.</p> <p><b><u>1</u></b> If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: <b>+CMTI: &lt;mem&gt;,&lt;index&gt;</b></p> <p><b>2</b> SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: <b>+CMT: [&lt;alpha&gt;],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b> (PDU mode enabled) or <b>+CMT: &lt;oa&gt;,&lt;alpha&gt;,&lt;scts&gt;[,&lt;tooa&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dc&gt;,&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b> (text mode enabled; about parameters in italics, refer Command Show Text Mode Parameters +CSDH). Class 2 messages result in indication as defined in &lt;mt&gt;=1.</p> <p><b>3</b> Class 3 SMS-DELIVERs are routed directly to TE</p>

	<p>using unsolicited result codes defined in &lt;mt&gt;=2. Messages of other classes result in indication as defined in &lt;mt&gt;=1.</p> <p><b>&lt;bm&gt;</b> (the rules for storing received CBMs depend on its data coding scheme (refer GSM 03.38 [2]), the setting of Select CBM Types (+CSCB) and this value):</p> <p><b>0</b> No CBM indications are routed to the TE.</p> <p><b>2</b> New CBMs are routed directly to the TE using unsolicited result code: +CBM: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; (PDU mode enabled) or +CBM: &lt;sn&gt;,&lt;mid&gt;,&lt;dcs&gt;,&lt;page&gt;,&lt;pages&gt;&lt;CR&gt;&lt;LF&gt;&lt;data&gt; (text mode enabled).</p> <p><b>&lt;ds&gt;</b></p> <p><b>0</b> No SMS-STATUS-REPORTs are routed to the TE.</p> <p><b>1</b> SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS:&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; (PDU mode enabled) or +CDS:&lt;fo&gt;,&lt;mr&gt;[,&lt;ra&gt;][,&lt;tora&gt;],&lt;scts&gt;,&lt;dt&gt;,&lt;st&gt; (text mode enabled).</p> <p><b>&lt;bfr&gt;</b></p> <p><b>0</b> TA buffer of unsolicited result codes defined within this Command is flushed to the TE when &lt;mode&gt; 1...3 is entered (OK response shall be given before flushing the codes).</p> <p><b>1</b> TA buffer of unsolicited result codes defined within this command is cleared when &lt;mode&gt; 1...3 is entered</p>
Reference	3GPP TS 27.005

## 4.2.9 AT+CPMS Preferred SMS Message Storage

AT+CPMS Preferred SMS Message Storage	
Test Command	Response
AT+CPMS=?	+CPMS: (list of supported <mem1>s),(list of supported <mem2>s),(list of supported <mem3>s)
	OK
	If error is related to ME functionality: +CMS ERROR <err>

<p>Read Command <b>AT+CPMS?</b></p>	<p>Response <b>+CPMS: &lt;mem1&gt;,&lt;used1&gt;,&lt;total1&gt;,&lt;mem2&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;mem3&gt;,&lt;used3&gt;,&lt;total3&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CMS ERROR &lt;err&gt;</b></p>
<p>Write Command <b>AT+CPMS=&lt;mem1&gt;[,&lt;mem2&gt;[,&lt;mem3&gt;]]</b></p>	<p>Response TA selects memory storages &lt;mem1&gt;, &lt;mem2&gt; and &lt;mem3&gt; to be used for reading, writing, etc. <b>+CPMS: &lt;used1&gt;,&lt;total1&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;used3&gt;,&lt;total3&gt;</b></p> <p><b>OK</b></p>
<p>Parameters</p>	<p><b>&lt;mem1&gt;</b> Messages to be read and deleted from this memory storage  <b>"SM"</b> SIM message storage  <b>"ME"</b> Phone message storage</p> <p><b>&lt;mem2&gt;</b> Messages will be written and sent to this memory storage  <b>"ME"</b> Phone message storage  <b>"SM"</b> SIM message storage</p> <p><b>&lt;mem3&gt;</b> Received messages will be placed in this memory storage if routing to PC is not set ("CNMI")  <b>"SM"</b> SIM message storage  <b>"ME"</b> Phone message storage</p> <p><b>&lt;usedx&gt;</b> Integer type; Number of messages currently in &lt;memx&gt;</p> <p><b>&lt;totalx&gt;</b> Integer type; Number of messages storable in &lt;memx&gt;</p>
<p>Reference 3GPP TS 27.005</p>	

#### 4.2.10 AT+CSCA SMS Service Center Address

<b>AT+CSCA SMS Service Center Address</b>	
<p>Test Command <b>AT+CSCA=?</b></p>	<p>Response <b>OK</b></p>
<p>Read Command <b>AT+CSCA?</b></p>	<p>Response <b>+CSCA: &lt;sca&gt;,&lt;tosca&gt;[,&lt;scaAlpha&gt;]</b></p> <p><b>OK</b></p>

<p>Write Command <b>AT+CSCA=&lt;sca&gt;[,&lt;tosca&gt;]</b></p>	<p>Response</p> <p>TA updates the SMSC address, through which mobile originated SMS are transmitted. In text mode, setting is used by send and writes commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into &lt;pdu&gt; parameter equals zero.</p> <p><b>Note: This Command writes the parameters in NON-VOLATILE memory.</b></p> <p>OK</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;sca&gt;</b> GSM 04.11 RP SC address Address-Value field in string format(string should be included in quotation marks); BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in 3GPP TS 27.007); type of address given by &lt;tosca&gt;</p> <p><b>&lt;tosca&gt;</b> Service center address format GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer &lt;today&gt;)</p> <p><b>&lt;scaAlpha&gt;</b> String type(string should be included in quotation marks) Service center address alpha data</p>
<p>Reference</p> <p>3GPP TS 27.005</p>	

#### 4.2.11 AT+CSCB Select Cell Broadcast SMS Messages

<b>AT+CSCB Select Cell Broadcast SMS Messages</b>	
<p>Test Command <b>AT+CSCB=?</b></p>	<p>Response</p> <p><b>+CSCB: (list of supported &lt;mode&gt;s)</b></p> <p>OK</p>
<p>Read Command <b>AT+CSCB?</b></p>	<p>Response</p> <p><b>+CSCB: &lt;mode&gt;,&lt;mids&gt;,&lt;dcss&gt;</b></p> <p>OK</p>
<p>Write Command <b>AT+CSCB=&lt;mode&gt;[,&lt;mids&gt;[,&lt;dcss&gt;]]</b></p>	<p>Response</p> <p>TA selects which types of CBMs are to be received by the ME.</p> <p><b>Note: This Command writes the parameters in NON-VOLATILE memory.</b></p> <p>OK</p> <p>If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p>

<p>Parameters</p>	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> Message types specified in &lt;mids&gt; and &lt;dcss&gt; are accepted</p> <p><b>1</b> Message types specified in &lt;mids&gt; and &lt;dcss&gt; are not accepted.</p> <p><b>&lt;mids&gt;</b> String type (string should be included in quotation marks); all different possible combinations of CBM message identifiers (refer &lt;mid&gt;) (default is empty string); e.g. "0,1,5,320,922". Total 15 different &lt;mids&gt; values can be supported. &lt;mids&gt; values cannot be written consecutively, such as "100-200"</p> <p><b>&lt;dcss&gt;</b> String type(string should be included in quotation marks); all different possible combinations of CBM data coding schemes (refer &lt;dcs&gt;) (default is empty string); e.g. "0,5". Total 5 different &lt;dcss&gt; values can be supported. &lt;dcss&gt; values cannot be written consecutively, such as "0-5".</p>
<p>Reference</p> <p>3GPP TS 27.005</p>	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• AT+CSCB=0 will reset &lt;mids&gt; and &lt;dcss&gt; and select no &lt;mids&gt; and no &lt;dcss&gt;.</li> <li>• AT+CSCB=1 means all &lt;dcss&gt; are accepted but this command has no effect on the list of the &lt;mids&gt; accepted. "0-255" means all &lt;dcss&gt; are accepted.</li> <li>• AT+CSCB=0, &lt;mids&gt; will add the &lt;mids&gt; values in the &lt;mids&gt; current list handled by module.</li> <li>• AT+CSCB=0, &lt;dcss&gt; will add the &lt;dcss&gt; values in the &lt;dcss&gt; current list handled by module.</li> <li>• If AT+CSCB=0, &lt;mids&gt; is received while the list of &lt;mids&gt; is full, OK is returned and new value is not added.</li> </ul>

#### 4.2.12 AT+CSDH Show SMS Text Mode Parameters

AT+CSDH Show SMS Text Mode Parameters	
<p>Test Command</p> <p><b>AT+CSDH=?</b></p>	<p>Response</p> <p><b>+CSDH: (list of supported &lt;show&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CSDH?</b></p>	<p>Response</p> <p><b>+CSDH: &lt;show&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CSDH=[&lt;show&gt;]</b></p>	<p>Response</p> <p>TA determines whether detailed header information is shown in text mode result codes.</p> <p><b>OK</b></p>

Parameter	<p><b>&lt;show&gt;</b></p> <p><b>0</b> Do not show header values defined in commands +CSCA and +CSMP (&lt;sca&gt;, &lt;tosca&gt;, &lt;fo&gt;, &lt;vp&gt;, &lt;pid&gt; and &lt;dcs&gt;) nor &lt;length&gt;, &lt;toda&gt; or &lt;tooa&gt; in +CMT, +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode</p> <p><b>1</b> Show the values in result codes</p>
Reference	3GPP TS 27.005

#### 4.2.13 AT+CSMP Set SMS Text Mode Parameters

AT+CSMP Set SMS Text Mode Parameters	
Test Command <b>AT+CSMP=?</b>	Response <b>+CSMP: (list of supported &lt;fo&gt;s),(list of supported &lt;vp&gt;s),(list of supported &lt;pid&gt;s),(list of supported &lt;dcs&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSMP?</b>	Response <b>+CSMP: &lt;fo&gt;,&lt;vp&gt;,&lt;pid&gt;,&lt;dcs&gt;</b>  <b>OK</b>
Write Command <b>AT+CSMP=[&lt;fo&gt;[,&lt;vp&gt;,&lt;pid&gt;,&lt;dcs&gt;]]</b>	Response TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) or define the absolute time of the validity period termination (<vp> is a string).  <b>OK</b> <i>Note: This Command writes the parameters in NON-VOLATILE memory.</i>
Parameters	<p><b>&lt;fo&gt;</b> Depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format. SMS status report is supported under text mode if &lt;fo&gt; is set to 49.</p> <p><b>&lt;vp&gt;</b> Depending on SMS-SUBMIT &lt;fo&gt; setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer &lt;dt&gt;)</p> <p><b>&lt;pid&gt;</b> GSM 03.40 TP-Protocol-Identifier in integer format (default 0).</p> <p><b>&lt;dcs&gt;</b> GSM 03.38 SMS Data Coding Scheme in Integer format.</p>
Reference	3GPP TS 27.005



## 4.2.14 AT+CSMS Select Message Service

AT+CSMS Select Message Service	
Test Command <b>AT+CSMS=?</b>	Response <b>+CSMS: (list of supported &lt;service&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSMS?</b>	Response <b>+CSMS: &lt;service&gt;,&lt;mt&gt;,&lt;mo&gt;,&lt;bm&gt;</b>  <b>OK</b>
Write Command <b>AT+CSMS= &lt;service&gt;</b>	Response <b>+CSMS: &lt;mt&gt;,&lt;mo&gt;,&lt;bm&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;service&gt;</b> <b>0</b> GSM 03.40 and 03.41 (the syntax of SMS AT commands is compatible with 3GPP TS 27.005 Phase 2 version 4.7.0; Phase 2+ features which do not require new Command syntax may be supported (e.g. correct routing of messages with new Phase 2+ data coding schemes)) <b>1</b> GSM 03.40 and 03.41 (the syntax of SMS AT commands is compatible with 3GPP TS 27.005 Phase 2+version; the requirement of <service> setting 1 is mentioned under corresponding command descriptions)  <b>&lt;mt&gt;</b> Mobile Terminated Messages: <b>0</b> Type not supported <b>1</b> Type supported  <b>&lt;mo&gt;</b> Mobile Originated Messages: <b>0</b> Type not supported <b>1</b> Type supported  <b>&lt;bm&gt;</b> Broadcast Type Messages: <b>0</b> Type not supported <b>1</b> Type supported
Reference 3GPP TS 27.005	

## 5. AT Commands Special for SIMCom

### 5.1 Overview of ATC for SIMCom

Command	Description
AT+CSNS	Single numbering scheme
AT+CMOD	Configure alternating mode calls
AT+CPOWD	Power Off
AT+CADC	Read ADC
AT+CLTS	Get local timestamp
AT+CBAND	Get and set mobile operation band
AT+CSCLK	Configure slow clock
AT+CENG	Switch on or off engineering mode
AT+SCLASS0	Store class 0 SMS to SIM when received class 0 SMS
AT+CCID	Show ICCID
AT+CMTE	Set critical temperature operating mode or query temperature
AT+MORING	Show state of mobile originated call
AT+CIURC	Enable or disable initial URC presentation
AT+CCALR	Call ready query
AT+GSV	Display product identification information
AT+SLEDS	Set the timer period of net light
AT+CNETLIGHT	Close the net light or open it to shining
AT+CSDT	Switch on or off detecting SIM card
AT+CSMINS	SIM inserted status reporting
AT+CSGS	Netlight Indication of GPRS Status
AT+SJDR	Jamming detection
AT+CNMP	Selection of Radio Access Technology
AT+CSACT	Choose the Network-attached status
AT+GSMBUSY	Reject Incoming Call
AT+CDRIND	CS Voice/Data Call Termination Indication
AT+CGMSCLASS	Change GPRS Multislot Class
AT+CLVL	Loud Speaker Volume Level
AT+CMIC	Change the Microphone Gain Level
AT+SIDET	Change the Side Tone Gain Level

AT+ECHO	Echo Cancellation Control
AT+CALM	Alert Sound Mode
AT+CALS	Alert Sound Select
AT+CMGDA	Delete All SMS
AT+SIMTONE	Generate Specifically Tone
AT+STTONE	Play SIM Toolkit Tone
AT+CLDTMF	Local DTMF Tone Generation
AT+SNDLEVEL	Set the Sound Level of Special AT Command
AT+CHF	Configure Hands Free Operation
AT+CHFA	Swap the Audio Channels

SIMCOM CONFIDENTIAL FILE

## 5.2 Detailed Descriptions of ATC for SIMCom

### 5.2.1 AT+CSNS Single Numbering Scheme

AT+CSNS Single Numbering Scheme	
Test Command <b>AT+CSNS=?</b>	Response <b>+CSNS: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSNS?</b>	Response <b>+CSNS: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CSNS=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Voice <b>4</b> Data
Reference	

### 5.2.2 AT+CMOD Configure Alternating Mode Calls

AT+CMOD Configure Alternating Mode Calls	
Test Command <b>AT+CMOD=?</b>	Response <b>+CMOD: &lt;list supported &lt;mode&gt;s&gt;</b>  <b>OK</b>
Read Command <b>AT+CMOD?</b>	Response <b>+CMOD: &lt;mode&gt;</b>  <b>OK</b>

Write Command <b>AT+CMOD=[&lt;mode&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> single mode (default) <b>1</b> alternating voice/fax <b>2</b> alternating voice/data <b>3</b> voice followed by data <b>4</b> data followed by voice(proprietary mode)
Reference	

### 5.2.3 AT+CPOWD Power Off

<b>AT+CPOWD Power Off</b>	
Write Command <b>AT+CPOWD=&lt;n&gt;</b>	Response <b>[NORMAL POWER DOWN]</b>
Parameter	<b>&lt;n&gt;</b> <b>0</b> Power off urgently (Will not send out NORMAL POWER DOWN) <b>1</b> Normal power off (Will send out NORMAL POWER DOWN)
Reference	

### 5.2.4 AT+CADC Read ADC

<b>AT+CADC Read ADC</b>	
Test Command <b>AT+CADC=?</b>	Response <b>+CADC: (list of supported &lt;status&gt;s),(list of supported &lt;value&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CADC?</b>	Response <b>+CADC: &lt;status&gt;,&lt;value&gt;</b>  <b>OK</b>
Parameter	<b>&lt;status&gt;</b> <b>1</b> Success <b>0</b> Fail  <b>&lt;value&gt;</b> Integer <b>0-1200</b>

## 5.2.5 AT+CLTS Get Local Timestamp

AT+CLTS Get Local Timestamp	
<b>Test Command</b> <b>AT+CLTS=?</b>	<b>Response</b> <b>+CLTS: "yy/MM/dd,hh:mm:ss+/-zz"</b>  <b>OK</b>
<b>Read Command</b> <b>AT+CLTS?</b>	<b>Response</b> <b>+CLTS: &lt;mode&gt;</b>  <b>OK</b>
<b>Write Command</b> <b>AT+CLTS=&lt;mode&gt;</b>	<b>Response</b> <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  <b>Unsolicited Result Code</b> When "get local timestamp" function is enabled, the following URC may be reported if network sends the message to the MS to provide the MS with subscriber specific information. <ol style="list-style-type: none"> <li>Refresh network name by network:  <b>*PSNWID: "&lt;mcc&gt;", "&lt;mnc&gt;", "&lt;full network name&gt;", &lt;full network name CI&gt;, "&lt;short network name&gt;",&lt;short network name CI&gt;</b> </li> <li>Refresh time and time zone by network:                      This is UTC time, the time queried by AT+CCLK command is local time.  <b>*PSUTTZ: &lt;year&gt;, &lt;month&gt;, &lt;day&gt;, &lt;hour&gt;, &lt;min&gt;, &lt;sec&gt;, "&lt;time zone&gt;", &lt;dst&gt;</b> </li> <li>Refresh network time zone by network:  <b>+CTZV: "&lt;time zone&gt;"</b> </li> <li>Refresh Network Daylight Saving Time by network:  <b>DST: &lt;dst&gt;</b> </li> </ol>
<b>Parameters</b>	<b>&lt;mode&gt;</b> <b>0</b> Disable <b>1</b> Enable  <b>&lt;mcc&gt;</b> String type; mobile country code

**<mnc>** String type; mobile network code

**<full network name>** String type; name of the network in full length.

**<full network name CI>** Integer type; indicates whether to add CI.

**0** The MS will not add the initial letters of the Country's Name to the text string.

**1** The MS will add the initial letters of the Country's Name and a separator (e.g. a space) to the text string.

**<short network name>** String type; abbreviated name of the network

**<short network name CI>** Integer type; indicates whether to add CI.

**0** The MS will not add the initial letters of the Country's Name to the text string.

**1** The MS will add the initial letters of the Country's Name and a separator (e.g. a space) to the text string.

**<year>** 4 digits of year (from network)

**<month>** Month (from network)

**<day>** Day (from network)

**<hour>** Hour (from network)

**<min>** Minute (from network)

**<sec>** Second (from network)

**<time zone>** String type; network time zone. If the network time zone has been adjusted for Daylight Saving Time, the network shall indicate this by including the <dst> (Network Daylight Saving Time)

**<dst>** Network Daylight Saving Time; the content of this indicates the value that used to adjust the network time zone

**0** No adjustment for Daylight Saving Time

**1** +1 hour adjustment for Daylight Saving

**2** +2 hours adjustment for Daylight Saving Time

**3** Reserved

Reference

**Note:**  
 Support for this Command will be network dependent.  
 Set AT+CLTS=1, it means user can receive network time updating and use AT+CCLK to show current time.

## 5.2.6 AT+CBAND Get and Set Mobile Operation Band

AT+CBAND Get and Set Mobile Operation Band	
Test Command <b>AT+CBAND=?</b>	Response <b>+CBAND: (list of supported &lt;op_band&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CBAND?</b>	Response <b>+CBAND: &lt;op_band&gt;,[list of &lt;2G_BAND&gt;s],[list of &lt;3G_BAND&gt;S]</b>  <b>OK</b>
Write Command <b>AT+CBAND=&lt;op_band&gt;</b>	Response <b>OK</b>  <i>Note: Users should select 2G band and 3G band separately.</i>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;op_band&gt;</b> A string parameter which indicate the operation band. And the following strings should be included in quotation marks.</p> <p><b>EGSM_MODE</b></p> <p><b>DCS_MODE</b></p> <p><b>EGSM_DCS_MODE</b></p> <p><b>UMTS_I_MODE</b>            3G band</p> <p><b>UMTS_VIII_MODE</b>        3G band</p> <p><b>ALL_BAND</b>                All_BAND means all the 2G bands and 3G bands.</p> <p><b>&lt;2G_BAND&gt;</b> means the configured 2G bands</p> <p><b>&lt;3G_BAND&gt;</b> means the configured 3G bands.</p>
Reference	

## 5.2.7 AT+CSCLK Configure Slow Clock

AT+CSCLK Configure Slow Clock	
Test Command <b>AT+CSCLK=?</b>	Response <b>+CSCLK: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSCLK?</b>	Response <b>+CSCLK: &lt;n&gt;</b>  <b>OK</b>
Write Command	Response



AT+CSCLK=<n>	OK
	ERROR
Parameters	<p>&lt;n&gt;</p> <p><b>0</b> Disable slow clock, module will not enter sleep mode.</p> <p><b>1</b> Enable slow clock, it is controlled by DTR. When DTR is high, module can enter sleep mode. When DTR changes to low level or gotten the port data, module can quit sleep mode.</p> <p><b>2</b> Enable slow clock automatically. When there is no interrupt (on air and hardware such as GPIO interrupt or data in serial port), module can enter sleep mode. Otherwise, it will quit sleep mode.</p>
Reference	<p><b>Note:</b></p> <p>There are two caveats when you want to quit sleep mode in mode 2:</p> <ol style="list-style-type: none"> <li>1, You should input some characters (at least one) to awake module.</li> <li>2, An interval time of 100ms more is necessary between waking characters and following AT commands, otherwise the waking characters will not be discarded completely.</li> </ol>

## 5.2.8 AT+CENG Switch on or off Engineering Mode

AT+CENG Switch on or off Engineering Mode	
Test Command <b>AT+CENG=?</b>	Response TA returns the list of supported modes. <b>+CENG: (list of supported &lt;mode&gt;s),(list of supported &lt;Ncell&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CENG?</b>	Response Engineering Mode is designed to allow a field engineer to view and test the network information received by a handset, when the handset is either in idle mode or dedicated mode (that is: with a call active). In each mode, the engineer is able to view network interaction for the "serving cell" (the cell the handset is currently registered with) or for the neighboring cells. TA returns the current engineering mode. The network information including serving cell and neighboring cells are returned only when <mode>=1 or <mode> = 2. <cell> carry with them corresponding network interaction.  <b>In 2G mode</b> <b>+CENG: &lt;mode&gt;,&lt;CELLID&gt;</b> <b>[+CENG: &lt;cell&gt;,"&lt;arfcn&gt;,&lt;rxl&gt;,&lt;rxq&gt;,&lt;mcc&gt;,&lt;mnc&gt;,&lt;bsic&gt;,&lt;cellid&gt;,&lt;rla&gt;,&lt;txp&gt;,&lt;lac&gt;,&lt;TA&gt;</b> <b>&lt;CR&gt;&lt;LF&gt;+CENG:</b> <b>&lt;cell&gt;,"&lt;arfcn&gt;,&lt;rxl&gt;,&lt;bsic&gt;[,&lt;cellid&gt;,&lt;mcc&gt;,&lt;mnc&gt;,&lt;lac&gt;" ...]</b>

	<p>OK</p> <p>if &lt;mode&gt;=3  <b>+CENG: &lt;mode&gt;,&lt;Ncell&gt;</b>  <b>[+CENG: &lt;cell&gt;,&lt;mcc&gt;,&lt;mnc&gt;,&lt;lac&gt;,&lt;cellid&gt;,&lt;bsic&gt;,&lt;rxl&gt;</b>  <b>&lt;CR&gt;&lt;LF&gt;+CENG: &lt;cell&gt;,&lt;mcc&gt;,&lt;mnc&gt;,&lt;lac&gt;,&lt;cellid&gt;,&lt;bsic&gt;,&lt;rxl&gt;...]</b></p> <p>OK</p> <p><b>In 3G mode</b>          If &lt;mode&gt;=1  <b>network is UMTS</b>  <b>+CENG: &lt;ID&gt;,&lt;dl_uarfcn&gt;,&lt;mcc&gt;,&lt;mnc&gt;,&lt;lac&gt;,&lt;cellid&gt;,&lt;psc&gt;,&lt;rscp&gt;,&lt;rxlev&gt;,&lt;</b>  <b>tx_pwr&gt;</b>  <b>[+CENG: &lt;ID&gt;,&lt;dl_uarfcn&gt;,&lt;psc&gt;,&lt;rscp&gt;,&lt;ecno&gt;,&lt;pathloss&gt;]</b>  <b>&lt;CR&gt;&lt;LF&gt;+CENG: &lt;ID&gt;,&lt;dl_uarfcn&gt;,&lt;psc&gt;,&lt;rscp&gt;,&lt;ecno&gt;,&lt;pathloss&gt;...]</b></p> <p>OK</p> <p>If &lt;mode&gt;=2, TA activates the unsolicited reporting of network information.  <b>network is UMTS</b>  <b>+CENG: &lt;ID&gt;,&lt;dl_uarfcn&gt;,&lt;mcc&gt;,&lt;mnc&gt;,&lt;lac&gt;,&lt;cellid&gt;,&lt;psc&gt;,&lt;rscp&gt;,&lt;rxlev&gt;,&lt;</b>  <b>tx_pwr&gt;</b>  <b>[+CENG: &lt;ID&gt;,&lt;dl_uarfcn&gt;,&lt;psc&gt;,&lt;rscp&gt;,&lt;ecno&gt;,&lt;pathloss&gt;...]</b>  <b>&lt;CR&gt;&lt;LF&gt;+CENG: &lt;ID&gt;,&lt;dl_uarfcn&gt;,&lt;psc&gt;,&lt;rscp&gt;,&lt;ecno&gt;,&lt;pathloss&gt;...]</b></p> <p>OK</p>
<p>Write Command  <b>AT+CENG=&lt;mode&gt;[,&lt;Ncell&gt;]</b></p>	<p>Response</p> <p>Switch on or off engineering mode. It will report +CENG: (network information) automatically if &lt;mode&gt;=2.</p> <p>OK</p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> Switch off engineering mode</p> <p><b>1</b> Switch on engineering mode(display the cell details)</p> <p><b>2</b> Switch on engineering mode, and activate the URC report of network information(display the cell information automatically)</p> <p><b>3</b> Switch on engineering mode, with limited URC report(display the concise cell information)</p> <p><b>4</b> display the serving cell information</p>

<b>&lt;Ncell&gt;</b>	
<b>0</b>	Un-display neighbor cell ID
<b>1</b>	Display neighbor cell ID
<b>&lt;cell&gt;</b>	
<b>0</b>	The serving cell
<b>1-6</b>	The index of the neighboring cell
<b>&lt;arfcn&gt;</b>	Absolute radio frequency channel number, in decimal format
<b>&lt;rxl&gt;</b>	Receive level, in decimal format
<b>&lt;rxq&gt;</b>	Receive quality, in decimal format
<b>&lt;mcc&gt;</b>	Mobile country code, in decimal format
<b>&lt;mnc&gt;</b>	Mobile network code, in decimal format
<b>&lt;bsic&gt;</b>	Base station identity code, in decimal format
<b>&lt;cellid&gt;</b>	Cell id, in hexadecimal format
<b>&lt;lac&gt;</b>	Location area code, in hexadecimal format
<b>&lt;rla&gt;</b>	Receive level access minimum, in decimal format
<b>&lt;txp&gt;</b>	Transmit power maximum CCCH, in decimal format
<b>&lt;TA&gt;</b>	Timing Advance, in decimal format
<b>&lt;ID&gt;</b>	Cell identifier
<b>&lt;dl_uarfcn&gt;</b>	UMTS assigned radio channel
<b>&lt;psc&gt;</b>	Primary scrambling code
<b>&lt;rscp&gt;</b>	Received Signal Code Power
<b>&lt;rxlev&gt;</b>	received signal strength in dBm
<b>&lt;tx_pwr&gt;</b>	UE TX power in dBm. If no TX, the value is 0.
<b>&lt;ecn0&gt;</b>	EC2N0 (dB - positive value presented positive) of serviceng cell.

	<pathloss> Path Loss ranges from 46 dB to 158 dB
Reference	

### 5.2.9 AT+SCLASS0 Store Class 0 SMS to SIM When Received Class 0 SMS

AT+SCLASS0 Store Class 0 SMS to SIM When Module Received Class 0 SMS	
Test Command <b>AT+SCLASS0=?</b>	Response <b>+SCLASS0: (list of supported&lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+SCLASS0?</b>	Response <b>+SCLASS0: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+SCLASS0=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Disable to store Class 0 SMS to SIM when module receives Class 0 SMS <b>1</b> Enable to store Class 0 SMS to SIM when module receives Class 0 SMS
Reference	

### 5.2.10 AT+CCID Show ICCID

AT+CCID Show ICCID	
Test Command <b>AT+CCID=?</b>	Response <b>OK</b>
Execution Command <b>AT+CCID</b>	Response <b>Ccid data</b>  <b>OK</b>
Reference	

## 5.2.11 AT+CMTE Set Critical Temperature Operating Mode or Query Temperature

AT+CMTE Set Critical Temperature Operating Mode or Query Temperature	
Read Command <b>AT+CMTE?</b>	Response <b>+CMTE: &lt;mode&gt;,&lt;Temperature&gt;</b>  <b>OK</b>
Write Command <b>AT+CMTE=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Disable temperature detection <b>1</b> Enable temperature detection  <b>&lt;Temperature&gt;</b> range from -40.00 to 95.00
Reference	<b>Note:</b> When temperature is extremely high or low, product will power off. URCs indicating the alert level "1" or "-1" are intended to enable the user to take appropriate precautions, such as protecting the module from exposure to extreme conditions, or saving or backing up data etc. Level "2" or "-2" URCs are followed by immediate shutdown.

## 5.2.12 AT+MORING Show State of Mobile Originated Call

AT+MORING Show State of Mobile Originated Call	
Test Command <b>AT+MORING=?</b>	Response <b>+MORING: (list of supported&lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+MORING?</b>	Response <b>+MORING: &lt;mode&gt;</b>  <b>OK</b>
Write Command	Response

<b>AT+MORING=&lt;mode&gt;</b>	<p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Unsolicited Result Code</p> <p><b>MO RING</b> the call is alerted.</p> <p><b>MO CONNECTED</b> the call is established.</p>
Parameters	<p><b>&lt;mode&gt;</b></p> <p><u>0</u> Not show call state of mobile originated call</p> <p><b>1</b> Show call state of mobile originated call. After the call number is dialed, the URC strings of MO RING will be sent if another call is alerted and the URC strings of MO CONNECTED will be sent if the call is established.</p>
Reference	

### 5.2.13 AT+CIURC Enable or Disable Initial URC Presentation

<b>AT+CIURC Enable or Disable Initial URC Presentation</b>	
Test Command <b>AT+CIURC=?</b>	Response <b>+CIURC: (list of supported&lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIURC?</b>	Response <b>+CIURC:&lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIURC=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> Disable URC presentation.</p> <p><u><b>1</b></u> Enable URC presentation</p>
Reference	<p><b>Note:</b></p> <p>When module is powered on and initialization procedure is over.</p>

URC "Call Ready" will be presented if <mode> is 1.

## 5.2.14 AT+CCALR Call Ready Query

AT+CCALR Call Ready Query	
Test Command <b>AT+CCALR=?</b>	Response <b>+CCALR: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CCALR?</b>	Response ME returns the status of result code presentation and an integer <n> which shows whether the module is currently ready for phone call. <b>+CCALR: &lt;mode&gt;</b>  <b>OK</b>
Parameters	<b>&lt;mode&gt;</b> A numeric parameter which indicates whether the module is ready for phone call. <b>0</b> Module is not ready for phone call <b>1</b> Module is ready for phone call
Reference	

## 5.2.15 AT+GSV Display Product Identification Information

AT+GSV Display Product Identification Information	
Execution Command <b>AT+GSV</b>	Response TA returns product information text <b>SIMCOM_Ltd</b> <b>SIMCOM_SIM5300E</b> <b>Revision:1551B01SIM5300E</b>  <b>OK</b>
Reference	

## 5.2.16 AT+SGPIO Control the GPIO

AT+SGPIO Control the GPIO	
Test Command <b>AT+SGPIO=?</b>	Response <b>+SGPIO: (0-1),(1,2,3,4,6,7,8,9,11,12),(0-1),(0-1)</b>  <b>OK</b>

Write Command <b>AT+SGPIO=</b> <b>&lt;operation&gt;,&lt;GPIO&gt;,&lt;function&gt;,&lt;level&gt;</b>	Response <b>OK</b> <b>ERROR</b>
Parameters	<p><b>&lt;Operation&gt;</b></p> <p><b>0</b> Set the GPIO function including the GPIO output and GPIO a the Keypad.</p> <p><b>1</b> Read the GPIO level. Please note that only when the gpio is set as input, user can use parameter 1 to read the GPIO level, otherwise the module will return "ERROR".</p> <p><b>&lt;GPIO&gt;</b> The GPIO you want to be set. (It has relations with the hardware,please refer to the hardware manual)</p> <p><b>&lt;function&gt;</b> Only when &lt;Operation&gt; is set to 0, this option takes effect.</p> <p><b>0</b> Set the GPIO to input.</p> <p><b>1</b> Set the GPIO to output</p> <p><b>&lt;level&gt;</b></p> <p><b>0</b> Set the GPIO low level</p> <p><b>1</b> Set the GPIO high level</p>
Reference	<p><b>Note:</b></p> <p>Only GPIO1, GPIO2, GPIO3, GPIO4, GPIO6, GPIO7, GPIO8, GPIO9 can be used as Keypad.</p>

## 5.2.17 AT+SPWM Generate the Pulse-Width-Modulation

<b>AT+SPWM Generate the Pulse-Width-Modulation</b>	
Test Command <b>AT+SPWM=?</b>	Response <b>+SPWM:(list of supported &lt;index&gt;s),(list of supported &lt;freq&gt;s),(list of supported &lt; duty ratio &gt;s)</b> <b>OK</b>
Write Command <b>AT+SPWM=&lt;index&gt;,&lt;freq&gt;,&lt;duty ratio&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;index&gt;</b> Integer type: the index number of PWM port, which value is 0-2; Current only support one channel,whether 1 or 2,the PWM port is the same.



	<p>1 Corresponding to PWM_OUT0 in the hardware circuit</p> <p>2 Corresponding to PWM_OUT1 in the hardware circuit</p> <p><b>&lt;freq&gt;</b> 400-10000 Hz.</p> <p><b>&lt;duty ratio&gt;</b> 0-100 percents</p>
Reference	

### 5.2.18 AT+SLEDS Set the Timer Period of Net Light

AT+SLEDS Set the Timer Period of Net Light	
<p>Test Command</p> <p><b>AT+SLEDS=?</b></p>	<p>Response</p> <p><b>+SLEDS: (list of supported&lt;mode&gt;s),(list of supported&lt;time_on&gt;s),(list of supported&lt;time_off&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+SLEDS?</b></p>	<p>Response</p> <p><b>+SLEDS: &lt;mode&gt;,&lt;timer_on&gt;,&lt;timer_off&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+SLEDS=&lt;mode&gt;,&lt;timer_on&gt;,&lt;timer_off&gt;</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;mode&gt;</b></p> <p><b>1</b> Set the timer period of net light while SIM5300E does not register to the network</p> <p><b>2</b> Set the timer period net light while SIM5300E has already registered to the network</p> <p><b>3</b> Set the timer period net light while SIM5300E is in the state of PPP communication</p> <p><b>&lt;timer_on&gt;</b> Timer period of "LED ON" in decimal format which range is 0 or 40-65535(ms)</p> <p><b>&lt;timer_off&gt;</b> Timer period of "LED OFF" in decimal format which range is 0 or 40-65535(ms)</p>
<p>Reference</p>	<p>The default value is :</p> <p><b>&lt;mode&gt;,&lt;timer_on&gt;,&lt;timer_off&gt;</b></p>

1,64,800  
2,64,3000  
3,64,300

## 5.2.19 AT+CNETLIGHT Close the Net Light or Open It to Shining

### AT+CNETLIGHT Close the Net Light or Open It to Shining

Test Command <b>AT+CNETLIGHT=?</b>	Response <b>+CNETLIGHT: (list of supported&lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CNETLIGHT?</b>	Response <b>+CNETLIGHT: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CNETLIGHT=&lt;mode&gt;</b>	Response <b>OK</b>  <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Close the net light <b><u>1</u></b> Open the net light to shining
Reference	

## 5.2.20 AT+CSDT Switch on or off Detecting SIM Card

### AT+CSDT Switch on or off Detecting SIM Card

Test Command <b>AT+CSDT=?</b>	Response <b>+CSDT: (list of supported&lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSDT?</b>	Response <b>+CSDT: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CSDT=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b>

	<b>0</b>	Switch off detecting SIM card
	<b>1</b>	Switch on detecting SIM card
Reference	<p>Note:</p> <p>User should select 8-pin SIM card holder to implement SIM card detection function.</p> <p>After plug out simcard,User should wait 2 seconds ,then plug in SIM card.</p>	

### 5.2.21 AT+CSMINS SIM Inserted Status Reporting

AT+CSMINS SIM Inserted Status Reporting	
Test Command <b>AT+CSMINS=?</b>	Response <b>+CSMINS: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSMINS?</b>	Response <b>+CSMINS: &lt;n&gt;,&lt;SIM inserted&gt;</b>  <b>OK</b>
Write Command <b>AT+CSMINS=&lt;n&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Unsolicited Result Code <b>+CSMINS: &lt;n&gt;,&lt;SIM inserted&gt;</b>
Parameters	<p><b>&lt;n&gt;</b> A numeric parameter to show an unsolicited event code indicating whether the SIM has been inserted or removed.</p> <p><b>0</b> Disable <b>1</b> Enable</p> <p><b>&lt;SIM inserted&gt;</b>A numeric parameter which indicates whether SIM card has been inserted.</p> <p><b>0</b> Not inserted <b>1</b> Inserted</p>
Reference	

### 5.2.22 AT+CSGS Netlight Indication of GPRS Status

AT+CSGS Netlight Indication of GPRS Status
--

Test Command <b>AT+CSGS=?</b>	Response <b>+CSGS: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CSGS?</b>	Response <b>+CSGS: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CSGS=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Disable <b>1</b> Enable, the netlight will be forced to enter into 64ms on/300ms off blinking state in GPRS data transmission service. Otherwise, the netlight state is not restricted.
Reference	

### 5.2.23 AT+SJDR Jamming detection

<b>AT+SJDR</b> Jamming detection	
Read Command <b>AT+SJDR?</b>	Response <b>+SJDR: &lt;status&gt;</b> or <b>+SJDR: &lt;status&gt;,&lt;mode&gt;,&lt;var&gt;,&lt;display&gt;,&lt;result&gt;</b>  <b>OK</b>
Write Command <b>Enable jamming detection</b> <b>AT+SJDR=&lt;status&gt;,&lt;mode&gt;[,&lt;var&gt;[,&lt;display&gt;]]</b>  Close jamming detection <b>AT+SJDR=0</b>	Response <b>OK</b>  Unsolicited result codes supported: <b>+SJDR: NO JAMMING</b> or <b>+SJDR: JAMMING DETECTED</b> or <b>+SJDR: INTERFERENCE DETECTED</b>
Parameters	<b>&lt;status&gt;</b> <b>0</b> disable jamming detection <b>1</b> enable jamming detection

	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> should inquire status by reading command;</p> <p><b>1</b> only report jamming status via URC from serial port;</p> <p><b>2</b> only report jamming status via the PIN;</p> <p><b>3</b> report jamming status via URC as well as the PIN.</p> <p><b>&lt;var&gt;</b></p> <p><b>1-255</b> 255 is default value</p> <p>The threshold to separate “+SJDR: JAMMING DETECTED” from “+SJDR: INTERFERENCE DETECTED” (while the signal strength variance is higher than &lt;var&gt;, there could be industrial interferences, and “+SJDR: INTERFERENCE DETECTED” is reported).</p> <p><b>&lt;display&gt;</b></p> <p><b>1</b> report jamming status via URC when jamming status changed.(only when &lt;mode&gt; is set to “1” or “3”)</p> <p><b>0</b> report jamming status via URC every 3000ms. (only when &lt;mode&gt; is set to “1” or “3”)</p>
Reference	<p><b>Note:</b></p> <p>When you query jamming detection status after enable jamming detection mode, you will get the URC of the format below:</p> <p>+SJDR:1,&lt;mode&gt;,&lt;var&gt;,&lt;display&gt;,&lt;result&gt;</p> <p>&lt;result&gt;=0, means no jamming.</p> <p>&lt;result&gt;=1, means jamming is detected.</p> <p>&lt;result&gt;=2, means industrial interference is detected.</p> <p>“+SJDR: INTERFERENCE DETECTED” indicates industrial interference which signifies unintentional radio link disturbances by strong industrial radio sources.G</p>

## 5.2.24 AT+CNMP Selection of Radio Access Technology

AT+CNMP Selection of Radio Access Technology	
Test Command <b>AT+CNMP=?</b>	Response <b>+CNMP: (list of supported &lt;Act&gt;s) ,(list supported&lt;PreferredAct&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CNMP?</b>	<b>+CNMP : &lt;Act&gt;,[&lt;PreferredAct&gt;]</b>  <b>OK</b>

Write Command <b>AT+CNMP=&lt;Act&gt;[,&lt;PreferredAct&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;Act&gt;</b> indicates the radio access technology and may be</p> <p><b>2</b> GSM/UMTS automatic mode</p> <p><b>13</b> GSM single mode</p> <p><b>14</b> UMTS single mode</p> <p><b>&lt;PreferredAct&gt;</b> This parameter is used for network registration in case of &lt;Act&gt;=2.</p> <p><b>13</b> RAT GSM</p> <p><b>14</b> RAT UMTS(default)</p>
Reference	<p><b>Note:</b></p> <p>This command forces the selection of the Radio Access Technology (RAT) in the protocol stack.</p> <p>The single mode is set by the first parameter &lt;Act&gt;. In single mode, ME register only the preferred network.</p> <p>In automatic mode, If gotten no preferred registration, ME is currently searching a new operator to register to.</p>

### 5.2.25 AT+CSACT Choose the network-attached Status

<b>AT+CSACT</b> Choose the network-attached Status	
Read Command <b>AT+CSACT?</b>	Response <b>+CSACT: &lt;Act&gt;, &lt;rac&gt;,&lt;AcT_creg&gt;,&lt;AcT_cgreg&gt;</b>  <b>OK</b>
Write Command <b>AT+CSACT=[&lt;AcT_creg&gt;) ,&lt;AcT_cgreg&gt;</b>	Response <b>OK</b>
Parameters	<p><b>&lt;Act&gt;</b> indicates the radio access technology and values can be:</p> <p><b>0</b> CAT_ACT_GSM</p> <p><b>1</b> CAT_ACT_GSM_COMPACT</p> <p><b>2</b> CAT_ACT_UTRAN</p> <p><b>3</b> CAT_ACT_GSM_EDGE</p> <p><b>4</b> CAT_ACT_UTRAN_HSDPA</p> <p><b>5</b> CAT_ACT_UTRAN_HSUPA</p> <p><b>6</b> CAT_ACT_UTRAN_HSDPA_AND_HSUPA</p> <p><b>7</b> CAT_ACT_E_UTRAN</p>

	<p><b>&lt;rac&gt;</b> string type; one byte routing area code in hexadecimal format.</p> <p><b>&lt;AcT_creg&gt;</b></p> <p><b>0</b> disable the command “AT+CREG” to return parameter&lt;AcT&gt;</p> <p><b>1</b> enable the command “AT+CREG” to return parameter&lt;AcT&gt;</p> <p><b>&lt;AcT_cgreg&gt;</b></p> <p><b>0</b> disable the command“AT+CGREG” to return parameter &lt;AcT&gt;&amp;&lt;rac&gt;.</p> <p><b>1</b> enable the command“AT+CGREG” to return parameter &lt;AcT&gt;&amp;&lt;rac&gt;.</p>
Reference	<p><b>Note:</b></p> <p>Read command returns the network-attached mode.</p> <p>Write command controls the presentation of &lt;AcT&gt;in +CREG and &lt;AcT&gt;&amp;&lt;rac&gt;in +CGREG</p>

## 5.2.26 AT+GSMBUSY Reject Incoming Call

AT+GSMBUSY Reject Incoming Call	
Test Command <b>AT+GSMBUSY=?</b>	<p>Response</p> <p><b>+GSMBUSY: (list of supported&lt;mode&gt;s)</b></p> <p><b>OK</b></p>
Read Command <b>AT+GSMBUSY?</b>	<p>Response</p> <p><b>+GSMBUSY: &lt;mode&gt;</b></p> <p><b>OK</b></p>
Write Command <b>AT+GSMBUSY=&lt;mode&gt;</b>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;error&gt;</b></p>
Parameters	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> Enable incoming call</p> <p><b>1</b> Forbid all incoming calls</p> <p><b>2</b> Forbid incoming voice calls but enable CSD calls</p>
Reference	<p><b>Note:</b></p> <p>The parameter is not saved if the module power down.</p>

## 5.2.27 AT+CDRIND CS Voice/Data Call Termination Indication

AT+CDRIND CS Voice/Data Call Termination Indication	
Test Command <b>AT+CDRIND=?</b>	Response <b>+CDRIND: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CDRIND?</b>	Response <b>+CDRIND: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CDRIND=&lt;n&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Unsolicited result code When enabled, an unsolicited result code is returned after the connection has been terminated <b>+CDRIND: &lt;type&gt;</b>
Parameter	<b>&lt;n&gt;</b> A numeric parameter to enable an unsolicited event code indicating whether a CS voice call, CS data has been terminated. <b>0</b> Disable <b>1</b> Enable  <b>&lt;type&gt;</b> Connection type <b>0</b> CSV connection <b>1</b> CSD connection <b>2</b> PPP connection
Reference	

## 5.2.28 AT+CGSMCLASS Change GPRS Multislot Class

AT+CGMSCLASS Change GPRS Multislot Class	
Test Command <b>AT+CGMSCLASS=?</b>	Response <b>+CGMSCLASS: (1-12), (1-12)</b>  <b>OK</b>



Read Command <b>AT+CGMSCLASS?</b>	Response <b>+CGMSCLASS: &lt;GPRS_class&gt;,&lt;EGPRS_class&gt;</b>  <b>OK</b>
Write Command <b>AT+CGMSCLASS=&lt;GPRS_class&gt;</b> <b>[,&lt;EGPRS_class&gt;]</b>	Response <b>OK</b>  <b>If error is related to ME functionality:</b> <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;GPRS_class&gt;</b> GPRS multi-slot class  <b>&lt;EGPRS_class&gt;</b> EGPRS multi-slot class
Reference	Note

## 5.2.29 AT+CLVL Loud Speaker Volume Level

<b>AT+CLVL Loud Speaker Volume Level</b>	
Test Command <b>AT+CLVL=?</b>	Response <b>+CLVL: (list of supported &lt;level&gt;s)</b>  <b>OK</b>  <b>If error is related to ME functionality:</b> <b>+CME ERROR: &lt;err&gt;</b>
Read Command <b>AT+CLVL?</b>	Response <b>+CLVL: &lt;level&gt;</b>  <b>OK</b>  <b>If error is related to ME functionality:</b> <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CLVL=&lt;level&gt;</b>	Response <b>OK</b>  <b>If error is related to ME functionality:</b> <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;level&gt;</b> Integer type value with manufacturer specific range (smallest value represents the lowest sound level) <b>0-100</b>
Reference GSM 07.07 [13]	Note

## 5.2.30 AT+CMIC Change the Microphone Gain Level

AT+CMIC Change the Microphone Gain Level																																	
Test Command <b>AT+CMIC=?</b>	Response <b>+CMIC: (list of supported &lt;channel&gt;s),(list of supported &lt;gainlevel&gt;s)</b>  <b>OK</b>																																
Read Command <b>AT+CMIC?</b>	Response <b>+CMIC: &lt;channel&gt;,&lt;gainlevel&gt;</b> <b>OK</b>																																
Write Command <b>AT+CMIC=&lt;channel&gt;,&lt;gainlevel&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>																																
Parameters	<p><b>&lt;channel&gt;</b>  <b>0</b>            Main audio handset channel</p> <p><b>&lt;gainlevel&gt;</b>    Int:0 – 15</p> <table border="0"> <tr><td><b>0</b></td><td>-96dB</td></tr> <tr><td><b>1</b></td><td>-9</td></tr> <tr><td><b>2</b></td><td>-7.5</td></tr> <tr><td><b>3</b></td><td>-6</td></tr> <tr><td><b>4</b></td><td>-4.5</td></tr> <tr><td><b>5</b></td><td>-3</td></tr> <tr><td><b>6</b></td><td>-1.5</td></tr> <tr><td><b>7</b></td><td>0</td></tr> <tr><td><b>8</b></td><td>1.5</td></tr> <tr><td><b>9</b></td><td>3</td></tr> <tr><td><b>10</b></td><td>4.5</td></tr> <tr><td><b>11</b></td><td>6</td></tr> <tr><td><b>12</b></td><td>7.5</td></tr> <tr><td><b>13</b></td><td>9</td></tr> <tr><td><b>14</b></td><td>10.5</td></tr> <tr><td><b>15</b></td><td>12</td></tr> </table>	<b>0</b>	-96dB	<b>1</b>	-9	<b>2</b>	-7.5	<b>3</b>	-6	<b>4</b>	-4.5	<b>5</b>	-3	<b>6</b>	-1.5	<b>7</b>	0	<b>8</b>	1.5	<b>9</b>	3	<b>10</b>	4.5	<b>11</b>	6	<b>12</b>	7.5	<b>13</b>	9	<b>14</b>	10.5	<b>15</b>	12
<b>0</b>	-96dB																																
<b>1</b>	-9																																
<b>2</b>	-7.5																																
<b>3</b>	-6																																
<b>4</b>	-4.5																																
<b>5</b>	-3																																
<b>6</b>	-1.5																																
<b>7</b>	0																																
<b>8</b>	1.5																																
<b>9</b>	3																																
<b>10</b>	4.5																																
<b>11</b>	6																																
<b>12</b>	7.5																																
<b>13</b>	9																																
<b>14</b>	10.5																																
<b>15</b>	12																																
Reference	Note <ul style="list-style-type: none"> <li>Please refer to actual model for channel number.</li> </ul>																																

## 5.2.31 AT+SIDET Change the Side Tone Gain Level

**AT+SIDET Change the Side Tone Gain Level**

Test Command <b>AT+SIDET=?</b>	Response <b>+SIDET: (list of supported &lt;channel&gt;s),(list of supported &lt;gainlevel&gt;s)</b>  <b>OK</b>
Read Command <b>AT+SIDET?</b>	Response <b>+SIDET: &lt;channel&gt;,&lt;gainlevel&gt;</b> <b>OK</b>
Write Command <b>AT+SIDET=&lt;channel&gt;,&lt;gainlevel&gt;</b>	Response <b>OK</b>  <b>ERROR</b>
Parameters	<b>&lt;channel&gt;</b> <b>0</b> Main audio handset channel  <b>&lt;gainlevel&gt;</b> <b>Int: 0 – 16</b>
Reference	Note <ul style="list-style-type: none"> <li>Please refer to actual model for channel number.</li> </ul>

### 5.2.32 AT+ECHO Echo Cancellation Control

<b>AT+ECHO Echo Cancellation Control</b>	
Test Command <b>AT+ECHO=?</b>	Response <b>+ECHO: (list of supported &lt;channel&gt;s), (list of supported &lt;es&gt;s)</b>  <b>OK</b>
Read Command <b>AT+ECHO?</b>	Response <b>+ECHO: &lt; channel &gt;,&lt;es&gt;</b>  <b>OK</b>
Write Command <b>AT+ECHO=&lt; channel &gt;,&lt;es&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt; channel &gt;</b> Audio channel <b>0</b> Main audio handset channel  <b>&lt;es&gt;</b> Echo suppression <b>0-9</b> the bigger the value, the stronger the restraint.

Reference	Note <ul style="list-style-type: none"> <li>Please refer to actual model for channel number.</li> </ul>
-----------	---

### 5.2.33 AT+CALM Alert Sound Mode

AT+CALM Alert Sound Mode	
Test Command <b>AT+CALM=?</b>	Response <b>+CALM: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Read Command <b>AT+CALM?</b>	Response <b>+CALM: &lt;mode&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CALM=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Normal mode <b>1</b> Silent mode (all sounds from ME are prevented)
Reference GSM 07.07 [13]	Note: If user change CALM from silent mode to normal mode during an incoming call, module will still maintain in silent mode during this phone call alert.

### 5.2.34 AT+CALS Alert Sound Select

AT+CALS Alert Sound Select	
Test Command <b>AT+CALS=?</b>	Response <b>+CALS: (list of supported &lt;n&gt;s),(list of supported &lt;mode&gt;s)</b>  <b>OK</b>

	<p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Read Command <b>AT+CALS?</b></p>	<p>Response <b>+CALS: &lt;n&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command <b>AT+CALS=&lt;n&gt;[,&lt;mode&gt;]</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;n&gt;</b> <b>0-19</b>            Alert sound type</p> <p><b>&lt;mode&gt;</b> if this parameter is set, the module just play the selected alert without configuring it.</p> <p><b>0</b>                stop playing</p> <p><b>1</b>                start to play the selected alert sound &lt;n&gt;.</p>
<p>Reference</p>	<p>Note</p>

### 5.2.35 AT+CMGDA Delete All SMS

<b>AT+CMGDA Delete All SMS</b>	
<p>Test Command <b>AT+CMGDA=?</b></p>	<p>Response <b>+CMGDA: (list of supported &lt;type&gt;s)</b></p> <p><b>OK</b></p> <p><b>+CMS ERROR: &lt;err&gt;</b></p>
<p>Write Command <b>AT+CMGDA=&lt;type&gt;</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;type&gt;</b></p> <p>1) If text mode:</p> <p><b>"DEL READ"</b>                    Delete all read messages</p> <p><b>"DEL UNREAD"</b>                Delete all unread messages</p> <p><b>"DEL SENT"</b>                    Delete all sent SMS</p> <p><b>"DEL UNSENT"</b>                Delete all unsent SMS</p>

	<b>"DEL INBOX"</b> Delete all received SMS <b>"DEL ALL"</b> Delete all SMS  2) If PDU mode: <b>1</b> Delete all read messages <b>2</b> Delete all unread messages <b>3</b> Delete all sent SMS <b>4</b> Delete all unsent SMS <b>5</b> Delete all received SMS <b>6</b> Delete all SMS
Max Response Time	5s ( delete 1 message ) 25s ( delete 50 messages ) 25s ( delete 150 messages )
Reference	Note

### 5.2.36 AT+SIMTONE Generate Specifically Tone

AT+SIMTONE Generate Specifically Tone	
Test Command <b>AT+SIMTONE=?</b>	Response <b>+SIMTONE: (0,1),(100-3900),(200-25500),(0,100-25500),(0-500000)</b>  <b>OK</b>
Write Command <b>AT+SIMTONE=&lt;mode&gt;[,&lt;frequency&gt;,&lt;periodOn&gt;,&lt;periodOff&gt;[,&lt;duration&gt;]]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Unsolicited Result Code The playing is stopped or completed. <b>+SIMTONE: 0</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Stop playing tone <b>1</b> Start playing tone  <b>&lt;frequency&gt;</b> The frequency of tone to be generated  <b>&lt;periodOn&gt;</b> The period of generating tone, must be multiple of 100

	<p><b>&lt;periodOff&gt;</b> The period of stopping tone, must be multiple of 100</p> <p><b>&lt;duration&gt;</b> Duration of tones in milliseconds</p>
Reference	Note

### 5.2.37 AT+STTONE Play SIM Toolkit Tone

AT+STTONE Play SIM Toolkit Tone	
<p>Test Command</p> <p><b>AT+STTONE=?</b></p>	<p>Response</p> <p><b>+STTONE: (list of supported &lt;mode&gt;s),(list of supported &lt;tone&gt;s),(list of supported &lt;duration&gt;s)</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Write Command</p> <p><b>AT+STTONE=&lt;mode&gt;[,&lt;tone&gt;,&lt;duration&gt;]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Unsolicited Result Code</p> <p>The playing is stopped or completed.</p> <p><b>+STTONE: 0</b></p>
Parameters	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> Stop playing tone</p> <p><b>1</b> Start playing tone</p> <p><b>&lt;tone&gt;</b> Numeric type</p> <p><b>1</b> Dial Tone</p> <p><b>2</b> Called Subscriber Busy</p> <p><b>3</b> Congestion</p> <p><b>4</b> Radio Path Acknowledge</p> <p><b>5</b> Radio Path Not Available / Call Dropped</p> <p><b>6</b> Error / Special information</p> <p><b>7</b> Call Waiting Tone</p> <p><b>8</b> Ringing Tone</p> <p><b>16</b> General Beep</p> <p><b>17</b> Positive Acknowledgement Tone</p> <p><b>18</b> Negative Acknowledgement or Error Tone</p>

	<p><b>19</b> Indian Dial Tone</p> <p><b>20</b> American Dial Tone</p> <p><b>&lt;duration&gt;</b> Numeric type, in milliseconds. Max requested value =255*60*1000=15300000ms(supported range=3-15300000).</p>
Reference	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The default &lt;tone&gt;, if none is entered, it should be General Beep.</li> <li>The default &lt;duration&gt;, if none is entered, it should be 500ms.</li> </ul>

### 5.2.38 AT+CLDTMF Local DTMF Tone Generation

AT+CLDTMF Local DTMF Tone Generation	
<p>Test Command</p> <p><b>AT+CLDTMF=?</b></p>	<p>Response</p> <p><b>+CLDTMF: (1-100),(0-9,A,B,C,D,*,#,E,F,G),(40-500),(0,1,2)</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CLDTMF=&lt;n&gt;,&lt;DTMF string&gt;[,&lt;basicdur&gt;[,&lt;side&gt;]]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Unsolicited Result Code The playing is completed. <b>+CLDTMF: END</b></p>
<p>Execution Command</p> <p><b>AT+CLDTMF</b></p>	<p>Response</p> <p><b>OK</b></p> <p>Abort any DTMF tone currently being generated and any DTMF tone sequence.</p>
<p>Parameters</p>	<p><b>&lt;n&gt;</b> (1-100) A numeric parameter measured in units of &lt;basicdur&gt; which indicates the duration of all DTMF tones in &lt;DTMF string&gt;.</p> <p><b>&lt;DTMF string&gt;</b> A string parameter (string should be included in quotation marks) which has a max length of 20 chars of form &lt;DTMF&gt;, separated by commas.</p> <p><b>&lt;DTMF&gt;</b> A single ASCII chars in the set 0-9,#,*,A-G. "E" represents 1400HZ, "F" represents 2300HZ, and "G" represents 1000HZ.</p> <p><b>&lt;basicdur&gt;</b> (40-500) A numeric parameter in terms of ms which indicates the basic duration time, default value is 100.</p>



	<p><b>&lt;side&gt;</b> Indicates which side the tone will be played on.</p> <p><u>0</u> local side</p> <p>1 remote side</p> <p>2 both sides</p>
Reference	Note

### 5.2.39 AT+SNDLEVEL Set the Sound Level of Special AT Command

AT+SNDLEVEL Set the Sound Level of Special AT Command	
Test Command <b>AT+SNDLEVEL=?</b>	Response <b>+SNDLEVEL: (list of supported &lt;&lt;AtEntity &gt;s),(list of supported &lt; SndLevel &gt;s)</b>  <b>OK</b>
Read Command <b>AT+SNDLEVEL?</b>	Response <b>+SNDLEVEL: &lt;AtEntity&gt;,&lt;SndLevel&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+SNDLEVEL=&lt;AtEntity&gt;,&lt;SndLevel&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;AtEntity&gt;</b></p> <p><b>0</b> adjust the sound level of STTONE</p> <p><b>1</b> adjust the sound level of SIMTONE</p> <p><b>2</b> adjust the sound level of CLDTMF</p> <p><b>3</b> adjust the sound level of ALERT</p> <p><b>&lt;SndLevel&gt;</b></p> <p><b>0</b> min volume</p> <p><b>1</b> low volume</p> <p><b><u>2</u></b> normal volume (Default value)</p> <p><b>3</b> high volume</p>
Reference	Note The default value is : 0,2

1,2  
2,2  
3,2

## 5.2.40 AT+CHF Configure Hands Free Operation

AT+CHF Configure Hands Free Operation	
Test Command <b>AT+CHF=?</b>	Response <b>+CHF: (list of supported &lt;ind&gt;s),(list of supported &lt;state&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CHF?</b>	Response <b>+CHF: &lt;ind&gt;,&lt;state&gt;</b>  <b>OK</b>
Write Command <b>AT+CHF=&lt;ind&gt;[,&lt;state&gt;]</b>	Response <b>OK</b> <b>ERROR</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Unsolicited Result Code <b>+CHF: &lt;state&gt;</b>
Parameters	<b>&lt;ind&gt;</b> <b>0</b> Unsolicited result code disabled <b>1</b> Unsolicited result code enabled  <b>&lt;state&gt;</b> <b>0</b> Main audio handset channel
Reference	Note

## 5.2.41 AT+CHFA Swap the Audio Channels

AT+CHFA Swap the Audio Channels	
Test Command <b>AT+CHFA=?</b>	Response <b>+CHFA: (0 = NORMAL_AUDIO)</b>  <b>OK</b>

Read Command <b>AT+CHFA?</b>	Response <b>+CHFA: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CHFA=&lt;n&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> Main audio handset channel
Reference	Note

### 5.2.42 AT+DTAM Set Local or Remote Audio Play

<b>AT+DTAM Set Local or Remote Audio Play</b>	
Read Command <b>AT+DTAM?</b>	Response <b>+DTAM: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+DTAM=&lt;mode&gt;</b>	Response <b>OK</b>
Parameter	<b>&lt;mode&gt;</b> <b>0</b> Play audio locally (Default value) <b>1</b> Play audio remotely
Reference	

### 5.2.43 AT+CTTS TTS Operation

<b>AT+CTTS TTS Operation</b>	
Test Command <b>AT+CTTS=?</b>	Response  <b>OK</b>

Read Command <b>AT+CTTS?</b>	Response <b>+CTTS: &lt;status&gt;</b>  <b>OK</b>
Write Command <b>AT+CTTS=&lt;mode&gt;,&lt;text&gt;</b>	Response if<mode>=0, response: <b>OK</b>  if<mode>=1 or 2 or 3, response: <b>OK</b>  <b>+CTTS:0 //speech palyed over</b>  If error is related to MS functionality, response: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;status&gt;</b> <b>0</b> idle mode <b>1</b> play mode  <b>&lt;mode&gt;</b> <b>0</b> Stop playing speech. <b>1</b> Start to play synthetic speech; <text> is in <b>UCS2</b> coding format. <b>2</b> Start to play synthetic speech; <text> is in <b>ASCII</b> coding format. Chinese text is in <b>GBK</b> coding format. <b>3</b> Start to play synthetic speech; <text> is in <b>Italian</b> .  <b>&lt;text&gt;</b> The text which is synthetized to speech to be played. If <mode>=1, maximum data length is 540 Bytes; if <mode>=2, maximum data length is 270 Bytes; if <mode>=3, maximum data length is 250 Bytes;
Reference	

## 5.2.44 AT+CTTSPARAM Set TTS Parameters

<b>AT+CTTSPARAM Set TTS Parameters</b>	
Test Command <b>AT+CTTSPARAM=?</b>	Response <b>+CTTSPARAM: (0-2),(0-3),(0-3),(0-2),(0-2),(0-1),(0-1)</b>  <b>OK</b>

<p>Read Command <b>AT+CTTSPARAM?</b></p>	<p>Response <b>+CTTSPARAM: &lt;volume&gt;,&lt;sysvolume&gt;,&lt;digitmode&gt;,&lt;pitch&gt;,&lt;speed&gt;,&lt;playover&gt;,&lt;savemode&gt;</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CTTSPARAM=&lt;volume&gt;[,&lt;sysvolume&gt;[,&lt;digitmode&gt;[,&lt;pitch&gt;[,&lt;speed&gt;[,&lt;playover&gt;[,&lt;savemode&gt;]]]]]]]</b></p>	<p>Response <b>OK</b></p> <p>If error is related to MS functionality, response: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameter</p>	<p><b>&lt;volume&gt;</b> TTS volume</p> <p><b>0</b> low volume</p> <p><b><u>1</u></b> normal volume(Default value)</p> <p><b>2</b> high volume</p> <p><b>&lt;sysvolume&gt;</b> System volume</p> <p><b>0</b> min volume</p> <p><b>1</b> low volume</p> <p><b><u>2</u></b> normal volume (Default value)</p> <p><b>3</b> high volume</p> <p><b>&lt;digitmode&gt;</b> read digital mode</p> <p><b><u>0</u></b> auto mode, digital mode is high priority (Default value)</p> <p><b>1</b> auto mode, telegraph mode is high priority</p> <p><b>2</b> telegraph mode</p> <p><b>3</b> digital mode</p> <p><b>&lt;pitch&gt;</b> pitch</p> <p><b>0</b> low pitch</p> <p><b><u>1</u></b> normal pitch (Default value)</p> <p><b>2</b> high pitch</p> <p><b>&lt;speed&gt;</b> tone speed</p> <p><b>0</b> slow speed</p> <p><b><u>1</u></b> normal speed (Default value)</p> <p><b>2</b> quick speed</p> <p><b>&lt;playover&gt;</b></p> <p><b><u>0</u></b> return +CTTS: 0 when finish playing TTS (Default value)</p> <p><b>1</b> return +CTTS:0,1 when finish playing TTS, and return +CTTS:0 later to indicate that the TTS session ends.</p> <p><b>&lt;savemode&gt;</b></p> <p><b><u>0</u></b> forbid running another TTS playing command when playing</p>

	<p>TTS (Default value)</p> <p><b>1</b> can input less than or equal to 20 TTS playing commands when playing TTS, all the input text will be played by sequence . +CTTS:0 is only returned for one time when all the text playing finished.</p>
Reference	<p><b>Note:</b></p> <p>The parameter &lt;digitmode&gt;,&lt;playover&gt;are unavailable for Italian TTS</p>

## 5.2.45 AT+CTTSPAUSE Set Italian TTS Punctuation Pause Time

AT+CTTSPAUSE Set Italian TTS Punctuation Pause Time	
<p>Test Command</p> <p><b>AT+CTTSPAUSE=?</b></p>	<p>Response</p> <p><b>+CTTSPAUSE: (0-1),("&amp;quot;,&amp;quot;"),(150-5000)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CTTSPAUSE?</b></p>	<p>Response</p> <p><b>+CTTSPAUSE: &lt;flag&gt;,&lt;punctuation&gt;,&lt;time&gt;),(&lt;punctuation&gt;,&lt;time&gt;)</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CTTSPAUSE=&lt;flag&gt;[,&lt;punctuation&gt;,&lt;time&gt;]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to MS functionality, response: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameter</p>	<p><b>&lt;flag&gt;</b> Reset/set the punctuation pause time</p> <p><b>0</b> reset all the punctuation pause time to default time</p> <p><b><u>1</u></b> set punctuation pause time</p> <p><b>&lt;punctuation&gt;</b> Supported punctuation</p> <p><b>"&amp;quot;</b> comma</p> <p><b>"&amp;quot;</b> period</p> <p><b>&lt;time&gt;</b> The punctuation pause time</p>
<p>Reference</p>	<p><b>Note</b></p> <ol style="list-style-type: none"> <li>1. This feature only supports Italian, not support Chinese or English.</li> <li>2. If there is continues punctuation in the text string, the pause time is the sum of all the punctuations.</li> </ol>

## 5.2.46 AT+SPIC Times Remained to Input SIM PIN/PUK

AT+SPIC Times Remained to Input SIM PIN/PUK	
Execution Command <b>AT+SPIC</b>	Response <b>+SPIC: &lt;pin1&gt;,&lt;pin2&gt;,&lt;puk1&gt;,&lt;puk2&gt;</b>  <b>OK</b>
Parameter	<b>&lt;pin1&gt;</b> Times remained to input chv1 <b>&lt;pin2&gt;</b> Times remained to input chv2 <b>&lt;puk1&gt;</b> Times remained to input puk1 <b>&lt;puk2&gt;</b> Times remained to input puk2
Reference	

SIMCOM CONFIDENTIAL FILE

## 6. AT Commands for Network Support

### 6.1 Overview of ATC for Network Support

Command	Description
AT+CGATT	Attach or detach from GPRS service
AT+CGDCONT	Define PDP context
AT+CGQMIN	Quality of service profile (minimum acceptable)
AT+CGQREQ	Quality of service profile (requested)
AT+CGACT	PDP context activate or deactivate
AT+CGDATA	Enter data state
AT+CGPADDR	Show PDP address
AT+CGCLASS	GPRS mobile station class
AT+CGEREP	Control unsolicited GPRS event reporting
AT+CGREG	Network registration status
AT+CGSMS	Select service for MO SMS messages
AT+CGEQMIN	3G Quality of Service Profile(Minimum acceptable)
AT+CGEQREQ	3G Quality of Service Profile (Requested)
AT+CGEGNEQ	3G Quality of Service Profile (Negotiated)

### 6.2 Detailed Descriptions of ATC for GPRS Support

#### 6.2.1 AT+CGATT Attach or Detach from GPRS Service

AT+CGATT Attach or Detach from GPRS Service	
Test Command AT+CGATT=?	Response +CGATT: (list of supported <state>s)  OK
Read Command AT+CGATT?	Response +CGATT: <state>  OK



Write Command <b>AT+CGATT=&lt;state&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;state&gt;</b> Indicates the state of GPRS attachment <b>0</b> Detached <b>1</b> Attached Other values are reserved and will result in an ERROR response to the Write Command.
Reference	

## 6.2.2 AT+CGDCONT Define PDP Context

AT+CGDCONT Define PDP Context	
Test Command <b>AT+CGDCONT=?</b>	Response <b>+CGDCONT: (range of supported &lt;cid&gt;s),&lt;PDP_type&gt;,,,(list of supported &lt;d_comp&gt;s),(list of supported&lt;h_comp&gt;s)</b> <b>[&lt;CR&gt;&lt;LF&gt;+CGDCONT: (range of supported &lt;cid&gt;s), &lt;PDP_type&gt;,,,(list of supported&lt;d_comp&gt;s),(list of supported &lt;h_comp&gt;s) [...]]</b>  <b>OK</b>
Read Command <b>AT+CGDCONT?</b>	Response <b>+CGDCONT:</b> <b>&lt;cid&gt;,&lt;PDP_type&gt;,&lt;APN&gt;,&lt;PDP_addr&gt;,&lt;data_comp&gt;,&lt;head_comp&gt;</b> <b>[&lt;CR&gt;&lt;LF&gt;+CGDCONT:&lt;cid&gt;,&lt;PDP_type&gt;,&lt;APN&gt;,&lt;PDP_addr&gt;,&lt;data_comp&gt;,&lt;head_comp&gt;</b> <b>[...]]</b>  <b>OK</b>
Write Command <b>AT+CGDCONT=&lt;cid&gt;[,&lt;PDP_type&gt;[,&lt;APN&gt;[,&lt;PDP_addr&gt;[,&lt;d_comp&gt;[,&lt;h_comp&gt;]]]]]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;cid&gt;</b> (PDP Context Identifier) a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1) is returned by the test form of the command.

	<p><b>&lt;PDP_type&gt;</b> (Packet Data Protocol type)</p> <p><b>IP</b> Internet Protocol (IETF STD 5)</p> <p><b>IPv4</b> Internet Protocol, version 6 (IETF RFC 2460)</p> <p><b>IPv4v6</b> Virtual &lt;PDP_type&gt;introduced to handle dual IP stack UE capability (see 3GPPTS 24.301[83])</p> <p><b>&lt;APN&gt;</b> (Access Point Name) A string parameter (string should be included in quotation marks) which is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.The default value is NULL.</p> <p><b>&lt;PDP_addr&gt;</b> A string parameter (IP address).  <b>Format:</b>"&lt;n&gt;.&lt;n&gt;.&lt;n&gt;.&lt;n&gt;" where &lt;n&gt;=0..255          If the value is null or equals 0.0.0.0 a dynamic address will be requested. The allocated address may be read using the +CGPADDR command</p> <p><b>&lt;d_comp&gt;</b> A numeric parameter that controls PDP data compression  <b>0 –PDP</b> data compression off (default if value is omitted)</p> <p><b>&lt;h_comp&gt;</b> A numeric parameter that controls PDP data compression  <b>0 –PDP</b> header compression off (default if value is omitted)</p>
Reference	

### 6.2.3 AT+CGQMIN Quality of Service Profile (Minimum Acceptable)

AT+CGQMIN	Quality of Service Profile (Minimum Acceptable)
Test Command <b>AT+CGQMIN=?</b>	<p>Response</p> <p><b>+CGQMIN:</b> &lt;PDP_type&gt;,(list of supported &lt;precedence&gt;s),(list of supported &lt;delay&gt;s),(list of supported &lt;reliability&gt;s),(list of supported &lt;peak&gt;s),(list of supported &lt;mean&gt;s)</p> <p>[&lt;CR&gt;&lt;LF&gt;+CGQMIN: &lt;PDP_type&gt;,(list of supported &lt;precedence&gt; s),(list of supported &lt;delay&gt;s),(list of supported &lt;reliability&gt;s),(list of supported &lt;peak&gt;s),(list of supported &lt;mean&gt;s)</p> <p>[...]</p> <p>OK</p>

<p>Read Command <b>AT+CGQMIN?</b></p>	<p>Response <b>+CGQMIN: &lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;</b> <b>[&lt;CR&gt;&lt;LF&gt;+CGQMIN:</b> <b>&lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;</b> <b>[...]]</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CGQMIN=&lt;cid&gt;[,&lt;precedence&gt;[,&lt;delay&gt;[,&lt;reliability&gt;[,&lt;peak&gt;[,&lt;mean&gt;]]]]]</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;cid&gt;</b> <b>1..310</b> A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)</p> <p><b>&lt;precedence&gt;</b> <b>0</b> QOS precedence class subscribed value <b>1.. 3</b> QOS precedence class</p> <p><b>&lt;delay&gt;</b> <b>0</b> QOS delay class subscribed value <b>1..4</b> QOS delay class subscribed</p> <p><b>&lt;reliability&gt;</b> <b>0</b> QOS reliability class subscribed value <b>1..5</b> QOS reliability class.</p> <p><b>&lt;peak&gt;</b> <b>0</b> QOS peak throughput class subscribed value <b>1.. 9</b> QOS peak throughput class</p> <p><b>&lt;mean&gt;</b> <b>0</b> QOS mean throughput class subscribed value <b>1..18</b> QOS mean throughput class <b>31</b> QOS mean throughput class best effort</p>
<p>Reference</p>	<p>Note</p>

## 6.2.4 AT+CGQREQ Quality of Service Profile (Requested)

**AT+CGQREQ Quality of Service Profile (Requested)**

<p>Test Command <b>AT+CGQREQ=?</b></p>	<p>Response  <b>+CGQREQ: &lt;PDP_type&gt;,(list of supported &lt;precedence&gt;s),(list of supported &lt;delay&gt;s),(list of supported &lt;reliability&gt;s),(list of supported &lt;peak&gt;s),(list of supported &lt;mean&gt;s)</b>  <b>[&lt;CR&gt;&lt;LF&gt;+CGQREQ: &lt;PDP_type&gt;,(list of supported &lt;precedence&gt; s),(list of supported &lt;delay&gt;s),(list of supported &lt;reliability&gt;s),(list of supported &lt;peak&gt;s),(list of supported &lt;mean&gt;s)</b>  <b>[...]]</b></p> <p><b>OK</b></p>
<p>Read Command <b>AT+CGQREQ?</b></p>	<p>Response  <b>+CGQREQ: &lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;</b>  <b>[&lt;CR&gt;&lt;LF&gt;+CGQREQ:&lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;</b>  <b>an&gt;</b>  <b>[...]]</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CGQREQ=cid][,&lt;precedence&gt;][,&lt;delay&gt;][,&lt;reliability&gt;][,&lt;peak&gt;][,&lt;mean&gt;]]]]</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;cid&gt;</b>  <b>1..10</b> A numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)</p> <p><b>&lt;precedence&gt;</b>  <b>0</b> QOS precedence class subscribed value  <b>1..3</b> QOS precedence class</p> <p><b>&lt;delay&gt;</b>  <b>0</b> QOS delay class subscribed value  <b>1..4</b> QOS delay class subscribed</p> <p><b>&lt;reliability&gt;</b>  <b>0</b> QOS reliability class subscribed value  <b>1.. 5</b> QOS reliability class.</p> <p><b>&lt;peak&gt;</b>  <b>0</b> QOS peak throughput class subscribed value  <b>1.. 9</b> QOS peak throughput class</p> <p><b>&lt;mean&gt;</b></p>

	<b>0</b>	QOS mean throughput class subscribed value
	<b>1..18</b>	QOS mean throughput class
	<b>31</b>	QOS mean throughput class best effort
Reference		

## 6.2.5 AT+CGACT PDP Context Activate or Deactivate

AT+CGACT PDP Context Activate or Deactivate	
Test Command <b>AT+CGACT=?</b>	Response <b>+CGACT: (list of supported &lt;state&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CGACT?</b>	Response <b>+CGACT: &lt;cid&gt;,&lt;state&gt;[&lt;CR&gt;&lt;LF&gt;+CGACT:&lt;cid&gt;,&lt;state&gt;...]</b>  <b>OK</b>
Write Command <b>AT+CGACT=&lt;state&gt; [,&lt;cid&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;state&gt;</b> Indicates the state of PDP context activation <b>0</b> Deactivated <b>1</b> Activated Other values are reserved and will result in an ERROR response to the Write Command.  <b>&lt;cid&gt;</b> A numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command). If the <cid> is omitted, it only affects the first cid.
Reference	<b>Note:</b> This command is used to test PDPs with network simulators. Successful activation of PDP on real network is not guaranteed. Refer to AT+CGDATA clarification for more information.

## 6.2.6 AT+CGDATA Enter Data State

AT+CGDATA Enter Data State	
Test Command	Response

AT+CGDATA=?	+CGDATA: list of supported <L2P>s  OK
Write Command AT+CGDATA=<L2P> [,<cid>]	Response <b>CONNECT</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<L2P> A string parameter (string should be included in quotation marks) that indicates the layer 2 protocol to be used between the TE and MT: <b>"PPP"</b> Point to Point protocol for a PDP such as IPOther values are not supported and will result in an ERROR response to the execution Command.  <cid> A numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command)
Reference	

## 6.2.7 AT+CGPADDR Show PDP Address

<b>AT+CGPADDR Show PDP Address</b>	
Test Command AT+CGPADDR=?	Response <b>+CGPADDR: (list of defined &lt;cid&gt;s)</b>  OK
Write Command AT+CGPADDR=<cid>	Response <b>+CGPADDR: &lt;cid&gt;,&lt;PDP_addr&gt;</b> <b>[&lt;CR&gt;&lt;LF&gt;+CGPADDR: &lt;cid&gt;,&lt;PDP_addr&gt;[...]]</b>  OK  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<cid> A numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command)  <PDP_addr> String type, IP address <b>Format: "&lt;n&gt;.&lt;n&gt;.&lt;n&gt;.&lt;n&gt;"</b> where <n>=0..255

Reference	Note Write command returns address provided by the network if a connection has been established.
-----------	---

## 6.2.8 AT+CGCLASS GPRS Mobile Station Class

AT+CGCLASS GPRS Mobile Station Class	
Test Command <b>AT+CGCLASS=?</b>	Response <b>+CGCLASS: (list of supported &lt;class&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CGCLASS?</b>	Response <b>+CGCLASS: &lt;class&gt;</b>  <b>OK</b>
Write Command <b>AT+CGCLASS=&lt;class&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;class&gt;</b> <b>A</b> string parameter(string should be included in quotation marks) which indicates the GPRS mobile class (in descending order of functionality) <b>B</b> Class-B mode of operation (A/Gb mode), (not applicable in lu mode) MT would operate PS and CS services but not simultaneously <b>CG</b> Class C in GPRS only mode <b>CC</b> Class C in circuit switched only mode (lowest)
Reference	Note: It only supports Class B, CG and CC.

## 6.2.9 AT+CGREP Control Unsolicited GPRS Event Reporting

AT+CGREP Control Unsolicited GPRS Event Reporting	
Test Command <b>AT+CGREP=?</b>	Response <b>+CGREP: (list of supported &lt;mode&gt;s) ,(list of supported &lt;bfr&gt;s)</b>  <b>OK</b>

<p>Read Command <b>AT+CGEREP?</b></p>	<p>Response <b>+CGEREP: &lt;mode&gt;,&lt;brf&gt;</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CGEREP=&lt;mode&gt;</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Unsolicited Result Codes supported: <b>+CGEV: NW DEACT &lt;PDP_type&gt;,&lt;PDP_addr&gt;[,&lt;cid&gt;]</b> <b>+CGEV: ME DEACT &lt;PDP_type&gt;,&lt;PDP_addr&gt;[,&lt;cid&gt;]</b> <b>+CGEV: NW DETACH</b> <b>+CGEV: ME DETACH</b></p>
<p>Parameters</p>	<p><b>&lt;PDP_type&gt;</b> Packet Data Protocol type (see +CGDCONT Command)</p> <p><b>&lt;PDP_addr&gt;</b> Packet Data Protocol address (see +CGDCONT Command)</p> <p><b>&lt;cid&gt;</b> Context Id (see +CGDCONT Command)</p> <p><b>&lt;mode&gt;</b></p> <p><b>0</b> buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE.</p> <p><b>1</b> discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE</p> <p><b>2</b> buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE.</p> <p><b>&lt;brf&gt;</b></p> <p><b>0</b> MT buffer of unsolicited result codes defined within this command is cleared when &lt;mode&gt;1 or 2 is entered.</p> <p><b>1</b> MT buffer of unsolicited result codes defined within this command is flushed to the TE when &lt;mode&gt; 1 or 2 is entered.</p>
<p>Reference</p>	



## 6.2.10 AT+CGREG Network Registration Status

AT+CGREG Network Registration Status	
Test Command <b>AT+CGREG=?</b>	Response <b>+CGREG: (list of supported &lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CGREG?</b>	Response <b>+CGREG: &lt;n&gt;,&lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]</b>  <b>OK</b> <i>Note: the last two parameters presentation determined by AT+CSACT.</i>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CGREG=[&lt;n&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;n&gt;</b></p> <p><b>0</b> Disable network registration unsolicited result code</p> <p><b>1</b> Enable network registration unsolicited result code +CGREG:&lt;stat&gt;</p> <p><b>2</b> Enable network registration and location information unsolicited result code +CGREG: &lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]</p> <p><b>&lt;stat&gt;</b></p> <p><b>0</b> Not registered, MT is not currently searching an operator to register to. The GPRS service is disabled, the UE is allowed to attach for GPRS if requested by the user.</p> <p><b>1</b> Registered, home network.</p> <p><b>2</b> Not registered, but MT is currently trying to attach or searching an operator to register to. The GPRS service is enabled, but an allowable PLMN is currently not available. The UE will start a GPRS attach as soon as an allowable PLMN is available.</p> <p><b>3</b> Registration denied, The GPRS service is disabled, the UE is not allowed to attach for GPRS if it is requested by the user.</p> <p><b>4</b> Unknown</p> <p><b>5</b> Registered, roaming</p> <p><b>&lt;lac&gt;</b> String type (string should be included in quotation marks); two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)</p>

	<ci> String type (string should be included in quotation marks); two bytes cell ID in hexadecimal format
Reference	

### 6.2.11 AT+CGSMS Select Service for MO SMS Messages

AT+CGSMS Select Service for MO SMS Messages	
Test Command <b>AT+CGSMS=?</b>	Response <b>+CGSMS: (list of currently available &lt;service&gt;s</b>  <b>OK</b>
Read Command <b>AT+CGSMS?</b>	Response <b>+CGSMS: &lt;service&gt;</b>  <b>OK</b>
Write Command <b>AT+CGSMS=&lt;service&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;service&gt;</b> A numeric parameter which indicates the service or service preference to be used <b>0</b> Packet Domain <b>1</b> Circuit switched <b>2</b> Packet Domain preferred (use circuit switched if GPRS not available) <b>3</b> Circuit switched preferred (use Packet Domain if circuit switched not available)
Reference	

### 6.2.12 AT+CGEQMIN 3G Quality of Service Profile

AT+CGEQMIN 3G Quality of Service Profile (Minimum Acceptable)	
Test Command <b>AT+CGEQMIN=?</b>	<b>+CGEQMIN: &lt;PDP_type&gt;, (list of supported &lt;Traffic_class&gt;s) ,(list of supported &lt;Maximum_bitrate_UL&gt;s) , (list of supported &lt;Maximum_bitrate_DL&gt;s), (list of supported &lt;Guaranteed_bitrate_UL&gt;s), (list of supported &lt;Guaranteed_bitrate_DL&gt;s) ,(list of supported &lt;Delivery_order&gt;s) ,(list of supported &lt;Maximum_SDU_size&gt;s) ,(list of</b>

supported <SDU\_error\_ratio>s) , (list of supported<Residual\_bit\_error\_ratio>s) ,(list of supported <Delivery\_of\_erroneous\_SDUs>s) , (list of supported <Transfer\_delay>s) ,(list of supported <Traffic\_handling\_priority>s) [, (list of supported <Source\_statistics\_descriptor>s) ,(list of supported <Signalling\_indication>s)]

[<CR><LF> +CGEQMIN: <PDP\_type>, (list of supported <Traffic\_class>s) ,(list of supported<Maximum\_bitrate\_UL>s), (list of supported <Maximum\_bitrate\_DL>s) ,(list of supported <Guaranteed\_bitrate\_UL>s), (list of supported <Guaranteed\_bitrate\_DL>s) ,(list of supported <Delivery\_order>s) ,(list of supported <Maximum\_SDU\_size>s) ,(list of supported <SDU\_error\_ratio>s),(list of supported <Residual\_bit\_error\_ratio>s) ,(list of supported <Delivery\_of\_erroneous\_SDUs>s) ,(list of supported <Transfer\_delay>s) ,(list of supported<Traffic\_handling\_priority>s) [, (list of supported <Source\_statistics\_descriptor>s) ,(list of supported<Signalling\_indication>s)] [...]]

If error is related to ME functionality:

+CME ERROR: <err>

Read Command  
AT+CGQMIN?

Response

+CGEQMIN: <cid>, <Traffic\_class> ,<Maximum\_bitrate\_UL>, <Maximum\_bitrate\_DL> ,<Guaranteed\_bitrate\_UL> ,<Guaranteed\_bitrate\_DL>, <Delivery\_order> ,<Maximum\_SDU\_size> , <SDU\_error\_ratio> ,<Residual\_bit\_error\_ratio> ,<Delivery\_of\_erroneous\_SDUs> ,<Transfer\_delay> ,<Traffic\_handling\_priority> [,<Source\_statistics\_descriptor>,<Signalling\_indication>]

[<CR><LF> +CGEQMIN: <cid>, <Traffic\_class> ,<Maximum\_bitrate\_UL> ,<Maximum\_bitrate\_DL>, <Guaranteed\_bitrate\_UL> ,<Guaranteed\_bitrate\_DL>, <Delivery\_order> ,<Maximum\_SDU\_size> ,<SDU\_error\_ratio> ,<Residual\_bit\_error\_ratio> ,<Delivery\_of\_erroneous\_SDUs> ,<Transfer\_delay>,<Traffic\_handling\_priority> [,<Source\_statistics\_descriptor> ,<Signalling\_indication>][...]]

If error is related to ME functionality:

+CME ERROR: <err>



**<Guaranteed\_bitrate\_DL>:**

a numeric parameter that indicates the guaranteed number of kbits/s delivered by UMTS (down-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as '32' (e.g. AT+CGEQMIN=...,32, ...) (refer 3GPPTS 24.008 [8] subclause 10.5.6.5).

**<Delivery\_order>**

a numeric parameter that indicates whether the UMTS bearer shall provide in-sequence SDU delivery or not.

**0** no  
**1** yes

Other values are reserved.

**<Maximum\_SDU\_size>**

a numeric parameter (1,2,3,...) that indicates the maximum allowed SDU size in octets(refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<SDU\_error\_ratio>**

a string parameter that indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. As an example a target SDU error ratio of 5.10-3 would be specified as '5E3'(e.g. AT+CGEQMIN=..., "5E3",...) (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<Residual\_bit\_error\_ratio>**

a string parameter that indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'. As an example a target residual bit error ratio of 5.10-3 would be specified as 'E3' (e.g. AT+CGEQMIN=..., "5E3",...) (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<Delivery\_of\_erroneous\_SDUs>**

a numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not.

**0** no  
**1** yes  
**2** no detect

Other values are reserved.

**<Transfer\_delay>**

a numeric parameter (0,1,2,...) that indicates the targeted time between request to

transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds

(refer 3GPPTS 24.008 [8] subclause 10.5.6.5).

**<Traffic\_handling\_priority>**

a numeric parameter (1,2,3,...) that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers (refer 3GPPTS 24.008 [8] subclause 10.5.6.5).

**<Source\_Statistics\_Descriptor>**

Supported in R7 P S a numeric parameter that specifies characteristics of the source of the submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as conversational or streaming (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

- 0** Characteristics of SDUs is unknown (default value)
  - 1** Characteristics of SDUs corresponds to a speech source
- Other values are reserved.

**<Signalling\_Indication>**

Supported in R7 P S a numeric parameter used to indicate confirmat content of submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as interactive (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

- 0** PDP context is not optimized for confirmat (default value)
- 1** PDP context is optimized for confirmat

**<PDP\_type>**

(see +CGDCONT command). If a value is omitted for a particular class then the value is considered to be unspecified.

Reference

## 6.2.13 AT+CGEQREQ 3G Quality of Service Profile(Requested)

AT+CGEQREQ 3G Quality of Service Profile (Requested)

<p>Read Command <b>AT+CGEQREQ?</b></p>	<p>Response</p> <p><b>+CGEQREQ:</b></p> <p>&lt;cid&gt;,&lt;Traffic_class&gt; ,&lt;Maximum_bitrate_UL&gt;,&lt;Maximum_bitrate_DL&gt; ,&lt;Guaranteed_bitrate_UL&gt; ,&lt;Guaranteed_bitrate_DL&gt;,&lt;Delivery_order&gt; ,&lt;Maximum_SDU_size&gt; ,&lt;SDU_error_ratio&gt; ,&lt;Residual_bit_error_ratio&gt; ,&lt;Delivery_of_erroneous_SDUs&gt; ,&lt;Transfer_delay&gt; ,&lt;Traffic_handling_priority&gt;[,&lt;Source_statistics_descriptor&gt;,&lt;Signalling_indication&gt;][&lt;CR&gt;&lt;LF&gt;+cgeqreq: &lt;cid&gt;,&lt;Traffic_class&gt; ,&lt;Maximum_bitrate_UL&gt; ,&lt;Maximum_bitrate_DL&gt; ,&lt;Guaranteed_bitrate_UL&gt; ,&lt;Guaranteed_bitrate_DL&gt;,&lt;Delivery_order&gt; ,&lt;Maximum_SDU_size&gt; ,&lt;SDU_error_ratio&gt; ,&lt;Residual_bit_error_ratio&gt; ,&lt;Delivery_of_erroneous_SDUs&gt; , &lt;Transfer_delay&gt;, &lt;Traffic_handling_priority&gt; [, &lt;Source_statistics_descriptor&gt; , &lt;Signalling_indication&gt;][...]]</p> <p>OK</p>
<p>Write Command <b>AT+CGEQREQ</b></p> <p>=&lt;cid&gt;[,&lt;Traffic_class&gt;],[&lt;Maximum_bitrate_UL&gt;],[&lt;Maximum_bitrate_DL&gt;],[&lt;Guaranteed_bitrate_UL&gt;],[&lt;Guaranteed_bitrate_DL&gt;],[&lt;Delivery_order&gt;],[&lt;Maximum_SDU_size&gt;],[&lt;SDU_error_ratio&gt;],[&lt;Residual_bit_error_ratio&gt;],[&lt;Delivery_of_erroneous_SDUs&gt;],[&lt;Transfer_delay&gt;],[&lt;Traffic_handling_priority&gt;],[&lt;Source_statistics_descriptor&gt;],[&lt;Signalling_indication&gt;]]] ]]]]]]]]]]]</p>	<p>OK</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;cid&gt;</b></p> <p>A numeric parameter which specifies a particular PDP context definition (see +CGDCONT and command). The following parameters are defined in 3GPP TS 23.107[46].</p> <p><b>&lt;Traffic_class&gt;</b></p> <p>A numeric parameter that indicates the type of application for which the UMTS bearer service is onformat. 0 conversational (default)</p> <p><b>1</b> streaming</p> <p><b>2</b> interactive</p> <p><b>3</b> background</p> <p>Other values are reserved.</p> <p><b>&lt;Maximum_bitrate_UL&gt;:</b></p> <p>A numeric parameter that indicates the maximum number of kbits/s</p>

delivered to UMTS(up-link traffic) at a SAP. As an example a bitrate of 32kbit/s would be specified as '32'(e.g. AT+cgeqreq=...,32, ...) (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<Maximum\_bitrate\_DL>:**

A numeric parameter that indicates the maximum number of kbits/s delivered by UMTS(down-link traffic) at a SAP. As an example a bitrate of 32kbit/s would be specified as'32' (e.g. AT+cgeqreq=...,32, ...) (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<Guaranteed\_bitrate\_UL>:**

A numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS(up-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as '32' (e.g. AT+cgeqreq=...,32, ...) (refer 3GPP TS24.008 [8] subclause 10.5.6.5).

**<Guaranteed\_bitrate\_DL>**

A numeric parameter that indicates the guaranteed number of kbits/s delivered by UMTS(down-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as '32' (e.g. AT+cgeqreq=...,32, ...) (refer 3GPPTS 24.008 [8] subclause 10.5.6.5).

**<Delivery\_order>**

A numeric parameter that indicates whether the UMTS bearer shall provide in-sequence SDU delivery or not.

- 0** no
- 1** yes

Other values are reserved.

**<Maximum\_SDU\_size>**

A numeric parameter (1,2,3,...) that indicates the maximum allowed SDU size in octets(refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<SDU\_error\_ratio>**

A string parameter that indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. As an example a target SDU error ratio of 5.10<sup>-3</sup> would be specified as '5E3'(e.g. AT+cgeqreq=..., "5E3",...) (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

**<Residual\_bit\_error\_ratio>**

A string parameter that indicates the target value for the undetected bit error ratio

in the delivered SDUs. If no error detection is requested, Residual bit error



ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'. As

an example a target residual bit error ratio of  $5 \cdot 10^{-3}$  would be specified as 'E3' (e.g.

AT+cgeqreq=..., "5E3",...) (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

#### <Delivery\_of\_erroneous\_SDUs>

A numeric parameter that indicates whether SDUs detected as erroneous shall be

delivered or not.

- 0** no
- 1** yes
- 2** no detect

Other values are reserved.

#### <Transfer\_delay>

A numeric parameter (0,1,2,...) that indicates the targeted time between request to

transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds (refer 3GPPTS 24.008 [8] subclause 10.5.6.5).

#### <Traffic\_handling\_priority>

A numeric parameter (1,2,3,...) that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers (refer 3GPPTS 24.008 [8] subclause 10.5.6.5).

#### <Source\_Statistics\_Descriptor>

Supported in R7 P S a numeric parameter that specifies characteristics of the source of the submitted SDUs for a PDP context. This parameter should be provided if the Traffic

class is specified as conversational or streaming (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

- 0** Characteristics of SDUs is unknown (default value)
- 1** Characteristics of SDUs corresponds to a speech source

Other values are reserved.

#### <Signalling\_Indication>

Supported in R7 P S a numeric parameter used to indicate confirmat content of submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as interactive (refer 3GPP TS 24.008 [8] subclause 10.5.6.5).

- 0** PDP context is notoptimized for confirmat (default value)
- 1** PDP context is optimized for confirmat

	<p><b>&lt;PDP_type&gt;</b> (see +CGDCONT and command).</p> <p>If a value is omitted for a particular class then the value is considered to be unspecified.</p>
Reference	

## 6.2.14 AT+CGEQNEG 3G Quality of Service Profile(Negotiated)

AT+CGEQNEG 3G Quality of Service Profile (Negotiated)	
Read Command <b>AT+CGEQNEG=?</b>	<p><b>+CGEQNEG: (list of &lt;cid&gt;s associated with active contexts)</b></p> <p>OK</p>
Write Command <b>AT+CGEQNEG</b> <b>=[&lt;cid&gt;[,&lt;cid&gt;[,...]]]</b>	<p><b>+CGEQNEG: &lt;cid&gt;, &lt;Traffic class&gt; , &lt;Maximum bi-trate UL&gt;, &lt;Maximum bitrate DL&gt; , &lt;Guaranteedbitrate UL&gt;, &lt;Guaranteed bitrateDL&gt;, &lt;Deliveryorder&gt; ,&lt;Maximum SDU size&gt; , &lt;SDU error ratio&gt; ,&lt;Residual bit errorratio&gt; , &lt;Delivery of erroneous SDUs&gt; , &lt;Transfer delay&gt; , &lt;Traffic handling priority&gt;</b></p> <p><b>[&lt;CR&gt;&lt;LF&gt;+CGEQNEG: &lt;cid&gt;, &lt;Traffic class&gt; ,&lt;Maximum bitrate UL&gt;, &lt;Maximum bitrate DL&gt; , &lt;Guaranteed bitrate UL&gt;, &lt;Guaranteed bitrate DL&gt;, &lt;Delivery order&gt; , &lt;Maximum SDU size&gt; , &lt;SDUerror ratio&gt; , &lt;Residual bit error ratio&gt; , &lt;Deliveryof erroneous SDUs&gt; , &lt;Transfer delay&gt; , &lt;Traffichandling priority&gt; [...]]</b></p> <p>OK</p>
Parameters	<p><b>&lt;cid&gt;</b>            a numeric parameter which specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT commands).            The following parameters are defined in 3GPP TS 23.107 [46]</p> <p><b>&lt;Traffic class&gt;</b>            a numeric parameter that indicates the type of application for which the UMTS bearer service is available. 0 conversational (default)</p> <p><b>1</b> streaming  <b>2</b> interactive  <b>3</b> background            Other values are reserved.</p> <p><b>&lt;Maximum bitrate UL&gt;</b>            a numeric parameter that indicates the maximum number of kbits/s</p>

delivered to UMTS(up-link traffic) at a SAP. As an example a bitrate of 32 kbit/s would be specified as '32'(e.g. +CGEQNEG:...,32, ...) (refer TS 24.008 [8] subclause 10.5.6.5).

**<Maximum bitrate DL>**

a numeric parameter that indicates the maximum number of kbits/s delivered by UMTS(down-link traffic) at a SAP As an example a bitrate of 32 kbit/s would be specified as'32' (e.g. +CGEQNEG:...,32, ...) (refer TS 24.008 [8] subclause 10.5.6.5).

**<Guaranteed bitrate UL>**

a numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS(up-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as '32' (e.g. +CGEQNEG: ...,32, ...) (refer TS 24.008 [8]subclause 10.5.6.5).

**<Guaranteed bitrate DL>**

a numeric parameter that indicates the guaranteed number of kbits/s delivered by UMTS(down-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32 kbit/s would be specified as '32' (e.g. +CGEQNEG: ...,32, ...) (refer TS24.008 [8] subclause 10.5.6.5).

**<Delivery order>**

a numeric parameter that indicates whether the UMTS bearer shall provide in-sequence

SDU delivery or not

- 0** no
- 1** yes

Other values are reserved.

**<Maximum SDU size>**

a numeric parameter that (1,2,3,...) indicates the maximum allowed SDU size in octets(refer TS 24.008 [8] subclause 10.5.6.5).

**<SDU error ratio>**

a string parameter that indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. As an example a target SDU error ratio of 5.10-3 would be specified as '5E3'(e.g. +CGEQNEG:..., "5E3",...) (refer TS 24.008 [8] subclause 10.5.6.5).

**<Residual bit error ratio>**

a string parameter that indicates the target value for the undetected bit error ratio in

the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates

the bit error ratio in the delivered SDUs. The value is specified as 'mEe'. As an example a target residual bit error ratio of  $5 \cdot 10^{-3}$  would be specified as '5E3' (e.g.

+CGEQNEG:..., "5E3", ...) (refer TS 24.008 [8] subclause 10.5.6.5).

**<Delivery of erroneous SDUs>**

a numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not.

- 0** no
- 1** yes
- 2** no detect

Other values are reserved.

**<Transfer delay>**

a numeric parameter (0,1,2,...) that indicates the targeted time between request to

transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds (refer TS

24.008 [8] subclause 10.5.6.5).

**<Traffic handling priority>**

a numeric parameter (1,2,3,...) that specifies the relative importance for handling of all

SDUs belonging to the UMTS bearer compared to the SDUs of other bearers (refer TS

24.008 [8] subclause 10.5.6.5 Revision 2.5,

Reference

SIMCOM

# 7. AT Commands for TCPIP Application Toolkit

## 7.1 Overview

Command	Description
AT+CIPMUX	Start up multi-IP connection
AT+CIPSTART	Start up TCP or UDP connection
AT+CIPSEND	Send data through TCP or UDP connection
AT+CIPQSEND	Select data transmitting mode
AT+CIPACK	Query previous connection data transmitting state
AT+CIPCLOSE	Close TCP or UDP connection
AT+CIPSHUT	Deactivate GPRS PDP context
AT+CLPORT	Set local port
AT+CSTT	Start task and set APN, user name, password
AT+CIICR	Bring up wireless connection with GPRS
AT+CIFSR	Get local IP address
AT+CIFSREX	Get local IP address
AT+CIPSTATUS	Query current connection status
AT+CDNSCFG	Configure domain name server
AT+CDNSGIP	Query the IP address of given domain name
AT+CIPHEAD	Add an IP head at the beginning of a package received
AT+CIPATS	Set auto sending timer
AT+CIPSPRT	Set prompt of '>' when module sends data
AT+CIPSERVER	Configure module as server
AT+CIPCSGP	Set GPRS for connection mode
AT+CIPSRIP	Show remote IP address and port when received data
AT+CIPDPDP	Set whether to check state of GPRS network timing
AT+CIPMODE	Select TCPIP application mode
AT+CIPCCFG	Configure transparent transfer mode
AT+CIPSHOWTP	Display transfer protocol in IP head when received data

AT+CIPUDPMODE	UDP extended mode
AT+CIPRXGET	Get data from network manually
AT+CIPRDTIMER	Set remote delay timer
AT+CIPSGTXT	Select GPRS PDP context
AT+CIPOPTION	Set TCP Option
AT+CIPSENDHEX	Set CIPSEND Data Format to Hex
AT+CIPHEXS	Set CIPSEND Data Format with suffix
AT+CIPSSL	Enable TCP SSL function

## 7.2 Detailed Descriptions of Commands

### 7.2.1 AT+CIPMUX Start Up Multi-IP Connection

AT+CIPMUX Start Up Multi-IP Connection	
Test Command <b>AT+CIPMUX=?</b>	Response <b>+CIPMUX: (list of supported&lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPMUX?</b>	Response <b>+CIPMUX: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPMUX=&lt;n&gt;</b>	Response <b>OK</b>
Parameters	<n> <b>0</b> Single IP connection <b>1</b> Multi IP connection
Reference	<b>Note:</b> Only in IP initial state, AT+CIPMUX=1 is effective; Only when multi IP connection and GPRS application are both shut down, AT+CIPMUX=0 is effective.

### 7.2.2 AT+CIPSTART Start Up TCP or UDP Connection

AT+CIPSTART Start Up TCP or UDP Connection	
--	--

Test Command	Response
<b>AT+CIPSTART=?</b>	1) If AT+CIPMUX=0 <b>+CIPSTART: (list of supported &lt;mode&gt;),( &lt;IP address&gt;),( &lt;port&gt;)</b> <b>+CIPSTART: (list of supported &lt;mode&gt;),( &lt;domain name&gt;),( &lt;port&gt;)</b>  <b>OK</b>  2) If AT+CIPMUX=1 <b>+CIPSTART: (list of supported &lt;n&gt;),(list of supported &lt;mode&gt;),( &lt;IP address&gt;),( &lt;port&gt;)</b> <b>+CIPSTART: (list of supported &lt;n&gt;),(list of supported &lt;mode&gt;),( &lt;domain name&gt;),( &lt;port&gt;)</b>  <b>OK</b>

SIMCOM CONFIDENTIAL FILE

Write Command

1)If single IP connection  
(+CIPMUX=0)

**AT+CIPSTART=<mode>,<IP  
address>,<port>**

Or

**AT+CIPSTART=<mode>,<domai  
n name>,<port>**

2)If multi-IP connection  
(+CIPMUX=1)

**AT+CIPSTART=<n>,<mode>,<ad  
dress>,<port>**

**AT+CIPSTART=<n>,<mode>,<do  
main name>,<port>**

Response

1)If single IP connection (+CIPMUX=0)

If format is right response

**OK**

otherwise response

If error is related to ME functionality:

**+CME ERROR <err>**

Response when connection exists

**ALREADY CONNECT**

Response when connection is successful

**CONNECT OK**

Otherwise

**STATE: <state>**

**CONNECT FAIL**

2)If multi-IP connection  
(+CIPMUX=1)

If format is right

**OK**

otherwise response

If error is related to ME functionality:

**+CME ERROR <err>**

Response when connection exists

**<n>,ALREADY CONNECT**

If connection is successful

**<n>,CONNECT OK**

Otherwise

**<n>,CONNECT FAIL**



Parameters	<p><b>&lt;n&gt;</b>  <b>0..7</b> A numeric parameter which indicates the connection number</p> <p><b>&lt;mode&gt;</b> A string parameter which indicates the connection type  <b>"TCP"</b> Establish a TCP connection  <b>"UDP"</b> Establish a UDP connection</p> <p><b>&lt;IP address&gt;</b> A string parameter which indicates remote server IP address</p> <p><b>&lt;port&gt;</b> Remote server port</p> <p><b>&lt;domain name&gt;</b> A string parameter which indicates remote server domain name</p> <p><b>&lt;state&gt;</b> A string parameter which indicates the progress of connecting</p> <p><b>0</b> IP INITIAL  <b>1</b> IP START  <b>2</b> IP CONFIG  <b>3</b> IP GPRSACT  <b>4</b> IP STATUS  <b>5</b> TCP CONNECTING/UDP CONNECTING/SERVER LISTENING  <b>6</b> CONNECT OK  <b>7</b> TCP CLOSING/UDP CLOSING  <b>8</b> TCP CLOSED/UDP CLOSED  <b>9</b> PDP DEACT</p> <p>In Multi-IP state:</p> <p><b>0</b> IP INITIAL  <b>1</b> IP START  <b>2</b> IP CONFIG  <b>3</b> IP GPRSACT  <b>4</b> IP STATUS  <b>5</b> IP PROCESSING  <b>9</b> PDP DEACT</p>
Reference	<p><b>Note:</b></p> <p>This command allows establishment of a TCP/UDP connection only when the state is IP INITIAL or IP STATUS when it is in single state. In multi-IP state, the state is in IP STATUS only. So it is necessary to process "AT+CIPSHUT" before user establishes a TCP/UDP connection with this command when the state is not IP INITIAL or IP STATUS.</p> <p>When module is in multi-IP state, before this command is executed, it is necessary to process "AT+CSTT, AT+CIICR, AT+CIFSR".</p>

## 7.2.3 AT+CIPSEND Send Data Through TCP or UDP Connection

AT+CIPSEND Send Data Through TCP or UDP Connection	
<p>Test Command</p> <p><b>AT+CIPSEND=?</b></p>	<p>Response</p> <p>1) For single IP connection (+CIPMUX=0) <b>+CIPSEND: &lt;length&gt;</b></p> <p><b>OK</b></p> <p>2) For multi IP connection (+CIPMUX=1) <b>+CIPSEND: (0-7),&lt;length&gt;</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CIPSEND?</b></p>	<p>Response</p> <p>1) For single IP connection (+CIPMUX=0) <b>+CIPSEND:&lt;size&gt;</b></p> <p><b>OK</b></p> <p>2) For multi IP connection (+CIPMUX=1) <b>+CIPSEND:&lt;n&gt;,&lt;size&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p>1) If single IP connection (+CIPMUX=0) <b>AT+CIPSEND=&lt;length&gt;</b></p> <p>2) If multi IP connection (+CIPMUX=1) <b>AT+CIPSEND=&lt;n&gt;,&lt;length&gt;</b></p>	<p>Response</p> <p>This Command is used to send changeable length data</p> <p>If single IP is connected (+CIPMUX=0)</p> <p>If connection is not established or module is disconnected: If error is related to ME functionality: <b>+CME ERROR &lt;err&gt;</b></p> <p>If sending is successful:</p> <p>When +CIPQSEND=0 <b>SEND OK</b></p> <p>When +CIPQSEND=1 <b>DATA ACCEPT:&lt;length&gt;</b></p> <p>If sending fails: <b>SEND FAIL</b></p> <p>If multi IP connection is established (+CIPMUX=1)</p> <p>If connection is not established or module is disconnected:</p> <p>If error is related to ME functionality: <b>+CME ERROR &lt;err&gt;</b></p>

	<p>If sending is successful: When +CIPQSEND=0 <b>&lt;n&gt;,SEND OK</b></p> <p>When +CIPQSEND=1 <b>DATA ACCEPT:&lt;n&gt;,&lt;length&gt;</b></p> <p>If sending fails: <b>&lt;n&gt;,SEND FAIL</b></p>
<p>Execution Command <b>AT+CIPSEND</b> response"&gt;", then type data for send, tap CTRL+Z to send, tap ESC to cancel the operation</p>	<p>Response This Command is used to send changeable length data. If single IP connection is established (+CIPMUX=0) If connection is not established or module is disconnected: If error is related to ME functionality: <b>+CME ERROR &lt;err&gt;</b></p> <p>If sending is successful: When +CIPQSEND=0 <b>SEND OK</b></p> <p>When +CIPQSEND=1 <b>DATA ACCEPT:&lt;length&gt;</b></p> <p>If sending fails: <b>SEND FAIL</b></p> <p>Note: This Command can only be used in single IP connection mode (+CIPMUX=0) and to send data on the TCP or UDP connection that has been established already. Ctrl-Z is used as a termination symbol. ESC is used to cancel sending data. There are at most &lt;size&gt; bytes which can be sent at a time.</p>
<p>Parameters</p>	<p><b>&lt;n&gt;</b> A numeric parameter which indicates the connection number</p> <p><b>&lt;size&gt;</b> A numeric parameter which indicates the data length sent at a time</p> <p><b>&lt;length&gt;</b> A numeric parameter which indicates the length of sending data, it must be less than &lt;size&gt;</p>
<p>Reference</p>	<p>Note: The data length which can be sent depends on network status. Set the time that send data automatically with the Command of AT+CIPATS.</p>

Only send data at the status of established connection.

## 7.2.4 AT+CIPQSEND Select Data Transmitting Mode

AT+CIPQSEND Select Data Transmitting Mode	
Test Command <b>AT+CIPQSEND=?</b>	Response <b>+CIPQSEND: (list of supported&lt;n&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPQSEND?</b>	Response <b>+CIPQSEND: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPQSEND=&lt;n&gt;</b>	Response <b>OK</b>
Parameters	<p><b>&lt;n&gt;</b></p> <p><b>0</b> Normal mode – when the server receives TCP data, it will respond SEND OK.</p> <p><b>1</b> Quick send mode – when the data is sent to module, it will respond DATA ACCEPT:&lt;n&gt;,&lt;length&gt;, while not responding SEND OK.</p>
Reference	

## 7.2.5 AT+CIPACK Query Previous Connection Data Transmitting State

AT+CIPACK Query Previous Connection Data Transmitting State	
Test Command <b>AT+CIPACK=?</b>	Response <b>OK</b>
Write Command If in multi IP connection (+CIPMUX=1) <b>AT+CIPACK=&lt;n&gt;</b>	Response <b>+CIPACK: &lt;txlen&gt;, &lt;acklen&gt;, &lt;nacklen&gt;</b>  <b>OK</b>
Execution Command If in single IP connection (+CIPMUX=0) <b>AT+CIPACK</b>	Response <b>+CIPACK: &lt;txlen&gt;, &lt;acklen&gt;, &lt;nacklen&gt;</b>  <b>OK</b>
Parameters	<b>&lt;n&gt;</b> A numeric parameter which indicates the connection number

	<p><b>&lt;txlen&gt;</b> The data amount which has been sent</p> <p><b>&lt;acklen&gt;</b> The data amount confirmed successfully by the server</p> <p><b>&lt;nacklen&gt;</b> The data amount without confirmation by the server</p>
Reference	

## 7.2.6 AT+CIPCLOSE Close TCP or UDP Connection

AT+CIPCLOSE Close TCP or UDP Connection	
Test Command <b>AT+CIPCLOSE=?</b>	Response <b>OK</b>
Write Command 1) If single IP connection (+CIPMUX=0)  <b>AT+CIPCLOSE=&lt;n&gt;</b> 2) If multi IP connection (+CIPMUX=1) <b>AT+CIPCLOSE=&lt;id&gt;, [&lt;n&gt;]</b>	Response: 1) For single IP connection (+CIPMUX=0) <b>CLOSE OK</b>  2) For multi IP connection (+CIPMUX=1) <b>&lt;n&gt;, CLOSE OK</b>
Execution Command <b>AT+CIPCLOSE</b>	Response If close is successfully: <b>CLOSE OK</b>  If close fails: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;n&gt;</b></p> <p><b>0</b> Slow close</p> <p><b>1</b> Quick close</p> <p><b>&lt;id&gt;</b> A numeric parameter which indicates the connection number</p>
Reference	<p>Note:</p> <p>AT+CIPCLOSE only closes connection at the status of TCP/UDP which returns CONNECTING or CONNECT OK, otherwise it will return ERROR, after the connection is closed, the status is IP CLOSE in single IP mode.</p>

## 7.2.7 AT+CIPSHUT Deactivate GPRS PDP Context

AT+CIPSHUT Deactivate GPRS PDP Context
--

Test Command <b>AT+CIPSHUT=?</b>	Response <b>OK</b>
Execution Command <b>AT+CIPSHUT</b>	Response If close is successful: <b>SHUT OK</b>  If close fails: <b>+CME ERROR: &lt;err&gt;</b>
Reference	<b>Note</b> If this command is executed in multi-connection mode, all of the IP connection will be shut. User can close gprs pdp context by AT+CIPSHUT. After it is closed, the status is IP INITIAL. If "+PDP: DEACT" urc is reported which means the gprs is released by the network, then user still needs to execute "AT+CIPSHUT" command to make PDP context come back to original state.

## 7.2.8 AT+CLPORT Set Local Port

<b>AT+CLPORT Set Local Port</b>	
Test Command <b>AT+CLPORT=?</b>	Response 1) For single IP connection (+CIPMUX=0) <b>+CLPORT: ("TCP","UDP"),(0-65535)</b>  <b>OK</b> 2) For multi IP connection (+CIPMUX=1) <b>+CLPORT: (0-7),("TCP","UDP"),(0-65535)</b>  <b>OK</b>
Read Command <b>AT+CLPORT?</b>	Response 1) For single IP connection (+CIPMUX=0) <b>+CLPORT: &lt;TCP port&gt;,&lt;UDP port&gt;</b>  <b>OK</b>  2) For multi IP connection (+CIPMUX=1) <b>+CLPORT: 0,&lt;TCP port&gt;,&lt;UDP port&gt;</b> <b>+CLPORT: 1,&lt;TCP port&gt;,&lt;UDP port&gt;</b> <b>+CLPORT: 2,&lt;TCP port&gt;,&lt;UDP port&gt;</b> <b>+CLPORT: 3,&lt;TCP port&gt;,&lt;UDP port&gt;</b> <b>+CLPORT: 4,&lt;TCP port&gt;,&lt;UDP port&gt;</b> <b>+CLPORT: 5,&lt;TCP port&gt;,&lt;UDP port&gt;</b>

	<p><b>+CLPORT: 6,&lt;TCP port&gt;,&lt;UDP port&gt;</b>  <b>+CLPORT: 7,&lt;TCP port&gt;,&lt;UDP port&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p>1) For single IP connection  (+CIPMUX=0)  <b>AT+CLPORT=&lt;mode&gt;,&lt;port&gt;</b></p> <p>2) For multi IP connection  (+CIPMUX=1)  <b>AT+CLPORT=&lt;n&gt;,&lt;mode&gt;,&lt;port&gt;</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;n&gt;</b>  <b>0..7</b> A numeric parameter which indicates the connection number this used in multi IP connection</p> <p><b>&lt;mode&gt;</b> A string parameter which indicates the connection type  <b>"TCP"</b> TCP local port  <b>"UDP"</b> UDP local port</p> <p><b>&lt;port&gt;0-65535</b> A numeric parameter which indicates the local port 0 is the default value, a port can be dynamically allocated a port.</p>
Reference	<p><b>Note:</b>  This command will be effective when module is set as a Client</p>

### 7.2.9 AT+CSTT Start Task and Set APN, USER NAME, PASSWORD

<b>AT+CSTT Start Task and Set APN, USER NAME, PASSWORD</b>	
<p>Test Command</p> <p><b>AT+CSTT=?</b></p>	<p>Response</p> <p><b>+CSTT: "APN","USER","PWD"</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CSTT?</b></p>	<p>Response</p> <p><b>+CSTT: &lt;apn&gt;,&lt;user name&gt;,&lt;password&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CSTT=&lt;apn&gt;,&lt;user name&gt;,&lt;password&gt;</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>

Execution Command <b>AT+CSTT</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;apn&gt;</b> A string parameter which indicates the GPRS access point name  <b>&lt;user name&gt;</b> A string parameter which indicates the GPRS user name  <b>&lt;password&gt;</b> A string parameter which indicates the GPRS password
Reference	<b>Note:</b> The write command and execution command of this command is valid only at the state of IP INITIAL. After this command is executed, the state will be changed to IP START.

### 7.2.10 AT+CIICR Bring Up Wireless Connection with GPRS

<b>AT+CIICR Bring Up Wireless Connection with GPRS</b>	
Test Command <b>AT+CIICR=?</b>	Response <b>OK</b>
Execution Command <b>AT+CIICR</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Reference	<b>Note:</b> AT+CIICR only activates moving scene at the status of IP START, after operating this Command is executed, the state will be changed to IP CONFIG. After module accepts the activated operation, if it is activated successfully, module state will be changed to IP GPRSACT, and it responds OK, otherwise it will respond ERROR.

### 7.2.11 AT+CIFSR Get Local IP Address

<b>AT+CIFSR Get Local IP Address</b>	
Test Command <b>AT+CIFSR=?</b>	Response <b>OK</b>
Execution Command <b>AT+CIFSR</b>	Response <b>&lt;IP address&gt;</b>



	If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;IP address&gt;</b> a string parameter which indicates the IP address assigned from GPRS.
Reference	<b>Note:</b> Only after PDP context is activated, local IP Address can be obtained by AT+CIFSR, otherwise it will respond ERROR. The active status are IP GPRSACT, TCP/UDP CONNECTING, CONNECT OK, IP CLOSE.

## 7.2.12 AT+CIFSREX Get Local IP Address

AT+CIFSREX Get Local IP Address	
Test Command <b>AT+CIFSREX=?</b>	Response <b>OK</b>
Execution Command <b>AT+CIFSREX</b>	Response <b>+CIFSREX: &lt;IP address&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;IP address&gt;</b> a string parameter which indicates the IP address assigned from GPRS.
Reference	

## 7.2.13 AT+CIPSTATUS Query Current Connection Status

AT+CIPSTATUS Query Current Connection Status	
Test Command <b>AT+CIPSTATUS=?</b>	Response <b>OK</b>
Write Command If multi IP connection mode(+CIPMUX=1) <b>AT+CIPSTATUS=&lt;n&gt;</b>	Response <b>+CIPSTATUS: &lt;n&gt;,&lt;bearer&gt;, &lt;TCP/UDP&gt;, &lt;IP address&gt;, &lt;port&gt;, &lt;client state&gt;</b>  <b>OK</b>
Execution Command <b>AT+CIPSTATUS</b>	Response 1) If in single connection mode (+CIPMUX=0) <b>OK</b> <b>STATE: &lt;state&gt;</b>  2) If in multi-connection mode (+CIPMUX=1) <b>OK</b>

	<p><b>STATE: &lt;state&gt;</b></p> <p>If the module is set as server</p> <p><b>S: 0, &lt;bearer&gt;, &lt;port&gt;, &lt;server state&gt;</b></p> <p><b>C: &lt;n&gt;, &lt;bearer&gt;, &lt;TCP/UDP&gt;, &lt;IP address&gt;, &lt;port&gt;, &lt;client state&gt;</b></p>
Parameters	<p><b>&lt;n&gt;</b></p> <p><b>0-7</b> A numeric parameter which indicates the connection number</p> <p><b>&lt;bearer&gt;</b></p> <p><b>0-1</b> GPRS bearer, default is 0</p> <p><b>&lt;server state&gt;</b></p> <p><b>OPENING</b></p> <p><b>LISTENING</b></p> <p><b>CLOSING</b></p> <p><b>&lt;client state&gt;</b></p> <p><b>INITIAL</b></p> <p><b>CONNECTING</b></p> <p><b>CONNECTED</b></p> <p><b>REMOTE CLOSING</b></p> <p><b>CLOSING</b></p> <p><b>CLOSED</b></p> <p><b>&lt;state&gt;</b> A string parameter which indicates the progress of connecting</p> <p><b>0</b> IP INITIAL</p> <p><b>1</b> IP START</p> <p><b>2</b> IP CONFIG</p> <p><b>3</b> IP GPRSACT</p> <p><b>4</b> IP STATUS</p> <p><b>5</b> TCP CONNECTING/UDP CONNECTING/SERVER LISTENING</p> <p><b>6</b> CONNECT OK</p> <p><b>7</b> TCP CLOSING/UDP CLOSING</p> <p><b>8</b> TCP CLOSED/UDP CLOSED</p> <p><b>9</b> PDP DEACT</p> <p>In Multi-IP state:</p> <p><b>0</b> IP INITIAL</p> <p><b>1</b> IP START</p> <p><b>2</b> IP CONFIG</p> <p><b>3</b> IP GPRSACT</p> <p><b>4</b> IP STATUS</p> <p><b>5</b> IP PROCESSING</p> <p><b>9</b> PDP DEACT</p>
Reference	

## 7.2.14 AT+CDNSCFG Configure Domain Name Server

AT+CDNSCFG Configure Domain Name Server	
Test Command <b>AT+CDNSCFG=?</b>	Response <b>+CDNSCFG: ("Primary DNS"),("Secondary DNS")</b>  <b>OK</b>
Read Command <b>AT+CDNSCFG?</b>	Response <b>PrimaryDns: &lt;pri_dns&gt;</b> <b>SecondaryDns: &lt;sec_dns&gt;</b>  <b>OK</b>
Write Command <b>AT+CDNSCFG=&lt;pri_dns&gt;[,&lt;sec_dns&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;pri_dns&gt;</b> A string parameter which indicates the IP address of the primary domain name server  <b>&lt;sec_dns&gt;</b> A string parameter which indicates the IP address of the secondary domain name server
Reference	

## 7.2.15 AT+CDNSGIP Query the IP Address of Given Domain Name

AT+CDNSGIP Query the IP Address of Given Domain Name	
Test Command <b>AT+CDNSGIP=?</b>	Response <b>OK</b>
Write Command <b>AT+CDNSGIP=&lt;domain name&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If successful, return: <b>+CDNSGIP: 1, &lt;domain name&gt;,&lt;IP1&gt;[,&lt;IP2&gt;]</b>

	<p>If fail, return:  <b>+CDNSGIP:0,&lt;dns error code&gt;</b></p>
Parameters	<p><b>&lt;domain name&gt;</b> A string parameter which indicates the domain name</p> <p><b>&lt;IP1&gt;</b> A string parameter which indicates the first IP address corresponding to the domain name</p> <p><b>&lt;IP2&gt;</b> A string parameter which indicates the second IP address corresponding to the domain name</p> <p><b>&lt;dns error code&gt;</b> A numeric parameter which indicates the error code</p> <p><b>8</b> DNS COMMON ERROR</p> <p><b>3</b> NETWORK ERROR</p> <p>There are some other error codes as well.</p>
Reference	

## 7.2.16 AT+CIPHEAD Add an IP Head at the Beginning of a Package Received

AT+CIPHEAD Add an IP Head at the Beginning of a Package Received	
<p>Test Command  <b>AT+CIPHEAD=?</b></p>	<p>Response  <b>+CIPHEAD: (list of supported &lt;mode&gt;s)</b></p> <p><b>OK</b></p>
<p>Read Command  <b>AT+CIPHEAD?</b></p>	<p>Response  <b>+CIPHEAD: &lt;mode&gt;</b></p> <p><b>OK</b></p>
<p>Write Command  <b>AT+CIPHEAD=&lt;mode&gt;</b></p>	<p>Response  <b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;mode&gt;</b> A numeric parameter which indicates whether an IP header is added to the received data or not.</p> <p><b>0</b> Not add IP header</p> <p><b>1</b> Add IP header, the format is:</p> <p>1) For single IP connection (+CIPMUX=0)  <b>+IPD,&lt;data length&gt;</b>:</p> <p>2) For multi IP connection (+CIPMUX=1)</p>

	<b>+RECEIVE,&lt;n&gt;,&lt;data length&gt;:</b>
Reference	

## 7.2.17 AT+CIPATS Set Auto Sending Timer

<b>AT+CIPATS Set Auto Sending Timer</b>	
Test Command <b>AT+CIPATS=?</b>	Response <b>+CIPATS: (list of supported &lt;mode&gt;s),(list of supported &lt;time&gt;)</b>  <b>OK</b>
Read Command <b>AT+CIPATS?</b>	Response <b>+CIPATS: &lt;mode&gt;,&lt;time&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPATS=&lt;mode&gt;[,&lt;time&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> A numeric parameter which indicates whether set timer when module is sending data <b>0</b> Not set timer when module is sending data <b>1</b> Set timer when module is sending data  <b>&lt;time&gt;</b> <b>1..100</b> A numeric parameter which indicates the seconds after which the data will be sent
Reference	

## 7.2.18 AT+CIPSPRT Set Prompt of '>' When Module Sends Data

<b>AT+CIPSPRT Set Prompt of '&gt;' When Module Sends Data</b>	
Test Command <b>AT+CIPSPRT=?</b>	Response <b>+CIPSPRT: (list of supported &lt;send prompt&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPSPRT?</b>	Response <b>+CIPSPRT: &lt;send prompt&gt;</b>

	OK
Write Command <b>AT+CIPSPRT=&lt;send prompt&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;send prompt&gt;</b> A numeric parameter which indicates whether to echo prompt '>' after module issues AT+CIPSEND command. <b>0</b> It shows "send ok" but does not prompt echo '>' when sending is successful. <b><u>1</u></b> It prompts echo '>' and shows "send ok" when sending is successful. <b>2</b> It neither prompts echo '>' nor shows "send ok" when sending is successful.
Reference	

## 7.2.19 AT+CIPSERVER Configure Module as Server

<b>AT+CIPSERVER Configure Module as Server</b>	
Test Command <b>AT+CIPSERVER=?</b>	Response <b>+CIPSERVER: (0-CLOSE SERVER, 1-OPEN SERVER),(1-65535)</b>  <b>OK</b>
Read Command <b>AT+CIPSERVER?</b>	Response <b>+CIPSERVER: &lt;mode&gt;[,&lt;port&gt;,&lt;channel id&gt;,&lt;bearer&gt;]</b>  <b>OK</b>
Write Command <b>AT+CIPSERVER=&lt;mode&gt;,&lt;port&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Close server <b>1</b> Open server  <b>&lt;port&gt;</b> <b>1..65535</b> Listening port

	<p><b>&lt;channel id&gt;</b> Channel id</p> <p><b>&lt;bearer&gt;</b> GPRS bearer</p>
Reference	<p><b>Note:</b></p> <p>This command is allowed to establish a TCP server only when the state is IP INITIAL or IP STATUS when it is in single state. In multi-IP state, the state is in IP STATUS only.</p>

## 7.2.20 AT+CIPCSGP Set GPRS for Connection Mode

AT+CIPCSGP Set GPRS for Connection Mode	
<p>Test Command</p> <p><b>AT+CIPCSGP=?</b></p>	<p>Response</p> <p><b>+CIPCSGP: 1-GPRS,APN,USER NAME,PASSWORD</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CIPCSGP?</b></p>	<p>Response</p> <p><b>+CIPCSGP: &lt;mode&gt;, &lt;apn&gt;, &lt;user name&gt;, &lt;password&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CIPCSGP=&lt;mode&gt;[,(&lt;apn&gt;, &lt;user name&gt;,&lt;password&gt;)]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
parameters	<p><b>&lt;mode&gt;</b> A numeric parameter which indicates the wireless connection mode</p> <p><b>1</b> set GPRS as wireless connection mode</p> <p><b>&lt;apn&gt;</b> A string parameter which indicates the access point name</p> <p><b>&lt;user name&gt;</b> A string parameter which indicates the user name</p> <p><b>&lt;password&gt;</b> A string parameter which indicates the password</p>
Reference	Note

## 7.2.21 AT+CIPSRIP Show Remote IP Address and Port When Received Data

AT+CIPSRIP Show Remote IP Address and Port When Received Data
---

Test Command <b>AT+CIPSRIP=?</b>	Response <b>+CIPSRIP: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPSRIP?</b>	Response <b>+CIPSRIP: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPSRIP=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> A numeric parameter which shows remote IP address and port. <b>0</b> Do not show the prompt <b>1</b> Show the prompt, the format is as follows:  1) For single IP connection (+CIPMUX=0) <b>+RECV FROM:&lt;IP ADDRESS&gt;:&lt;PORT&gt;</b>  1) For multi IP connection (+CIPMUX=1) <b>+RECEIVE,&lt;n&gt;,&lt;data length&gt;,&lt;IP ADDRESS&gt;:&lt;PORT&gt;</b>
Reference	

## 7.2.22 AT+CIPDNDP Set Whether to Check State of GPRS Network Timing

AT+CIPDNDP Set Whether to Check State of GPRS Network Timing	
Test Command <b>AT+CIPDNDP=?</b>	Response <b>+CIPDNDP: (list of supported&lt;mode&gt;s, list of supported &lt;interval&gt;, list of supported &lt;timer&gt;)</b>  <b>OK</b>
Read Command <b>AT+CIPDNDP?</b>	Response <b>+CIPDNDP: &lt;mode&gt;, &lt;interval&gt;, &lt;timer&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPDNDP=&lt;mode&gt;[,&lt;interval&gt;,&lt;timer&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality:



	<b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Not set detect PDP <b>1</b> Set detect PDP  <b>&lt;interval&gt;</b> <b>1&lt;=interval&lt;=180(s)</b>  <b>&lt;timer&gt;</b> <b>1&lt;=timer&lt;=10</b>
Reference	<b>Note:</b> If "+PDP: DEACT" urc is reported because of module not attaching to gprs for a certain time or other reasons, user still needs to execute "AT+CIPSHUT" command makes PDP context come back to original state.

### 7.2.23 AT+CIPMODE Select TCPIP Application Mode

<b>AT+CIPMODE Select TCPIP Application Mode</b>	
Test Command <b>AT+CIPMODE=?</b>	Response <b>+CIPMODE:(0-NORMAL MODE,1-TRANSPARENT MODE)</b>  <b>OK</b>
Read Command <b>AT+CIPMODE?</b>	Response <b>+CIPMODE: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPMODE=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Normal mode <b>1</b> Transparent mode
Reference	

### 7.2.24 AT+CIPCCFG Configure Transparent Transfer Mode

<b>AT+CIPCCFG Configure Transparent Transfer Mode</b>
---

<p>Test Command <b>AT+CIPCCFG=?</b></p>	<p>Response <b>+CIPCCFG:</b> <b>(NmRetry:3-8),(WaitTm:2-10),(SendSz:1-1460),(esc:0,1),(Rxmode:0,1),(RxSize:50-1460),(Rxtimer:20-1000)</b></p> <p><b>OK</b></p>
<p>Read Command <b>AT+CIPCCFG?</b></p>	<p>Response <b>+CIPCCFG:</b> <b>&lt;NmRetry&gt;,&lt;WaitTm&gt;,&lt;SendSz&gt;,&lt;esc&gt;,&lt;Rxmode&gt;,&lt;RxSize&gt;,&lt;Rxtimer&gt;</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CIPCCFG=&lt;NmRetry&gt;,&lt;WaitTm&gt;,&lt;SendSz&gt;,&lt;esc&gt;[,&lt;Rxmode&gt;,&lt;RxSize&gt;,&lt;Rxtimer&gt;]</b></p>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;NmRetry&gt;</b> Number of retries to be made for an IP packet.</p> <p><b>&lt;WaitTm&gt;</b> Number of 100ms intervals to wait for serial input before sending the packet.</p> <p><b>&lt;SendSz&gt;</b> Size in bytes of data block to be received from serial port before sending.</p> <p><b>&lt;esc&gt;</b> Whether turn on the escape sequence, default is TRUE.  <b>0</b> Turn off the escape sequence  <b><u>1</u></b> Turn on the escape sequence</p> <p><b>&lt;Rxmode&gt;</b> Whether to set time interval during output data from serial port.  <b>0</b> output data to serial port without interval  <b>1</b> output data to serial port within &lt;Rxtimer&gt; interval.</p> <p><b>&lt;RxSize&gt;</b> Output data length for each time, default value is 1460.</p> <p><b>&lt;Rxtimer&gt;</b> Time interval (ms) to wait for serial port to output data again. Default value: 50ms</p>
<p>Reference</p>	<p><b>Note:</b> This command will be effective only in single connection mode (+CIPMUX=0)</p>

## 7.2.25 AT+CIPSHOWTP Display Transfer Protocol in IP Head When Received Data

AT+CIPSHOWTP Display Transfer Protocol in IP Head When Received Data	
Test Command <b>AT+CIPSHOWTP=?</b>	Response <b>+CIPSHOWTP: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPSHOWTP?</b>	Response <b>+CIPSHOWTP: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPSHOWTP=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> A numeric parameter which indicates whether to display transfer protocol in IP header to received data or not <b>0</b> Not display transfer protocol <b>1</b> Display transfer protocol, the format is "+IPD,<data size>,<TCP/UDP>:<data>"
Reference	<b>Note:</b> This command will be effective only in single connection mode (+CIPMUX=0) Only when +CIPHEAD is set to 1, the setting of this command will work..

## 7.2.26 AT+CIPUDPMODE UDP Extended Mode

AT+CIPUDP MODEUDP Extended Mode	
Test Command <b>AT+CIPUDPMODE=?</b>	Response 1) For single IP connection (+CIPMUX=0) <b>+CIPUDPMODE: (0-2),("0-255).(0-255).(0-255).(0-255)"</b> ),(1-65535)  <b>OK</b>  2) For multi IP connection (+CIPMUX=1) <b>+CIPUDPMODE: (0-7),(0-2),("0-255).(0-255).(0-255).(0-255)"</b> ),(1-65535)  <b>OK</b>

<p>Read Command</p> <p><b>AT+CIPUDPMODE?</b></p>	<p>Response</p> <p>1) For single IP connection (+CIPMUX=0)  <b>+CIPUDPMODE: &lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b></p> <p><b>OK</b></p> <p>2) For multi IP connection (+CIPMUX=1)  <b>+CIPUDPMODE: 0, &lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 1,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 2,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 3,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 4,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 5,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 6,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b>  <b>+CIPUDPMODE: 7,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p>1) For single IP connection (+CIPMUX=0)  <b>AT+CIPUDPMODE=&lt;mode&gt;[,&lt;IP address&gt;,&lt;Port&gt;]</b></p> <p>2) For multi IP connection (+CIPMUX=1)  <b>AT+CIPUDPMODE=&lt;n&gt;,&lt;mode&gt; [,&lt;IP address&gt;,&lt;Port&gt;]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;n&gt;</b> A numeric parameter which indicates the connection number  <b>0-7</b></p> <p><b>&lt;mode&gt;</b></p> <p><b>0</b> UDP Normal Mode  <b>1</b> UDP Extended Mode  <b>2</b> Set UDP address to be sent</p> <p><b>&lt;IP address&gt;</b> A string parameter which indicates remote IP address</p> <p><b>&lt;port&gt;</b> Remote port</p>
<p>Reference</p>	

## 7.2.27 AT+CIPRXGET Get Data from Network Manually

AT+CIPRXGET Get Data from Network Manually	
<p>Test Command</p> <p><b>AT+CIPRXGET=?</b></p>	<p>Response</p> <p>If single IP connection (+CIPMUX=0)</p> <p><b>+CIPRXGET: (list of supported &lt;mode&gt;s),(list of supported &lt;reqlength&gt;)</b></p> <p><b>OK</b></p> <p>If multi IP connection (+CIPMUX=1)</p> <p><b>+CIPRXGET: (list of supported &lt;mode&gt;s), (list of supported &lt;id&gt;s), (list of supported &lt;reqlength&gt;)</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+CIPRXGET?</b></p>	<p>Response</p> <p><b>+CIPRXGET: &lt;mode&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p>1) If single IP connection (+CIPMUX=0)</p> <p><b>AT+CIPRXGET=&lt;mode&gt;[,&lt;reqlength&gt;]</b></p> <p>2) If multi IP connection (+CIPMUX=1)</p> <p><b>AT+CIPRXGET=&lt;mode&gt;[,&lt;id&gt;,&lt;reqlength&gt;]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>1)For single IP connection If "AT+CIPSRIP=1" is set, IP address and port are contained. if &lt;mode&gt;=1 <b>+CIPRXGET: 1[,&lt;IP ADDRESS&gt;:&lt;PORT&gt;]</b></p> <p>if &lt;mode&gt;=2 <b>+CIPRXGET: 2,&lt;reqlength&gt;,&lt;cnflength&gt;[,&lt;IP ADDRESS&gt;:&lt;PORT&gt;]</b> <b>1234567890...</b></p> <p><b>OK</b></p> <p>if &lt;mode&gt;=3 <b>+CIPRXGET: 3,&lt;reqlength&gt;,&lt;cnflength&gt;[,&lt;IP ADDRESS&gt;:&lt;PORT&gt;]</b> <b>5151...</b></p> <p><b>OK</b></p> <p>if &lt;mode&gt;=4 <b>+CIPRXGET: 4, &lt;cnflength&gt;</b></p> <p><b>OK</b></p> <p>2)For multi IP connection If "AT+CIPSRIP=1" is set, IP address and port is contained. if &lt;mode&gt;=1</p>

	<pre> +CIPRXGET: 1[,&lt;id&gt;,&lt;IP ADDRESS&gt;:&lt;PORT&gt;]  if &lt;mode&gt;=2 +CIPRXGET: 2,&lt;id&gt;,&lt;reqlength&gt;,&lt;cnflength&gt;[,&lt;IP ADDRESS&gt;:&lt;PORT&gt;] 1234567890...  OK  if &lt;mode&gt;=3 +CIPRXGET: 3,&lt;id&gt;,&lt;reqlength&gt;,&lt;cnflength&gt;[,&lt;IP ADDRESS&gt;:&lt;PORT&gt;] 5151...  OK  if &lt;mode&gt;=4 +CIPRXGET: 4,&lt;id&gt;,&lt;cnflength&gt;  OK  If error is related to ME functionality: +CME ERROR: &lt;err&gt; </pre>
Parameters	<p><b>&lt;mode&gt;</b></p> <ul style="list-style-type: none"> <li><b>0</b> Disable getting data from network manually, the module is set to normal mode, data will be pushed to TE directly.</li> <li><b>1</b> Enable getting data from network manually.</li> <li><b>2</b> The module can get data, but the length of output data cannot exceed 1460 bytes at a time.</li> <li><b>3</b> Similar to mode 2, but in HEX mode, which means the module can get 730 bytes maximum at a time.</li> <li><b>4</b> Query how many data are not read with a given ID.</li> </ul> <p><b>&lt;id&gt;</b> A numeric parameter which indicates the connection number</p> <p><b>&lt;reqlength&gt;</b> Requested number of data bytes (1-1460 bytes)to be read</p> <p><b>&lt;cnflength&gt;</b> Confirmed number of data bytes to be read, which may be less than &lt;length&gt;. 0 indicates that no data can be read.</p>
Reference	<p><b>Note:</b></p> <p>To enable this function, parameter &lt;mode&gt; must be set to 1 before connection.</p>

## 7.2.28 AT+CIPRDTIMER Set Remote Delay Timer

AT+CIPRDTIMER Set Remote Delay Timer	
Test Command <b>AT+CIPRDTIMER=?</b>	Response <b>+CIPRDTIMER: (100-4000),(100-7000)</b>  <b>OK</b>
Read Command <b>AT+CIPRDTIMER?</b>	Response <b>+CIPRDTIMER: &lt;rdsigtimer&gt;,&lt;rdmuxtimer&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPRDTIMER=&lt;rdsigtimer&gt;,&lt;rdmuxtimer&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;rdsigtimer&gt;</b> remote delay timer of single connection.  <b>&lt;rdmuxtimer&gt;</b> remote delay timer of multi-connections.
Reference	<b>Note:</b> This command is used to shorten the disconnect time locally when the remote server has been disconnected.

## 7.2.29 AT+CIPSGTXT Select GPRS PDP context

AT+CIPSGTXT Select GPRS PDP context	
Test Command <b>AT+CIPSGTXT=?</b>	Response <b>+CIPSGTXT: (0,1)</b>  <b>OK</b>
Write Command <b>AT+CIPSGTXT=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> select first PDP context <b>1</b> select second PDP context
Reference	<b>Note:</b> This command is used to select pdp context, only for multi IP connection (+CIPMUX=1).

### 7.2.30 AT+CIPOPTION Set TCP Option

AT+CIPOPTION Set TCP Option	
Test Command <b>AT+CIPOPTION =?</b>	Response <b>+CIPOPTION: (list of supported &lt;nodelay&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPOPTION?</b>	Response <b>+CIPOPTION: &lt;nodelay&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPOPTION=&lt;nodelay&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;nodelay&gt;</b> <b>0</b> Disable <b><u>1</u></b> Enable TCP no delay function.
Reference	

### 7.2.31 AT+CIPSENDHEX Set CIPSEND Data Format to Hex

AT+CIPSENDHEX Set CIPSEND Data Format to HEX	
Test Command <b>AT+CIPSENDHEX=?</b>	Response <b>+CIPSENDHEX: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPSENDHEX?</b>	Response <b>+CIPSENDHEX: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPSENDHEX=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b><u>0</u></b> The default format of output data in AT+CIPSEND. <b>1</b> Set the input data in HEX format when using CIPSEND command to send data.



Reference

### 7.2.32 AT+CIPHEXS Set Output-data Format with suffix

AT+CIPHEXS Set Output-data Format with suffix	
Test Command <b>AT+CIPHEXS=?</b>	Response <b>+CIPHEXS: (list of supported &lt;mode&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPHEXS?</b>	Response <b>+CIPHEXS: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPHEXS=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> The default format of output data <b>1</b> Set the output data with suffix "0d 0a". <b>2</b> Set the output data in HEX format with suffix "0d 0a".
Reference	<b>Note:</b> This command is only available when "AT+CIPHEAD=1"

### 7.2.33 AT+CIPSSL Enable TCP SSL function

AT+CIPSSL Enable TCP SSL function	
Test Command <b>AT+CIPSSL=?</b>	Response <b>+CIPSSL: (0-1)</b>  <b>OK</b>
Read Command <b>AT+CIPSSL?</b>	Response <b>+ CIPSSL: &lt;n&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPSSL=&lt;n&gt;</b>	Response <b>OK</b>
Parameters	<b>&lt;n&gt;</b> <b>0</b> Enable SSL function

	1 Disable SSL function
Reference	<b>Note:</b> Module will process SSL automatic verification, after enabled SSL function, with SSL client support only.

SIMCOM CONFIDENTIAL FILE

## 8. AT Commands for PING Application

### 8.1 Overview

Command	Description
AT+CIPPING	PING Request
AT+CIPCTL	Set the Mode When Receiving an IP Packet
AT+CIPFLT	SET THE RULES OF IP FILTER

### 8.2 Detailed Descriptions of Commands

#### 8.2.1 AT+CIPPING PING Request

AT+CIPPING PING Request	
Test Command <b>AT+CIPPING=?</b>	Response <b>+CIPPING:</b> (list of supported <retryNum>s),(list of supported <dataLen>s),(list of supported <timeout>s),(list of supported <tTl>s)  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Read Command <b>AT+CIPPING?</b>	Response <b>+CIPPING:</b> <retryNum>,<dataLen>,<timeout>,<tTl>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CIPPING=&lt;IPaddr&gt;[,&lt;retr yNum&gt;[,&lt;dataLen&gt;[,&lt;timeo ut&gt;[,&lt;tTl&gt;]]]]</b>	Response <b>+CIPPING: &lt;replyId&gt;,&lt;Ip Address&gt;,&lt;replyTime&gt;,&lt;tTl&gt;[&lt;CR&gt;&lt;LF&gt; +CIPPING: &lt;replyId&gt;,&lt;Ip Address&gt;,&lt;replyTime&gt;,&lt;tTl&gt; [...]]</b>  <b>OK</b>

	<p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;IPAddr&gt;</b> Address of the remote host,string type.This parameter can be either:</p> <ul style="list-style-type: none"> <li>- IP address in the format:"xxx.xxx.xxx.xxx"</li> <li>- Host name solved by a DNS query</li> </ul> <p><b>&lt;retryNum&gt;</b> The number of Ping Echo Request to send  <b>1-100</b> Default: 4</p> <p><b>&lt;dataLen&gt;</b> The length of Ping Echo Request data  <b>0-1024</b> Default: 32</p> <p><b>&lt;timeout&gt;</b> The timeout,in units of 100 ms,waiting for a single Echo Reply  <b>1-600</b> Default: 100(10 seconds)</p> <p><b>&lt;tTl&gt;</b> Time to live  <b>1-255</b> Default: 64</p> <p><b>&lt;replyId&gt;</b> Echo Reply number</p> <p><b>&lt;IP Address&gt;</b> IP Address of the remote host</p> <p><b>&lt;replyTime&gt;</b> Time,in units of 100 ms, required to receive the response</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Before sending PING Request the GPRS context must be activated.</li> <li>• When the Echo Request timeout expires (no reply received on time), the response will contains &lt;replyTime&gt; setting to 600 and &lt;tTl&gt; setting to 255.</li> <li>• When executing this command, if PDP context is deactivated for some reasons, such as out of service, etc.,the "+PDP: DEACT" URC is reported and the command will end immediately.</li> </ul>

## 8.2.2 AT+CIPCTL Set the Mode When Receiving an IP Packet

AT+CIPCTL Set the Mode When Receiving an IP Packet	
Test Command	Response
AT+CIPCTL=?	+CIPCTL: (list of supported <mode>s)
	OK

Read Command <b>AT+CIPCTL?</b>	Response <b>+CIPCTL: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CIPCTL=</b> <b>&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Disable to send Echo Reply <b>1</b> Enable to send Echo Reply to every IP address pinging it <b>2</b> Enable to send Echo Reply only to a subset of IP Addresses pinging it. This subset of IP Addresses can be set by "AT+CIPFLT" command.
Reference	<b>Note:</b> The value of <mode> is stored in non volatile memory.

### 8.2.3 AT+CIPFLT Set the Rules of IP Filter

<b>AT+CIPFLT Set the Rules of IP Filter</b>	
Test Command <b>AT+CIPFLT=?</b>	Response <b>+CIPFLT: (list of supported &lt;action&gt;s),(list of supported &lt;item&gt;s)</b>  <b>OK</b>
Read Command <b>AT+CIPFLT?</b>	Response <b>+CIPFLT: &lt;item&gt;,&lt;ipAddr&gt;,&lt;mask&gt;</b> <b>[&lt;CR&gt;&lt;LF&gt;+CIPFLT: &lt;item&gt;,&lt;ipAddr&gt;,&lt;mask&gt;</b> <b>[...]]</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Write Command <b>AT+CIPFLT=</b> <b>&lt;action&gt;[,&lt;item&gt;][,</b> <b>&lt;ipAddr&gt;,&lt;mask&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;action&gt;</b> <b>0</b> Remove the rule specified by <item>. <item> must be given. <b>1</b> Add the rule specified by <item>.If <item> is not given, it can find an empty item automatically. <ipAddr> and <mask> must be

	<p>given.</p> <p><b>2</b> Delete all of rules</p> <p><b>&lt;item&gt;</b> The item of IP filter rule</p> <p><b>1-20</b></p> <p><b>&lt;ipAddr&gt;</b> Remote IP address,string type. It can be any valid IP address in the format of "xxx.xxx.xxx.xxx"</p> <p><b>&lt;mask&gt;</b> Mask to be applied to the&lt;ipAddr&gt;,string type. It can be any valid IP address mask in the format of "xxx.xxx.xxx.xxx"</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When a packet comes from the IP address coming_IP, All rules will be scanned to match the following criteria:&lt;coming_IP&gt; &amp; &lt;mask&gt; = &lt;ipAddr&gt; &amp; &lt;mask&gt;If the criteria is matched, the IP packet will be accepted and the rule scan is finished. If the criteria is not matched, the IP packet will be ignored.</li> <li>The rule is stored in non volatile memory.</li> </ul>

## 9. AT Commands for IP Application

### 9.1 Overview

Command	Description
AT+SAPBR	BEARER SETTINGS FOR APPLICATIONS BASED ON IP

### 9.2 Detailed Descriptions of Commands

#### 9.2.1 AT+SAPBR Bearer Settings for Applications Based on IP

AT+SAPBR Bearer Settings for Applications Based on IP	
Test Command	Response
AT+SAPBR=?	+SAPBR: (0-4),(1-3), "ConParamTag","ConParamValue"
	OK

<p>Write Command</p> <p><b>AT+SAPBR=&lt;cmd_type&gt;,&lt;cid&gt;[,&lt;ConParamTag&gt;,&lt;ConParamValue&gt;]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If&lt;cmd_type&gt;=2</p> <p><b>+SAPBR: &lt;cid&gt;,&lt;Status&gt;,&lt;IP_Addr&gt;</b></p> <p><b>OK</b></p> <p>If &lt;cmd_type&gt;=4</p> <p><b>+SAPBR: &lt;ConParamTag&gt;,&lt;ConParamValue&gt;</b></p> <p><b>OK</b></p> <p>Unsolicited Result Code</p> <p><b>+SAPBR &lt;cid&gt;: DEACT</b></p>
<p>Parameters</p>	<p><b>&lt;cmd_type&gt;</b></p> <p><b>0</b> Close bearer</p> <p><b>1</b> Open bearer</p> <p><b>2</b> Query bearer</p> <p><b>3</b> Set bearer parameters</p> <p><b>4</b> Get bearer parameters</p> <p><b>&lt;cid&gt;</b> Bearer profile identifier</p> <p><b>&lt;Status&gt;</b></p> <p><b>0</b> Bearer is connecting</p> <p><b>1</b> Bearer is connected</p> <p><b>2</b> Bearer is closing</p> <p><b>3</b> Bearer is closed</p> <p><b>&lt;ConParamTag&gt;</b> Bearer parameter</p> <p><b>"CONTYPE"</b> type of Internet connection. Value refers to &lt;ConParamValue_ConType&gt;</p> <p><b>"APN"</b> Access point name string: maximum 50 characters</p> <p><b>"USER"</b> User name string: maximum 50 characters</p> <p><b>"PWD"</b> Password string: maximum 50 characters</p> <p><b>&lt;ConParamValue&gt;</b> Bearer parameter value</p> <p><b>&lt;ConParamValue_ConType&gt;</b></p> <p><b>"GPRS"</b> GPRS connection.</p> <p><b>&lt;IP_Addr&gt;</b> The IP address of bearer</p>
<p>Reference</p>	<p><b>Note:</b></p>

This command is applied to activate some applications such as HTTP, FTP.

## 10. AT Commands for HTTP Application

SIM5300E has an embedded TCP/IP stack that is driven by AT commands and enables the host application to easily access the Internet HTTP service. This chapter is a reference guide to all the AT commands and responses defined to use with the TCP/IP stack in HTTP Service.

### 10.1 Overview

Command	Description
AT+HTTPIPINIT	INITIALIZE HTTP SERVICE
AT+HTTPIPTERM	TERMINATE HTTP SERVICE
AT+HTTPIP PARA	SET HTTP PARAMETERS VALUE
AT+HTTPIP DATA	INPUT HTTP DATA
AT+HTTPIP ACTION	HTTP METHOD ACTION
AT+HTTPIP READ	READ THE HTTP SERVER RESPONSE
AT+HTTPIP STATUS	READ HTTP STATUS

### 10.2 Detailed Descriptions of Commands

#### 10.2.1 AT+HTTPIPINIT Initialize HTTP Service

AT+HTTPIPINIT Initialize HTTP Service	
Test Command <b>AT+HTTPIPINIT=?</b>	Response <b>OK</b>
Execution Command <b>AT+HTTPIPINIT</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Reference	<b>Note:</b> HTTPIPINIT should first be executed to initialize the HTTP service.



## 10.2.2 AT+HTTPTERM Terminate HTTP Service

AT+HTTPTERM Terminate HTTP Service	
Test Command <b>AT+HTTPTERM=?</b>	Response <b>OK</b>
Execution command <b>AT+HTTPTERM</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Reference	Note

## 10.2.3 AT+HTTPPARA Set HTTP Parameters Value

AT+HTTPPARA Set HTTP Parameters Value	
Test Command <b>AT+HTTPPARA=?</b>	Response <b>+HTTPPARA: "HTTPParamTag","HTTPParamValue"</b>  <b>OK</b>
Read Command <b>AT+HTTPPARA?</b>	Response <b>+HTTPPARA:</b> <b>&lt;HTTPParamTag&gt;,&lt;HTTPParamValue&gt;</b>  <b>OK</b>
Write Command <b>AT+HTTPPARA=&lt;HTTPParamTag&gt;,&lt;HTTPParamValue&gt;[,&lt;UserdataDelimiter&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;HTTPParamTag&gt;</b> HTTP Parameter</p> <p><b>"CID"</b> (Mandatory Parameter) Bearer profile identifier</p> <p><b>"URL"</b> (Mandatory Parameter) HTTP client URL, the maximum length is 500 bytes. "<a href="http://server/path:tcpPort">http://server/path:tcpPort</a> "  "server":FQDN or IP-address  "path":path of file or directory  "tcpPort":default value is 80.</p> <p><b>"UA"</b> Refer to "IETF-RFC 2616".  The user agent string which is set by the application to identify the mobile. Usually this parameter is set as operation system and software version information. The maximum length is 200.</p>

**“PROIP”** bytes.  
**“PROPORT”** Default value is "SIMCOM\_MODULE".  
**“REDIR”** This flag controls the redirection mechanism of the SIM800 when it is acting as HTTP client (numeric). If the server sends a redirect code (range 30x), the client will automatically send a new HTTP request when the flag is set to (1). Default value is 0 (no redirection).  
**“BREAK”** Parameter for HTTP method "GET", used for resuming broken transfer.  
**“BREAKEND”** Parameter for HTTP method "GET", used for resuming broken transfer. which is used together with "BREAK", If the value of "BREAKEND" is bigger than "BREAK", the transfer scope is from "BREAK" to "BREAKEND". If the value of "BREAKEND" is smaller than "BREAK", the transfer scope is from "BREAK" to the end of the file.  
**“TIMEOUT”** If both "BREAKEND" and "BREAK" are 0, the resume broken transfer function is disabled.  
 HTTP session timeout value, scope: 30-1000 second.  
 Default value is 120 seconds.  
 HTTP Parameter value. Type and supported content depend on related <HTTPParamTag>.  
**“CONTENT”** Used to set the “Content-Type” field in HTTP header.  
**“USERDATA”** User data  
**<HTTPParamValue>** HTTP Parameter value. Type and supported content depend on related <HTTPParamTag>.  
**<UserdataDelimiter>** The delimiter in the string of “USERDATA” will be replaced by 0x0D0x0A, limited to 2 characters in length.

Reference

**Note:**  
 Not all the HTTP Server supports "BREAK" and "BREAKEND" parameters

## 10.2.4 AT+HTTPDATA Input HTTP Data

### AT+HTTPDATA Input HTTP Data

Test Command	Response
AT+HTTPDATA=?	+HTTPDATA: (list of supported <size>s),(list of supported <time>s)  OK

Write Command <b>AT+HTTPDATA=&lt;size&gt;,&lt;time&gt;</b>	Response <b>DOWNLOAD</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;size&gt;</b> Size in bytes of the data to POST. <b>1-319488 (bytes)</b> the maximum size depends on the module. <b>0</b> means delete all the content.  <b>&lt;time&gt;</b> 1000-120000 (millisecond) Maximum time in milliseconds to input data.
Reference	<b>Note:</b> It is strongly recommended to set enough time to input all data with the length of <size>.

## 10.2.5 AT+HTTPACTION HTTP Method Action

AT+HTTPACTION HTTP Method Action	
Test Command <b>AT+HTTPACTION=?</b>	Response <b>+HTTPACTION: (0-2)</b>  <b>OK</b>
Write Command <b>AT+HTTPACTION=&lt;Method&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Unsolicited Result Code <b>+HTTPACTION: &lt;Method&gt;,&lt;StatusCode&gt;,&lt;DataLen&gt;</b>
Parameters	<b>&lt;Method&gt;</b> HTTP method specification: <b>0</b> GET <b>1</b> POST <b>2</b> HEAD  <b>&lt;StatusCode&gt;</b> HTTP Status Code responded by remote server, it identifier refer to HTTP1.1(RFC2616) <b>100</b> Continue <b>101</b> Switching Protocols

<b>200</b>	OK
<b>201</b>	Created
<b>202</b>	Accepted
<b>203</b>	Non-Authoritative Information
<b>204</b>	No Content
<b>205</b>	Reset Content
<b>206</b>	Partial Content
<b>300</b>	Multiple Choices
<b>301</b>	Moved Permanently
<b>302</b>	Found
<b>303</b>	See Other
<b>304</b>	Not Modified
<b>305</b>	Use Proxy
<b>307</b>	Temporary Redirect
<b>400</b>	Bad Request
<b>401</b>	Unauthorized
<b>402</b>	Payment Required
<b>403</b>	Forbidden
<b>404</b>	Not Found
<b>405</b>	Method Not Allowed
<b>406</b>	Not Acceptable
<b>407</b>	Proxy Authentication Required
<b>408</b>	Request Time-out
<b>409</b>	Conflict
<b>410</b>	Gone
<b>411</b>	Length Required
<b>412</b>	Precondition Failed
<b>413</b>	Request Entity Too Large
<b>414</b>	Request-URI Too Large
<b>415</b>	Unsupported Media Type
<b>416</b>	Requested range not satisfiable
<b>417</b>	Expectation Failed
<b>500</b>	Internal Server Error
<b>501</b>	Not Implemented
<b>502</b>	Bad Gateway
<b>503</b>	Service Unavailable
<b>504</b>	Gateway Time-out
<b>505</b>	HTTP Version not supported
<b>600</b>	Not HTTP PDU
<b>601</b>	Network Error
<b>602</b>	No memory
<b>603</b>	DNS Error
<b>604</b>	Stack Busy

	<b>&lt;DataLen&gt;</b> the length of data got
Reference	Note

## 10.2.6 AT+HTTPREAD Read the HTTP Server Response

AT+HTTPREAD Read the HTTP Server Response	
Test Command <b>AT+HTTPREAD=?</b>	Response <b>+HTTPREAD:</b> (list of supported <b>&lt;start_address&gt;</b> s),(list of supported <b>&lt;byte_size&gt;</b> s)  <b>OK</b>
Write Command <b>AT+HTTPREAD=&lt;start_address&gt;,&lt;byte_size&gt;</b>	Response <b>+HTTPREAD: &lt;date_len&gt;</b> <b>&lt;data&gt;</b>  <b>OK</b>  Read data when AT+HTTPACTION=0 or AT+HTTPDATA is executed.  If <b>&lt;byte_size&gt;</b> is bigger than the data size received, module will only return actual data size.  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Execution Command <b>AT+HTTPREAD</b>	Response <b>+HTTPREAD: &lt;date_len&gt;</b> <b>&lt;data&gt;</b>  <b>OK</b>  Read all data when AT+HTTPACTION=0 or AT+HTTPDATA is executed.  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;data&gt;</b> Data from HTTP server or user input.  <b>&lt;start_address&gt;</b> The starting point for data output. <b>0-319488</b> (bytes), the max value is due to the module used.  <b>&lt;byte_size&gt;</b> The length for data output.

	<p><b>1-319488</b>(bytes), the max value is due to the module used.</p> <p><b>&lt;data_len&gt;</b> The actual length for data output.</p>
Reference	Note

## 10.2.7 AT+HTTPSTATUS Read HTTP Status

AT+HTTPSTATUS Read HTTP Status	
Test Command <b>AT+HTTPSTATUS=?</b>	Response <b>OK</b>
Read Command <b>AT+HTTPSTATUS?</b>	Response <b>+HTTPSTATUS: &lt;mode&gt;,&lt;status&gt;,&lt;finish&gt;,&lt;remain&gt;</b>  <b>OK</b>
Parameters	<p><b>&lt;mode&gt;</b>  <b>GET</b>  <b>POST</b>  <b>HEAD</b></p> <p><b>&lt;status&gt;</b>  <b>0</b> idle  <b>1</b> receiving  <b>2</b> sending</p> <p><b>&lt;finish&gt;</b>            The amount of data which have been transmitted.</p> <p><b>&lt;remain&gt;</b>            The amount of data remaining to be sent or received.</p>

# 11. AT Commands for FTP Application

SIM5300E has an embedded TCP/IP stack that is driven by AT commands and enables the host application to easily access the Internet FTP service. This chapter is a reference guide to all the AT commands and responses defined for using with the TCP/IP stack in FTP Service.

## 11.1 Overview

Command	Description
AT+FTPPORT	SET FTP PORT
AT+FTPMODE	SET ACTIVE OR PASSIVE FTP MODE
AT+FTPTYPE	SET FTP TRANSFER TYPE
AT+FTPPUTOPT	SET FTP PUT TYPE
AT+FTPCID	SET FTP BEARER PROFILE IDENTIFIER
AT+FTPREST	SET RESUME BROKEN DOWNLOAD
AT+FTPSERV	SET FTP SERVER ADDRESS
AT+FTPUN	SET FTP USER NAME
AT+FTPPW	SET FTP PASSWORD
AT+FTPGETNAME	SET DOWNLOAD FILE NAME
AT+FTPGETPATH	SET DOWNLOAD FILE PATH
AT+FTPPUTNAME	SET UPLOAD FILE NAME
AT+FTPPUTPATH	SET UPLOAD FILE PATH
AT+FTPGET	DOWNLOAD FILE
AT+FTPPUT	UPLOAD FILE
AT+FTPDELE	DELETE REMOTE FILE
AT+FTPSIZE	GET THE SIZE OF SPECIFIED FILE ON THE REMOTE MACHINE
AT+FTPSTATE	GET FTP CURRENT STATE
AT+FTPEXTPUT	EXTEND UPLOAD FILE
AT+FTPMKD	MAKE DIRECTORY ON THE REMOTE MACHINE
AT+FTPRMD	REMOVE DIRECTORY ON THE REMOTE MACHINE
AT+FTPLIST	LIST CONTENTS OF DIRECTORY ON THE REMOTE MACHINE
AT+FTPEXTGET	DOWNLOAD FILE FROM THE REMOTE MACHINE TO FLASH
AT+FTPGET	DOWNLOAD FILE
AT+FTPETPUT	UPLOAD FILE
AT+FTPQUIT	QUIT FTP TRANSFER SESSION
AT+FTPRENAME	RENAME THE SPECIFIED FILE ON THE REMOTE MACHINE
AT+FTPMDTM	GET THE LAST MODIFICATION TIMESTAMP OF SPECIFIED FILE ON THE REMOTE MACHINE

## 11.2 Detailed Descriptions of Commands

### 11.2.1 AT+FTPPORT Set FTP Port

**AT+FTPPORT Set FTP Port**

Test Command <b>AT+FTPPORT=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPPORT?</b>	Response <b>+FTPPORT: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPPORT=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> The value of FTP Control port, from 1 to 65535. Default value is 21
Reference	<b>Note:</b> Numbers above 65535 are illegal as the port identification fields are 16 bits long in the TCP header.

### 11.2.2 AT+FTPMODE Set Active or Passive FTP Mode

<b>AT+FTPMODE Set Active or Passive FTP Mode</b>	
Test Command <b>AT+FTPMODE=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPMODE?</b>	Response <b>+FTPMODE: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPMODE=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;value&gt;</b> <b>0</b> Active FTP mode <b>1</b> Passive FTP mode
Reference	

### 11.2.3 AT+FTPTYPE Set FTP Transfer Type

<b>AT+FTPTYPE Set FTP Transfer Type</b>	
---	--



Test Command <b>AT+FTPTYPE=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPTYPE?</b>	Response <b>+FTPTYPE: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPTYPE=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> "A" For FTP ASCII sessions "I" For FTP Binary sessions
Reference	<b>Note:</b> When this value is set to A, all the data sent by the stack to the FTP server is made of 7 bits characters (NVT-ASCII: the MSB is set to 0). As a consequence binary data containing 8 bits characters will be corrupted during the transfer if the FTPTYPE is set to A.

#### 11.2.4 AT+FTPPUTOPT Set FTP Put Type

<b>AT+FTPPUTOPT Set FTP Put Type</b>	
Test Command <b>AT+FTPPUTOPT=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPPUTOPT?</b>	Response <b>+FTPPUTOPT: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPPUTOPT=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> "APPE" For appending file "STOU" For storing unique file " <u>STOR</u> " For storing file
Reference	Note

## 11.2.5 AT+FTPCID Set FTP Bearer Profile Identifier

AT+FTPCID Set FTP Bearer Profile Identifier	
Test Command <b>AT+FTPCID=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPCID?</b>	Response <b>+FTPCID: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPCID=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Bearer profile identifier refer to AT+SAPBR
Reference	

## 11.2.6 AT+FTPRES Set Resume Broken Download

AT+FTPRES Set Resume Broken Download	
Test Command <b>AT+FTPRES=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPRES?</b>	Response <b>+FTPRES: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPRES=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;value&gt;</b> Broken point to be resumed
Reference	Note

## 11.2.7 AT+FTPSERV Set FTP Server Address

AT+FTPSERV Set FTP Server Address	
Test Command <b>AT+FTPSERV=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPSERV?</b>	Response <b>+FTPSERV: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPSERV=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> 32-bit number in dotted-decimal notation (i.e. xxx.xxx.xxx.xxx) or alphanumeric ASCII text string up to 49 characters if DNS is available
Reference	

## 11.2.8 AT+FTPUN Set FTP User Name

AT+FTPUN Set FTP User Name	
Test Command <b>AT+FTPUN=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPUN?</b>	Response <b>+FTPUN: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPUN=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Alphanumeric ASCII text string up to 49 characters.
Reference	

## 11.2.9 AT+FTPPW Set FTP Password

<b>AT+FTPPW Set FTP Password</b>	
Test Command <b>AT+FTPPW=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPPW?</b>	Response <b>+FTPPW: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPPW=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Alphanumeric ASCII text string up to 49 characters.
Reference	

### 11.2.10 AT+FTPGETNAME Set Download File Name

<b>AT+FTPGETNAME Set Download File Name</b>	
Test Command <b>AT+FTPGETNAME=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPGETNAME?</b>	Response <b>+FTPGETNAME: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPGETNAME=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Alphanumeric ASCII text string up to 99 characters
Reference	Note

### 11.2.11 AT+FTPGETPATH Set Download File Path

<b>AT+FTPGETPATH Set Download File Path</b>	
Test Command <b>AT+FTPGETPATH=?</b>	Response <b>OK</b>

Read Command <b>AT+FTPGETPATH?</b>	Response <b>+FTPGETPATH: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPGETPATH=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Alphanumeric ASCII text string up to 256 characters
Reference	Note

### 11.2.12 AT+FTPPUTNAME Set Upload File Name

<b>AT+FTPPUTNAME Set Upload File Name</b>	
Test Command <b>AT+FTPPUTNAME=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPPUTNAME?</b>	Response <b>+FTPPUTNAME: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPPUTNAME=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Alphanumeric ASCII text string up to 99 characters
Reference	Note

### 11.2.13 AT+FTPPUTPATH Set Upload File Path

<b>AT+FTPPUTPATH Set Upload File Path</b>	
Test Command <b>AT+FTPPUTPATH=?</b>	Response <b>OK</b>

Read Command <b>AT+FTPPUTPATH?</b>	Response <b>+FTPPUTPATH: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+FTPPUTPATH=&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> Alphanumeric ASCII text string up to 256 characters
Reference	Note

### 11.2.14 AT+FTPGET Download File

<b>AT+FTPGET Download File</b>	
Test Command <b>AT+FTPGET=?</b>	Response <b>OK</b>
Write Command <b>AT+FTPGET=&lt;mode&gt;[,&lt;reqlength&gt;]</b>	Response If mode is 1 and it is a successful FTPGET session: <b>OK</b> <b>+FTPGET:1,1</b>  If data transfer finished: <b>+FTPGET:1,0</b>  If mode is 1 and it is a failed FTPGET session: <b>OK</b> <b>+FTPGET:1,&lt;error&gt;</b>  If mode is 2: <b>+FTPGET:2,&lt;cnflength&gt;</b> <b>012345678...</b>  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>1</b> For opening FTP get session <b>2</b> For reading FTP download data.

	<p><b>&lt;reqlength&gt;</b> Requested number of data bytes (1-1460)to be read</p> <p><b>&lt;cnflength&gt;</b> Confirmed number of data bytes to be read, which may be less than &lt;length&gt;. 0 indicates that no data can be read.</p> <p><b>&lt;error&gt;</b></p> <table border="0"> <tr><td><b>61</b></td><td>Net error</td></tr> <tr><td><b>62</b></td><td>DNS error</td></tr> <tr><td><b>63</b></td><td>Connect error</td></tr> <tr><td><b>64</b></td><td>Timeout</td></tr> <tr><td><b>65</b></td><td>Server error</td></tr> <tr><td><b>66</b></td><td>Operation not allow</td></tr> <tr><td><b>70</b></td><td>Replay error</td></tr> <tr><td><b>71</b></td><td>User error</td></tr> <tr><td><b>72</b></td><td>Password error</td></tr> <tr><td><b>73</b></td><td>Type error</td></tr> <tr><td><b>74</b></td><td>Rest error</td></tr> <tr><td><b>75</b></td><td>Passive error</td></tr> <tr><td><b>76</b></td><td>Active error</td></tr> <tr><td><b>77</b></td><td>Operate error</td></tr> <tr><td><b>78</b></td><td>Upload error</td></tr> <tr><td><b>79</b></td><td>Download error</td></tr> <tr><td><b>80</b></td><td>Quit error</td></tr> </table>	<b>61</b>	Net error	<b>62</b>	DNS error	<b>63</b>	Connect error	<b>64</b>	Timeout	<b>65</b>	Server error	<b>66</b>	Operation not allow	<b>70</b>	Replay error	<b>71</b>	User error	<b>72</b>	Password error	<b>73</b>	Type error	<b>74</b>	Rest error	<b>75</b>	Passive error	<b>76</b>	Active error	<b>77</b>	Operate error	<b>78</b>	Upload error	<b>79</b>	Download error	<b>80</b>	Quit error
<b>61</b>	Net error																																		
<b>62</b>	DNS error																																		
<b>63</b>	Connect error																																		
<b>64</b>	Timeout																																		
<b>65</b>	Server error																																		
<b>66</b>	Operation not allow																																		
<b>70</b>	Replay error																																		
<b>71</b>	User error																																		
<b>72</b>	Password error																																		
<b>73</b>	Type error																																		
<b>74</b>	Rest error																																		
<b>75</b>	Passive error																																		
<b>76</b>	Active error																																		
<b>77</b>	Operate error																																		
<b>78</b>	Upload error																																		
<b>79</b>	Download error																																		
<b>80</b>	Quit error																																		
Reference	<p>Note</p> <p>When "+FTPGET:1,1" is shown, "+FTPGET:2,&lt;reqlength&gt;" can be used to read data. If the module still has unread data, "+FTPGET:1,1" will be shown again in a certain time.</p>																																		

### 11.2.15 AT+FTPPUT Upload File

AT+FTPPUT Upload File	
Test Command	Response
AT+FTPPUT=?	OK

<p>Write Command</p> <p><b>AT+FTPPUT=&lt;mode&gt;[,&lt;reqlength&gt;]</b></p>	<p>Response</p> <p>If mode is 1 and it is a successful FTTPUT session:</p> <p><b>OK</b> <b>+FTPPUT:1,1,&lt;maxlength&gt;</b></p> <p>If mode is 1 and it is a failed FTTPUT session:</p> <p><b>OK</b> <b>+FTPPUT:1,&lt;error&gt;</b></p> <p>If mode is 2 and &lt;reqlength&gt; is not 0</p> <p><b>+FTPPUT:2,&lt;cnflength&gt;</b> ..... //Input data <b>OK</b></p> <p>If mode is 2 and &lt;reqlength&gt; is 0, it will respond OK, and FTP session will be closed.</p> <p><b>OK</b></p> <p>If data transfer finished.</p> <p><b>+FTPPUT:1,0</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;mode&gt;</b></p> <p><b>1</b> For opening FTP put session <b>2</b> For writing FTP upload data.</p> <p><b>&lt;reqlength&gt;</b> Requested number of data bytes (0-&lt;maxlength&gt;) to be transmitted.</p> <p><b>&lt;cnflength&gt;</b> Confirmed number of data bytes to be transmitted.</p> <p><b>&lt;maxlength&gt;</b> The maximum length of data can be sent at a time. It depends on the network status.</p> <p><b>&lt;error&gt;</b> See "AT+FTPGET"</p>
<p>Reference</p>	<p><b>Note:</b> When "+FTPPUT:1,1,&lt;maxlength&gt;" is shown, "AT+FTPPUT=2,&lt;reqlength&gt;" can be used to write data.</p>

## 11.2.16 AT+FTPDELE Delete Remote File



<b>AT+FTPDELE Delete Remote File</b>	
Test Command <b>AT+FTPDELE=?</b>	Response <b>OK</b>
Execution Command <b>AT+FTPDELE</b>	Response If success: <b>OK</b> <b>+FTPDELE:1,0</b>  If failed: <b>OK</b> <b>+FTPDELE:1,&lt;error&gt;</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;error&gt;</b> See "AT+FTPGET"
Reference	<b>Note:</b> The file to be deleted is specified by the "AT+FTPGETNAME" and "AT+FTPGETPATH" commands.

### 11.2.17 AT+FTPSIZE Get the Size of Specified File on the Remote Machine

<b>AT+FTPSIZE Get the Size of Specified File on the Remote Machine</b>	
Test Command <b>AT+FTPSIZE=?</b>	Response <b>OK</b>
Execution Command <b>AT+FTPSIZE</b>	Response If success: <b>OK</b> <b>+FTPSIZE:1,0,&lt;size&gt;</b>  If failed: <b>OK</b> <b>+FTPSIZE:1,&lt;error&gt;</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;error&gt;</b> See "AT+FTPGET"  <b>&lt;size&gt;</b> The file size. Unit: byte
Reference	<b>Note:</b> The file is specified by the "AT+FTPGETNAME" and "AT+FTPGETPATH"

commands.

### 11.2.18 AT+FTPSTATE Get FTP Current State

AT+FTPSTATE Get FTP Current State	
Test Command <b>AT+FTPSTATE=?</b>	Response <b>OK</b>
Execution Command <b>AT+FTPSTATE</b>	Response <b>+FTPSTATE: &lt;state&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;state&gt;</b> <b>0</b> idle <b>1</b> in the FTP session, including FTPGET, FTPPUT, FTPDELE and FTPSIZE operation.
Reference	Note

### 11.2.19 AT+FTPEXTPUT Extend Upload File

AT+FTPEXTPUT Extend Upload File	
Test Command <b>AT+FTPEXTPUT=?</b>	Response <b>OK</b>
Write Command 1)if mode is 0 or 1 or 2 <b>AT+FTPEXTPUT=&lt;mode&gt;[,&lt;pos&gt;,&lt;len&gt;,&lt;timeout &gt;]</b> 2)if mode is 3 <b>AT+FTPEXTPUT=&lt;mode&gt;,&lt;file name&gt;</b>	Response If mode is 0 or 1 <b>OK</b>  If mode is 2 <b>+FTPEXTPUT:&lt;address&gt;,&lt;len&gt;</b> ..... //Input data  <b>OK</b>  If mode is 3 and file is exist in flash <b>OK</b>  If error is related to ME functionality:

	<b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;mode&gt;</b></p> <p><b>0</b> use default FTPPUT method</p> <p><b>1</b> use extend FTPPUT method</p> <p><b>2</b> send data to RAM through serial port, then FTPPUT method will get the data from RAM.</p> <p><b>3</b> load data from flash file to RAM, then FTPPUT method will get the data from RAM.</p> <p><b>&lt;pos&gt;</b> data offset address 0-300k</p> <p><b>&lt;len&gt;</b> data length 0-300k</p> <p><b>&lt;timeout&gt;</b> timeout value of serial port. 1000ms-1000000ms</p> <p><b>&lt;file name&gt;</b> File name length should less or equal 50 characters.</p> <p><b>&lt;err&gt;</b> See "AT+FTPGET"</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When extend FTPPUT mode is activated, input data then execute "AT+FTPPUT=1" to transmit, after session is complete, if successful, it returns "+FTPPUT:1,0", otherwise it returns "+FTPPUT:1,&lt;error&gt;", &lt;error&gt; see "AT+FTPGET".</li> </ul>

## 11.2.20 AT+FTPMKD Make Directory on the Remote Machine

<b>AT+FTPMKD Make Directory on the Remote Machine</b>	
Test Command <b>AT+FTPMKD=?</b>	Response <b>OK</b>
Execution Command <b>AT+FTPMKD</b>	<p>Response</p> <p>If success: <b>OK</b> <b>+FTPMKD:1,0</b></p> <p>If failed: <b>OK</b> <b>+FTPMKD:1,&lt;error&gt;</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
Parameter	<b>&lt;error&gt;</b> See "AT+FTPGET"

Reference	<p>Note:</p> <ul style="list-style-type: none"> <li>The created folder is specified by the "AT+FTPGETPATH" command.</li> </ul>
-----------	--

### 11.2.21 AT+FTPRMD Remove Directory on the Remote Machine

AT+FTPRMD Remove Directory on the Remote Machine	
Test Command <b>AT+FTPRMD=?</b>	Response <b>OK</b>
Execution Command <b>AT+FTPRMD</b>	Response If success: <b>OK</b> <b>+FTPRMD:1,0</b>  If failed: <b>OK</b> <b>+FTPRMD:1,&lt;error&gt;</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;error&gt;</b> See "AT+FTPGET"
Reference	<p>Note:</p> <ul style="list-style-type: none"> <li>The created folder is specified by the "AT+FTPGETPATH" command.</li> </ul>

### 11.2.22 AT+FTPLIST List Contents of Directory on the Remote Machine

AT+FTPLIST List Contents of Directory on the Remote Machine	
Test Command <b>AT+FTPLIST=?</b>	Response <b>OK</b>

<p>Write Command</p> <p><b>AT+FTPLIST=&lt;mode&gt;[,&lt;reqlength&gt;]</b></p>	<p>Response</p> <p>If mode is 1 and it is a successful FTP get session:</p> <p><b>OK</b> <b>+FTPLIST:1,1</b></p> <p>If data transfer is finished:</p> <p><b>+FTPLIST:1,0</b></p> <p>If mode is 1 and it is a failed FTP get session:</p> <p><b>OK</b> <b>+FTPLIST:1,&lt;error&gt;</b></p> <p>If mode is 2:</p> <p><b>+FTPLIST:2,&lt;cnflength&gt;</b> <b>012345678...</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;mode&gt;</b></p> <p><b>1</b> For opening FTP get file list session</p> <p><b>2</b> For reading FTP file list</p> <p><b>&lt;reqlength&gt;</b> Requested number of data bytes (1-1460)to be read</p> <p><b>&lt;cnflength&gt;</b> Confirmed number of data bytes to be read, which may be less than &lt;length&gt;. 0 indicates that no data can be read.</p> <p><b>&lt;error&gt;</b> See "AT+FTPGET"</p>
<p>Reference</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When "+FTPLIST:1,1" is shown, "AT+FTPLIST :2,&lt;reqlength&gt;" can be used to read data. If the module still has unread data, "+FTPLIST:1,1" will be shown again in a certain time.</li> <li>If using "AT+FTPGETPATH" to set a directory path, it will returned the files contents under this directory; if set a file path, it will return the information of the file specified.</li> </ul>

### 11.2.23 AT+FTPEXTGET Download File From the Remote Machine to Flash

AT+FTPEXTGET Download File From the Remote Machine to Flash	
Test Command <b>AT+FTPEXTGET=?</b>	Response <b>OK</b>
Read Command <b>AT+FTPEXTGET?</b>	Response <b>+FTPEXTGET: &lt;mode&gt;,&lt;length&gt;</b>  <b>OK</b>
Write Command 1) if mode is 0 or 1 <b>AT+FTPEXTGET=&lt;mode&gt;</b> 2)if mode is 3 <b>AT+FTPEXTGET=&lt;mode&gt;,&lt;pos&gt;,&lt;len&gt;</b>	Response If mode is 0: <b>OK</b>  If mode is 1 and successfully download data: <b>OK</b> <b>+FTPEXTGET:1,0</b>  If mode is 1 and failed to download data: <b>OK</b> <b>+FTPEXTGET:1,&lt;error&gt;</b>  If mode is 3 and successfully download data: <b>+FTPEXTGET: &lt;length&gt;</b> <b>0123456...</b> <b>OK</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> use default FTPGET method. <b>1</b> open extend FTP get session and download data to RAM. <b>3</b> read the downloaded data from RAM, then output it to the serial port.  <b>&lt;file name&gt;</b> File name length should less than or equal to 50 characters.  <b>&lt;pos&gt;</b> data offset should less than <length>.  <b>&lt;len&gt;</b> data length 0-300k.  <b>&lt;length&gt;</b> The length of the downloaded data from the remote machine.  <b>&lt;error&gt;</b> See "AT+FTPGET"
Reference	<b>Note:</b> • The data it can get is 300k at most

## 11.2.24 AT+FTPGET Download File

AT+FTPGET Download File	
Test Command <b>AT+FTPGET=?</b>	Response  <b>OK</b>
Write Command <b>AT+FTPGET=&lt;mode&gt;</b>	Response If mode is 1 and successfully open GET session: <b>OK</b> <b>+FTPGET:1,1</b>  If data transfer finished: <b>0123456789...</b> <b>&lt;ETX&gt;</b> //To notify the user that all data transfer has been finished, switch from data mode to command mode.  <b>+FTPGET:1,0</b>  If mode is 1 and failed to download data: <b>OK</b> <b>+FTPGET:1,&lt;error&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>1</b> open FTPGET session and download data.  <b>&lt;error&gt;</b> See "AT+FTPEXTGET"
Reference	<b>Note:</b> <ul style="list-style-type: none"> <li>Each &lt;ETX&gt; character present in the payload data of the FTP flow will be coded by the TCP/IP stack on the serial port as &lt;DLE&gt;&lt;ETX&gt;. Each &lt;DLE&gt; character will be coded as &lt;DLE&gt;&lt;DLE&gt;. The attached host must then decode the FTP flow to remove these escape characters.</li> </ul>

## 11.2.25 AT+FTPPUT Upload File

AT+FTPPUT Upload File	
Test Command <b>AT+FTPPUT=?</b>	Response  <b>OK</b> Parameter

<p>Write Command</p> <p><b>AT+FTPETPUT=&lt;mode&gt;[,&lt;file name&gt;]</b></p>	<p>Response</p> <p>If mode is 1 and successfully open PUT session:  <b>OK</b>  <b>+FTPETPUT:1,1</b></p> <p>If mode is 1 and failed to open PUT session:  <b>OK</b>  <b>+FTPETPUT:1,&lt;error&gt;</b></p> <p>If mode is 2:  <b>+FTPETPUT:2,1</b>  ... //Input data  &lt;ETX&gt; //To notify the module that all data has been sent, switch from data mode to command mode</p> <p><b>OK</b></p> <p>If data transfer finished:  <b>+FTPETPUT: 1,0</b></p> <p>If data transfer failed:  <b>+FTPETPUT: 1,&lt;error&gt;</b></p>
<p>Parameter</p>	<p>&lt;mode&gt;</p> <p><b>1</b> For opening FTPETPUT session.  <b>2</b> For writing FTP upload data.</p> <p>&lt;error&gt; See "AT+FTPTEXTGET"</p>
<p>Reference</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The TCP/IP stack will only interpret an &lt;ETX&gt; character as the end of the file to be transferred if it's not preceded by a &lt;DLE&gt; character. As a consequence the attached host must send &lt;ETX&gt; characters preceded by &lt;DLE&gt; characters and it must also code &lt;DLE&gt; characters in &lt;DLE&gt;&lt;DLE&gt;.</li> </ul>

### 11.2.26 AT+FTPQUIT Quit FTP transfer session

<p><b>AT+FTPQUIT Quit FTP transfer session</b></p>	
<p>Test Command</p> <p><b>AT+FTPQUIT=?</b></p>	<p>Response</p> <p><b>OK</b></p>



<p>Execution Command</p> <p><b>AT+FTPQUIT</b></p>	<p>Response</p> <p>If the current operation is GET method:</p> <p><b>OK</b></p> <p><b>+FTPGET: 1,80</b></p> <p>If the current operation is PUT method:</p> <p><b>OK</b></p> <p><b>+FTPPUT: 1,80</b></p> <p>If FTP is in idle state:</p> <p><b>ERROR</b></p>
Reference	<b>Note:</b>

### 11.2.27 AT+FTPRENAME Rename the Specified File on the Remote Machine

AT+FTPRENAME Rename the Specified File on the Remote Machine	
<p>Test Command</p> <p><b>AT+FTRENAME=?</b></p>	<p>Response</p> <p><b>OK</b></p>
<p>Execution Command</p> <p><b>AT+FTPRENAME</b></p>	<p>Response</p> <p>If success:</p> <p><b>OK</b></p> <p><b>+FTPRENAME:1,0</b></p> <p>If failed:</p> <p><b>OK</b></p> <p><b>+FTPRENAME:1,&lt;error&gt;,0</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<b>&lt;error&gt;</b> See "AT+FTPGET"
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The file is specified by the "AT+FTPGETNAME" and "AT+FTPGETPATH" commands.</li> <li>The new file name is set by "AT+FTPPUTNAME=&lt;value&gt;" command.</li> </ul>

## 11.2.28 AT+FTPMDTM Get the Last Modification Timestamp of Specified File on the Remote Machine

AT+FTPMDTM Get the Last Modification Timestamp of Specified File on the Remote Machine	
Test Command <b>AT+FTPMDTM=?</b>	Response <b>OK</b>
Execution Command <b>AT+FTPMDTM</b>	Response If success: <b>OK</b> <b>+FTPMDTM:1,0,&lt;timestamp&gt;</b>  If failed: <b>OK</b> <b>+FTPMDTM:1,&lt;error&gt;</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;error&gt;</b> See "AT+FTPGET"  <b>&lt;timestamp&gt;</b> The last modification timestamp of the specified file.
Reference	<b>Note:</b> The file is specified by the "AT+FTPGETNAME" and "AT+FTPGETPATH" commands.

# 12. AT Commands for NTP

## 12.1 Overview

## 12.2 AT Commands for NTP

AT+CNTP Set NTP Parameters and Get Network Time	
Test Command <b>AT+CNTP=?</b>	Response <b>OK</b>

<p>Read Command <b>AT+CNTP?</b></p>	<p>Response <b>+CNTP: "&lt;URL&gt;",&lt;time zone&gt;,&lt;cid&gt;,&lt;mode&gt;</b></p> <p><b>OK</b></p>
<p>Write Command <b>AT+CNTP=&lt;URL&gt;[,&lt;time zone&gt;][,&lt;cid&gt;][,&lt;mode&gt;]</b></p>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Execution Command <b>AT+CNTP</b></p>	<p>Response</p> <p><b>OK</b></p> <p><b>+CNTP: &lt;result&gt;[,&lt;time&gt;]</b></p>
<p>Parameter</p>	<p><b>&lt;URL&gt;</b> A string parameter (string should be included in quotation marks) which indicates the NTP Server address.</p> <p><b>&lt;time zone&gt;</b> (-12-12) A numeric parameter which indicates the network time zone, default value is 8</p> <p><b>&lt;cid&gt;</b> Bearer profile identifier refer to AT+SAPBR</p> <p><b>&lt;mode&gt;</b></p> <p><b>0</b> synchronize the modem with network time</p> <p><b><u>1</u></b> report network time</p> <p><b>2</b> report network time and synchronize the modem</p> <p><b>&lt;result&gt;</b> A numeric parameter which indicates the operation result:</p> <p><b>1</b> Success</p> <p><b>61</b> Net error</p> <p><b>62</b> Dns error</p> <p><b>63</b> Connect error</p> <p><b>64</b> Timeout</p> <p><b>65</b> Server error</p> <p><b>66</b> Operation not allow</p> <p><b>&lt;time&gt;</b> String type(string should be included in quotation marks) value; format is "yy/MM/dd, hh:mm:ss", where characters indicate year (two last digits), month, day, hour, minutes, seconds .E.g. 6th of May 2010, 00:01:52 equals to "10/05/06,00:01:52"</p>
<p>Reference</p>	<p>Note</p>

## 13. AT Commands for MMS

### 13.1 Overview

Command	Description
AT+CMMSURL	Set the URL of the mms center
AT+CMMSPROTO	Set the protocol parameter and MMS proxy
AT+CMMSCID	Set the network parameters for MMS
AT+CMMSSENDCFG	Set the parameters for sending MMS
AT+CMMSEDIT	Enter or exit edit mode
AT+CMMSDOWN	Download the file data or title from UART
AT+CMMSDELFILE	Delete the file of the edited MMS by file index
AT+CMMSSEND	Start mms sending
AT+CMMSRECP	Add recipients
AT+CMMSCC	Add copy recipients
AT+CMMSBCC	Add Secret Recipients
AT+CMMSDELRECP	Delete recipients
AT+CMMSDELCC	Delete copy recipients
AT+CMMSRECV	Receive MMS
AT+CMMSVIEW	Get the MMS into buffer and show the information
AT+CMMSREAD	Read the given file of the MMS in the buffer
AT+CMMSRDPUSH	Read the information of the MMS PUSH message
AT+CMMSUA	Set User Agent
AT+CMMSPROFILE	Set User Agent Profile
AT+CMMS TIMEOUT	Set MMS Timeout
AT+CMMSSTATUS	Get MMS Status
AT+CMMSINIT	Initialize MMS Function
AT+CMMS TERM	Exit MMS Function
AT+CMMS SCNT	Save MMS Context
AT+CMMS TYPECTL	Set the Assembling Method of MMS to be Sent

## 13.2 Detailed Descriptions of Commands

### 13.2.1 AT+CMMSURL Set the URL of the MMS Center

AT+CMMSURL Set the URL of the mms center	
Test Command <b>AT+CMMSURL=?</b>	Response <b>+CMMSURL: "URL"</b>  <b>OK</b>
Read Command <b>AT+CMMSURL?</b>	Response <b>+CMMSURL: &lt;mmscurl&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSURL=&lt;mmscurl&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mmscurl&gt;</b> The URL of the mms center.
Reference	Note:

### 13.2.2 AT+CMMSPROTO Set the Protocol Parameter and MMS Proxy

AT+CMMSPROTO Set the protocol parameter and MMS proxy	
Test Command <b>AT+CMMSPROTO=?</b>	Response <b>+CMMSPROTO: "(0-255).(0-255).(0-255).(0-255)",(1-65535)</b>  <b>OK</b>
Read Command <b>AT+CMMSPROTO?</b>	Response <b>+CMMSPROTO: &lt;Gateway&gt;,&lt;Port&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSPROTO=&lt;Gateway&gt;,&lt;Port&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>

Parameters	<p><b>&lt;Gateway&gt;</b> IP address of MMS proxy.</p> <p><b>&lt;Port&gt;</b> Port of MMS proxy.</p>
Reference	Note

### 13.2.3 AT+CMMSCID Set the Network Parameters for MMS

AT+CMMSCID Set the network parameters for MMS	
Test Command <b>AT+CMMSCID=?</b>	Response <b>+CMMSCID: (1-3)</b>  <b>OK</b>
Read Command <b>AT+CMMSCID?</b>	Response <b>+CMMSCID: &lt;value&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSCID=</b> <b>&lt;value&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;value&gt;</b> network parameters, refer to AT+SAPBR
Reference	Note

### 13.2.4 AT+CMMSENDCFG Set the Parameters for sending MMS

AT+CMMSENDCFG Set the parameters for sending MMS	
Test Command <b>AT+CMMSENDCFG=?</b>	Response <b>+CMMSENDCFG: (0-6), (0-3),(0,1), (0,1),(0-2),(0-4),(1-2),(0,1)</b>  <b>OK</b>
Read Command <b>AT+CMMSENDCFG?</b>	Response <b>+CMMSENDCFG:</b> <b>&lt;valid&gt;,&lt;pri&gt;,&lt;sendrep&gt;,&lt;readrep&gt;,&lt;visible&gt;,&lt;class&gt;,&lt;subctrl&gt;,&lt;notifrspche</b> <b>ck&gt;</b>  <b>OK</b>

Write Command

**AT+CMMSENDCFG=[<valid>[,  
<pri>[,<sendrep>[,<readrep>[,  
<visible>[,<class>[,<subctrl>  
[,<notifrspcheck>]]]]]]]]**

Response

**OK**

If error is related to ME functionality:

**+CME ERROR: <err>**

SIMCOM CONFIDENTIAL FILE

Parameter	<p><b>&lt;valid&gt;</b> The valid time of sent MMS</p> <p><b>0</b> 1 hour</p> <p><b>1</b> 12 hours</p> <p><b>2</b> 24 hours</p> <p><b>3</b> 2 days</p> <p><b>4</b> 1 week</p> <p><b>5</b> maximum</p> <p><b>6</b> Not set (default)</p> <p><b>&lt;pri&gt;</b> Priority</p> <p><b>0</b> lowest</p> <p><b>1</b> normal</p> <p><b>2</b> highest</p> <p><b>3</b> Not Set (default)</p> <p><b>&lt;sendrep&gt;</b> Whether it need deliver report</p> <p><b>0</b> No (default)</p> <p><b>1</b> Yes</p> <p><b>&lt;readrep&gt;</b> Whether it need receive report</p> <p><b>0</b> No (default)</p> <p><b>1</b> Yes</p> <p><b>&lt;visible&gt;</b> Whether it need show the sender address</p> <p><b>0</b> hide the sender address</p> <p><b>1</b> show the sender address even if it is a secret address</p> <p><b>2</b> Not set (default)</p> <p><b>&lt;class&gt;</b> The class of the MMS</p> <p><b>0</b> Personal</p> <p><b>1</b> Advertisement</p> <p><b>2</b> Informational</p> <p><b>3</b> Auto</p> <p><b>4</b> Not set (default)</p> <p><b>&lt;subctrl&gt;</b> Subject control</p> <p><b>1</b> For Chinese character code</p> <p><b>2</b> For English character code</p> <p><b>&lt;notifrspcheck&gt;</b> Whether it need to check the HTTP response of mms notifyrsp ind then to proceed the next step.</p> <p><b>0</b> Waiting for HTTP response</p> <p><b>1</b> Skip waiting for HTTP response</p>
Reference	Note



### 13.2.5 AT+CMMSEEDIT Enter or Exit Edit Mode

AT+CMMSEEDIT Enter or exit edit mode	
Test Command <b>AT+CMMSEEDIT=?</b>	Response <b>+CMMSEEDIT: (0,1)</b>  <b>OK</b>
Read Command <b>AT+CMMSEEDIT?</b>	Response <b>+CMMSEEDIT: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSEEDIT=&lt;mode&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> Whether it allows to edit MMS <b>0</b> Not allow to edit MMS <b>1</b> Allow to edit MMS
Reference	<b>Note:</b> It includes adding and deleting receipt, downloading and deleting files, downloading title to edit MMS.

### 13.2.6 AT+CMMSDOWN Download the File Data or Little from UART

AT+CMMSDOWN Download the file data or title from UART	
Test Command <b>AT+CMMSDOWN=?</b>	Response <b>+CMMSDOWN: "PIC", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "TEXT", (1-15360), (2000-), "NAME"</b> <b>+CMMSDOWN: "TITLE", (1-40), (2000-)</b> <b>+CMMSDOWN: "AUDIO_AAC", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "AUDIO_AMR", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "AUDIO_BASIC", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "AUDIO_MID", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "AUDIO_MPEG", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "VIDEO_3GPP", (1-307200), (5000-), "NAME"</b> <b>+CMMSDOWN: "VIDEO_MP4", (1-307200), (5000-), "NAME"</b>  <b>OK</b>

<p>Read Command <b>AT+CMMSDOWN?</b></p>	<p>Response <b>ERROR</b></p>
<p>Write Command <b>AT+CMMSDOWN=&lt;type&gt;,&lt;size&gt;,&lt;time&gt;[,&lt;name&gt;]</b></p>	<p>Response <b>CONNECT</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;type&gt;</b> A string parameter which indicates type of downloaded data</p> <p><b>TITLE</b> mms title data</p> <p><b>TEXT</b> mms text data</p> <p><b>PIC</b> mms image data</p> <p><b>AUDIO_AAC</b> mms aac audio data</p> <p><b>AUDIO_AMR</b> mms amr audio data</p> <p><b>AUDIO_BASIC</b> mms basic audio data</p> <p><b>AUDIO_MID</b> mms mid audio data</p> <p><b>AUDIO_MPEG</b> mms mpeg audio data</p> <p><b>VIDEO_3GPP</b> mms 3gpp video data</p> <p><b>VIDEO_MP4</b> mms mp4 video data</p> <p><b>&lt;size&gt;</b> Size in bytes of the data to be downloaded.</p> <p><b>&lt;time&gt;</b> Maximum time in milliseconds to download data.</p> <p><b>&lt;name&gt;</b> The file name of the image or the text to be downloaded, including extended name. The default name for image is "image&lt;n&gt;.jpg" ; for text is "text&lt;n&gt;.txt"; for audio_aac is "audio&lt;n&gt;.aac"; for audio_amr is "audio&lt;n&gt;.amr"; for audio_basic is "audio&lt;n&gt;.au"; for audio_mid is "audio&lt;n&gt;.mid"; for audio_mpeg is "audio &lt;n&gt;.mp3"; for video_3gpp is "audio&lt;n&gt;.3gp"; for video_mp4 is "video&lt;n&gt;.mp4". &lt;n&gt; is in the range of 0~255.</p>
<p>Reference</p>	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>It is strongly recommended to set the time long enough to download all the file data and make sure that the real size of the file to download is not bigger than &lt;size&gt;.</li> <li>The maximum size of &lt;name&gt; is 40 bytes and only ASCII code is recognized for &lt;name&gt;.</li> </ul>

### 13.2.7 AT+CMMSDELFILE Delete the file of the edited MMS by file index

<p><b>AT+CMMSDELFILE</b> Delete the file of the edited MMS by file index</p>	
<p>Test Command</p>	<p>Response</p>

<b>AT+CMMSDELFILE=?</b>	<b>OK</b>
Write Command <b>AT+CMMSDELFILE=&lt;fileIndex&gt;</b>	Response <b>OK</b>
	If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;fileIndex&gt;</b> The index of the file to be deleted in the MMS. Refer to "+CMMSVIEW"
Reference	<b>Note:</b> This command is valid when it is allowed to edit MMS

### 13.2.8 AT+CMMSSEND Start MMS sending

<b>AT+CMMSSEND Start mms sending</b>	
Test Command <b>AT+CMMSSEND=?</b>	Response <b>+CMMSSEND: "ADDRESS"</b>  <b>OK</b>
Write Command <b>AT+CMMSSEND=&lt;address&gt;</b>	Response <b>OK</b>
	If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Execution Command <b>AT+CMMSSEND</b>	Response <b>OK</b>
	If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;address&gt;</b> a string parameter which indicates address of recipients.
Reference	<b>Note:</b> It is not allowed to input <address> when it not allowed to edit MMS.

### 13.2.9 AT+CMMSRECP Add recipients

<b>AT+CMMSRECP Add recipients</b>	
Test Command <b>AT+CMMSRECP=?</b>	Response <b>+CMMSRECP: "ADDRESS"</b>  <b>OK</b>

Read Command <b>AT+CMMSRECP?</b>	Response <b>+CMMSRECP:</b> the list of <b>&lt;addr&gt;s</b>  <b>OK</b>
Write Command <b>AT+CMMSRECP=&lt;addr&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;addr&gt;</b> a string parameter which indicates phone number or email address of recipients. The maximum length of the string is 40.
Reference	<b>Note:</b> The maximum of recipients is 20 and this command is valid only when it is allowed to edit MMS.

### 13.2.10 AT+CMMSCC Add copy recipients

<b>AT+CMMSCC Add copy recipients</b>	
Test Command <b>AT+CMMSCC=?</b>	Response <b>+CMMSCC: "ADDRESS"</b>  <b>OK</b>
Read Command <b>AT+CMMSCC?</b>	Response <b>+CMMSCC:</b> the list of <b>&lt;addr&gt;s</b>  <b>OK</b>
Write Command <b>AT+CMMSCC=&lt;addr&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;addr&gt;</b> a string parameter which indicates phone number or email address of copy recipients. The maximum length of the string is 40.
Reference	<b>Note:</b> The maximum of copy recipients is 20 and this command is valid only when it is not allowed to edit MMS.

### 13.2.11 AT+CMMSBCC Add Secret Recipients

<b>AT+CMMSBCC Add Secret Recipients</b>	
Test Command <b>AT+CMMSBCC=?</b>	Response <b>+CMMSBCC: "ADDRESS"</b>

	<b>OK</b>
Read Command <b>AT+CMMSBCC?</b>	Response <b>+CMMSBCC:</b> the list of <addr>s  <b>OK</b>
Write Command <b>AT+CMMSBCC=&lt;addr&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;addr&gt;</b> a string parameter which indicates phone number or email address of secret recipients. The maximum length of the string is 40.
Reference	<b>Note:</b> The maximum of secret recipients is 20 and this command is valid only when it is allowed to edit MMS.

### 13.2.12 AT+CMMSDELRECP Delete recipients

<b>AT+CMMSDELRECP Delete recipients</b>	
Test Command <b>AT+CMMSDELRECP=?</b>	Response <b>+CMMSDELRECP: "ADDRESS"</b>  <b>OK</b>
Write Command <b>AT+CMMSDELRECP=&lt;addr&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Execution Command <b>AT+CMMSDELRECP</b>	Delete all the recipients Response <b>OK</b>
Parameters	<b>&lt;addr&gt;</b> a string parameter which indicates phone number or email address of recipient. The maximum length of the string is 40.
Reference	<b>Note:</b> This command is valid when it is allowed to edit MMS.

### 13.2.13 AT+CMMSDELCC Delete copy recipients

<b>AT+CMMSDELCC Delete copy recipients</b>	
Test Command <b>AT+CMMSDELCC=?</b>	Response <b>+CMMSDELCC: "ADDRESS"</b>

	<b>OK</b>
Write Command <b>AT+CMMSDELCC=&lt;addr&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Execution Command <b>AT+CMMSDELCC</b>	Delete all the copy recipients Response <b>OK</b>
Parameter	<b>&lt;addr&gt;</b> a string parameter which indicates phone number or email address of copy recipients. The maximum length of the string is 40.
Reference	<b>Note:</b> This command is valid when it is allowed to edit MMS.

### 13.2.14 AT+CMMSDELBCC Delete secret recipients

<b>AT+CMMSDELBCC Delete secret recipients</b>	
Test Command <b>AT+CMMSDELBCC=?</b>	Response <b>+CMMSDELBCC: "ADDRESS"</b>  <b>OK</b>
Write Command <b>AT+CMMSDELBCC=&lt;addr&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Execution Command <b>AT+CMMSDELBCC</b>	Delete all the secret recipients Response <b>OK</b>
Parameter	<b>&lt;addr&gt;</b> a string parameter which indicates phone number or email address of recipient. The maximum length of the string is 40.
Reference	<b>Note:</b> This command is valid when it is allowed to edit MMS.

### 13.2.15 AT+CMMSRECV Receive MMS

<b>AT+CMMSRECV Receive MMS</b>	
Test Command <b>AT+CMMSRECV=?</b>	Response <b>+CMMSRECV: (range of &lt;index&gt;)</b>  <b>OK</b>

<p>Write Command</p> <p><b>AT+CMMSRECV=&lt;index&gt;</b></p>	<p>Response</p> <p><b>+CMMSRECV: "&lt;sender&gt;","&lt;time&gt;","&lt;subject&gt;",&lt;size&gt;&lt;CR&gt;&lt;LF&gt;</b>  <b>list of &lt;fileIndex,name,type,filesize&gt;&lt;CR&gt;&lt;LF&gt;</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p>																		
<p>Parameters</p>	<p><b>&lt;index&gt;</b> The index of the push message saved in the SIM message box.</p> <p><b>&lt;sender&gt;</b> The address of the sender</p> <p><b>&lt;time&gt;</b> The time to receive the MMS</p> <p><b>&lt;subject&gt;</b> the title of the MMS</p> <p><b>&lt;size&gt;</b> The size of the MMS</p> <p><b>&lt;fileIndex,name,type,filesize&gt;</b> The index, name and size of every file included in the MMS. The types are defined as following.</p> <table border="0"> <tr><td><b>2</b></td><td>text</td></tr> <tr><td><b>3</b></td><td>text/html</td></tr> <tr><td><b>4</b></td><td>text/plain</td></tr> <tr><td><b>5</b></td><td>image</td></tr> <tr><td><b>6</b></td><td>image/gif</td></tr> <tr><td><b>7</b></td><td>image/jpg</td></tr> <tr><td><b>8</b></td><td>image/tif</td></tr> <tr><td><b>9</b></td><td>image/png</td></tr> <tr><td><b>10</b></td><td>smil</td></tr> </table>	<b>2</b>	text	<b>3</b>	text/html	<b>4</b>	text/plain	<b>5</b>	image	<b>6</b>	image/gif	<b>7</b>	image/jpg	<b>8</b>	image/tif	<b>9</b>	image/png	<b>10</b>	smil
<b>2</b>	text																		
<b>3</b>	text/html																		
<b>4</b>	text/plain																		
<b>5</b>	image																		
<b>6</b>	image/gif																		
<b>7</b>	image/jpg																		
<b>8</b>	image/tif																		
<b>9</b>	image/png																		
<b>10</b>	smil																		
<p>Reference</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• This command is valid only when it is not allowed to edit MMS and the buffer for MMS will be clear up. So it is recommended to save the MMS in the buffer before receiving MMS.</li> <li>• The received MMS is just saved in the buffer but not saved in the flash.</li> </ul>																		

### 13.2.16 AT+CMMSVIEW Get the MMS into buffer and show the information

<p><b>AT+CMMSVIEW Get the MMS into buffer and show the information</b></p>	
<p>Test Command</p> <p><b>AT+CMMSVIEW=?</b></p>	<p>Response</p> <p><b>OK</b></p>

<p>Execution Command</p> <p><b>AT+CMMSVIEW</b></p>	<p>Response</p> <p><b>+CMMSVIEW: &lt;mmstype&gt;,"&lt;sender&gt;", "&lt;receipts&gt;", "&lt;ccs&gt;", "&lt;bccs&gt;", "&lt;datetime&gt;","&lt;subject&gt;",&lt;size&gt;&lt;CR&gt;&lt;LF&gt;list of &lt;fileIndex, name, filesize&gt;&lt;CR&gt;&lt;LF&gt;</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
<p>Parameters</p>	<p><b>&lt;mmstype&gt;</b> The type of MMS</p> <p><b>0</b> Received mms</p> <p><b>1</b> Sent mms</p> <p><b>2</b> Unsent mms</p> <p><b>&lt;sender&gt;</b> The address of th sender</p> <p><b>&lt;receipts&gt;</b> List of recipients, Separated by “;”</p> <p><b>&lt;ccs&gt;</b> List of copy recipients , Separated by “;”</p> <p><b>&lt;bccs&gt;</b> List of secret recipients , Separated by “;”</p> <p><b>&lt;datetime&gt;</b> The time of receive MMS</p> <p><b>&lt;subject&gt;</b> The title of MMS</p> <p><b>&lt;size&gt;</b> Data size of MMS</p>

### 13.2.17 AT+CMMSREAD Read the given file of the MMS in the buffer

<p><b>AT+CMMSREAD</b> Read the given file of the MMS in the buffer</p>	
<p>Test Command</p> <p><b>AT+CMMSREAD=?</b></p>	<p>Response</p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+CMMSREAD=&lt;fileIndex&gt;</b></p>	<p>Response</p> <p><b>+CMMSREAD: &lt;name&gt; &lt;datSize&gt;</b></p> <p><b>File content</b></p> <p><b>OK</b></p>
<p>Parameters</p>	<p><b>&lt;fileIndex&gt;</b> the index of the file to be read from the MMS in the buffer, i.e. the parameter &lt;fileIndex&gt; in “AT+CMMSRECV” and “AT+CMMSVIEW”</p> <p><b>&lt;name&gt;</b> the file name to be read</p> <p><b>&lt;datSize&gt;</b> the size of the file to be read.</p>



Reference

Note:

If the file type is text, the character set of the output text is Unicode little endian without the header "FF FE".

### 13.2.18 AT+CMMSRDPUSH Read the information of the MMS Push message

**AT+CMMSRDPUSH** Read the information of the MMS PUSH message

Test Command  
AT+CMMSRDPUSH=?

Response  
+CMMSRDPUSH: (range of <index>)

OK

Write Command  
AT+CMMSRDPUSH=<index>

Response  
+CMMSRDPUSH:  
<n>,"<sender>","<subject>","<transaction>","<location>","<time>",<class>,<size>

OK

or

+CMMSRDPUSH: 6, "<receiver>","<time>",<status>

OK

or

+CMMSRDPUSH: 255

OK

or

+CME ERROR: <err>

Parameters	<p><b>&lt;n&gt;</b> The first parameter of the response should be 2 or 6, or the other type of the MMS PDU.</p> <p><b>2</b> m-notification-ind<sup>[2]</sup>. To inform the contents of a received MMS</p> <p><b>6</b> m-delivery-ind<sup>[2]</sup>. A delivery report</p> <p><b>255</b> unknown MMS PDU</p> <p><b>&lt;index&gt;</b> The index of the push message saved in the SIM message box.</p> <p><b>&lt;sender&gt;</b> The address of the sender</p> <p><b>&lt;receiver&gt;</b> The address of the receiver</p> <p><b>&lt;subject&gt;</b> The title of the MMS</p> <p><b>&lt;transaction&gt;</b> The X-Mms-Transation-ID<sup>[2]</sup> of the received MMS</p> <p><b>&lt;location&gt;</b> The X-Mms-Content-Location<sup>[2]</sup> of the received MMS</p> <p><b>&lt;class&gt;</b> The X-Mms-Class<sup>[2]</sup> of the received MMS</p> <p><b>0</b> Personal</p> <p><b>1</b> Advertisement</p> <p><b>2</b> Informational</p> <p><b>3</b> Auto</p> <p><b>&lt;time&gt;</b> Date and time of the received push message.</p> <p><b>&lt;size&gt;</b> The size of the MMS</p> <p><b>&lt;status&gt;</b> The status of the sent MMS</p> <p><b>0</b> Expired</p> <p><b>1</b> Retrieved</p> <p><b>2</b> Rejected</p> <p><b>3</b> Deferred</p> <p><b>4</b> Unrecognized</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• This command is valid only when it is not allowed to edit MMS and the buffer for MMS will be clear up. So it is recommended to save the MMS in the buffer before receiving MMS.</li> <li>• The received MMS is just saved in the buffer but not saved in the flash.</li> </ul>

### 13.2.19 AT+CMMSUA Set User Agent

AT+CMMSUA Set User Agent	
Test Command <b>AT+CMMSUA=?</b>	Response <b>+CMMSUA: "UserAgent"</b>  <b>OK</b>
Read Command <b>AT+CMMSUA?</b>	Response <b>+CMMSUA: &lt;UA&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSUA=&lt;UA&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;UA&gt;</b> string type user agent name
Reference	Note

### 13.2.20 AT+CMMSPROFILE Set User Agent Profile

AT+CMMSPROFILE Set User Agent Profile	
Test Command <b>AT+CMMSPROFILE=?</b>	Response <b>+CMMSPROFILE: "UserAgentProfile"</b>  <b>OK</b>
Read Command <b>AT+CMMSPROFILE?</b>	Response <b>+CMMSPROFILE: &lt;UAProfile&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSPROFILE=&lt;UAProfile&gt;</b>	Response <b>OK</b> or <b>ERROR</b> or <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;UAProfile&gt;</b> string type user agent profile
Reference	Note

### 13.2.21 AT+CMMSTIMEOUT Set MMS Timeout

AT+CMMSTIMEOUT Set MMS Timeout	
Test Command <b>AT+CMMSTIMEOUT=?</b>	Response <b>+CMMSTIMEOUT: (10-1000),(10-1000)</b>  <b>OK</b>
Read Command <b>AT+CMMSTIMEOUT?</b>	Response <b>+CMMSTIMEOUT: &lt;Send timeout&gt;,&lt;Recv timeout&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSTIMEOUT=&lt;Send timeout&gt;,&lt;Recv timeout&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;Send timeout&gt;</b> Send timeout time, integer type, in seconds.  <b>&lt;Recv timeout&gt;</b> Receive timeout time, integer type, in seconds.
Reference	Note

### 13.2.22 AT+CMMSSTATUS Get MMS Status

AT+CMMSSTATUS Get MMS Status	
Test Command <b>AT+CMMSSTATUS=?</b>	Response <b>OK</b>
Read Command <b>AT+CMMSSTATUS?</b>	Response <b>+CMMSSTATUS:&lt;status&gt;</b>  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;status&gt;</b> status of MMS action MMS_IDLE MMS_DOWNLOADING MMS_DOWNLOADED MMS_SENDING MMS_RECEIVING MMS_RECEIVED MMS_READING MMS_READING_PUSH

Reference	Note
-----------	------

### 13.2.23 AT+CMMSINIT Initialize MMS Function

AT+CMMSINIT Initialize MMS Function	
Test Command <b>AT+CMMSINIT=?</b>	Response <b>OK</b>
Execution Command <b>AT+CMMSINIT</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Reference	<b>Note:</b> When first entering the MMS function, this command must be executed.

### 13.2.24 AT+CMMSTERM Exit MMS Function

AT+CMMSTERM Exit MMS Function	
Test Command <b>AT+CMMSTERM=?</b>	Response <b>OK</b>
Execution Command <b>AT+CMMSTERM</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Reference	<b>Note:</b> When exiting the MMS function, this command must be executed.

### 13.2.25 AT+CMMSTYPECTL Set the Assembling Method of MMS to be Sent

AT+CMMSTYPECTL Set the Assembling Method of MMS to be Sent	
Test Command <b>AT+CMMSTYPECTL=?</b>	Response <b>+CMMSTYPECTL: (0,1)</b>  <b>OK</b>

Read Command <b>AT+CMMSTYPECTL?</b>	Response <b>+CMMSTYPECTL: &lt;mode&gt;</b>  <b>OK</b>
Write Command <b>AT+CMMSTYPECTL=&lt;mode&gt;</b>	Response <b>OK</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> application/vnd.wap.multipart.mixed method <b>1</b> application/vnd.wap.multipart.related method
Reference	Note

## 14. AT Commands for Email Application

### 14.1 Overview

Command	Description
AT+EMAILCID	Set Email Bearer Profile Identifier
AT+EMAILTO	Set Timeout Value of SMTP/POP3 Server Response
AT+SMTPSRV	Set SMTP Server Address and Port
AT+SMTPAUTH	Set User Name and Password for SMTP Authentication
AT+SMTPFROM	Set Sender Address and Name
AT+SMTPRCPT	Set the Email Recipient(TO/CC/BCC) Address and Name
AT+SMTPSUB	Set the Email Subject
AT+SMTPBODY	Set the Email Body
AT+SMTPFILE	Set the Email Attachment
AT+SMTPSEND	Send Emails
AT+SMTPPFT	Transfer the Email Attachment
AT+SMTPPCS	Set the Email Charset
AT+SMTPEXTFILE	SMTP Extend File Mode
AT+POP3 SRV	Set POP3 Server and Account
AT+POP3IN	Log In POP3 Server
AT+POP3NUM	Get Email Number and Total Size
AT+POP3LIST	Get the Specific Email Size
AT+POP3UIDL	Get the Specific Email Unique-id

AT+POP3CMD	Get Multi-line Response
AT+POP3READ	Read Multi-line Response
AT+POP3DEL	Mark the Specific Email to Delete
AT+POP3RSET	Unmark the Emails that Be Marked as Deleted
AT+POP3OUT	Log Out POP3 Server

## 14.2 Detailed Descriptions for Email Application

### 14.2.1 AT+EMAILCID Set Email Bearer Profile Identifier

AT+EMAILCID Set Email Bearer Profile Identifier	
Test Command <b>AT+EMAILCID=?</b>	Response <b>+EMAILCID: (range of supported &lt;cid&gt;s)</b>  <b>OK</b>
Read Command <b>AT+EMAILCID?</b>	Response <b>+EMAILCID: &lt;cid&gt;</b>  <b>OK</b>
Write Command <b>AT+EMAILCID= &lt;cid&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;cid&gt;</b> bearer profile identifier refer to AT+SAPBR
Reference	Note

### 14.2.2 AT+EMAILTO Set Timeout Value of SMTP/POP3 Server Response

AT+EMAILTO Set Timeout Value of SMTP/POP3 Server Response	
Test Command <b>AT+EMAILTO=?</b>	Response <b>+EMAILTO: (range of supported &lt;timeout&gt;s)</b>  <b>OK</b>

Read Command <b>AT+EMAILTO?</b>	Response <b>+EMAILTO: &lt;timeout&gt;</b>  <b>OK</b>
Write Command <b>AT+EMAILTO= &lt;timeout&gt;</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameter	<b>&lt;timeout&gt;</b> The timeout value of SMTP/POP3 server response, in 1 second unit. <b>10-120</b> Default: 30(seconds)
Reference	Note

### 14.2.3 AT+SMTPSRV Set SMTP Server Address and Port

<b>AT+SMTPSRV Set SMTP Server Address and Port</b>	
Test Command <b>AT+SMTPSRV=?</b>	Response <b>+SMTPSRV: &lt;smtpServerLength&gt;,(range of supported &lt;smtpPort&gt;s)</b>  <b>OK</b>
Read Command <b>AT+SMTPSRV?</b>	Response <b>+SMTPSRV: &lt;smtpServer&gt;,&lt;smtpPort&gt;</b>  <b>OK</b>
Write Command <b>AT+SMTPSRV= &lt;smtpServer&gt; [,&lt;smtpPort&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;smtpServer&gt;</b> SMTP server address, string type. This parameter can be either: IP address in the format: xxx.xxx.xxx.xxx Host name to be solved with a DNS query  <b>&lt;smtpPort&gt;</b> The SMTP port <b>1-65535</b> Default: 25  <b>&lt;smtpServerLength&gt;</b> The max length of <smtpServer>
Reference	Note



## 14.2.4 AT+SMTPAUTH Set User Name and Password for SMTP Authentication

AT+SMTPAUTH Set User Name and Password for SMTP Authentication	
Test Command <b>AT+SMTPAUTH=?</b>	Response <b>+SMTPAUTH: (range of supported&lt;authType&gt;s),&lt;userNameLength-h&gt;,&lt;passwordLength&gt;</b>  <b>OK</b>
Read Command <b>AT+SMTPAUTH?</b>	Response <b>+SMTPAUTH: &lt;authType&gt;,&lt;username&gt;,&lt;password&gt;</b>  <b>OK</b>
Write Command <b>AT+SMTPAUTH=&lt;authType&gt;[,&lt;userName&gt;,&lt;password&gt;]</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;authType&gt;</b> The type of SMTP authentication <b>0</b> SMTP server does not request authentication. <username> and <password> must not be given. <b>1</b> SMTP server requests authentication  <b>&lt;userName&gt;</b> The user name for SMTP authentication.  <b>&lt;userNameLength&gt;</b> The max length of <userName>.  <b>&lt;password&gt;</b> The password for SMTP authentication.  <b>&lt;passwordLength&gt;</b> The max length of <password>.
Reference	Note

## 14.2.5 AT+SMTPFROM Set Sender Address and Name

**AT+SMTPFROM Set Sender Address and Name**

Test Command <b>AT+SMTPFROM=?</b>	Response <b>+SMTPFROM: &lt;senderAddressLength&gt;,&lt;senderNameLength&gt;</b>  <b>OK</b>
Read Command <b>AT+SMTPFROM?</b>	Response <b>+SMTPFROM: &lt;senderAddress&gt;,&lt;senderName&gt;</b>  <b>OK</b>
Write Command <b>AT+SMTPFROM= &lt;senderAddress&gt; [,&lt;senderName&gt;]</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;senderAddress&gt;</b> The Email sender address,string type.  <b>&lt;senderAddressLength&gt;</b> The max length of <senderAddress>  <b>&lt;senderName&gt;</b> The Email sender name,string type.  <b>&lt;senderNameLength&gt;</b> The max length of <senderName>
Reference	Note

## 14.2.6 AT+SMTPRCPT Set the Email Recipient(TO/CC/BCC) Address and Name

<b>AT+SMTPRCPT Set the Email Recipient(TO/CC/BCC) Address and Name</b>	
Test Command <b>AT+SMTPRCPT=?</b>	Response <b>+SMTPRCPT: (range of supported &lt;rcptType&gt;s),(range of supported &lt;index&gt;s),&lt;rcptAddressLength&gt;,&lt;rcptNameLength&gt;</b>  <b>OK</b>
Read Command <b>AT+SMTPRCPT?</b>	Response <b>[+SMTPRCPT: &lt;rcptType&gt;,&lt;index&gt;,&lt;rcptAddress&gt;,&lt;rcptName&gt;</b> <b>[&lt;CR&gt;&lt;LF&gt;+SMTPRCPT: &lt;rcptType&gt;,&lt;index&gt;,&lt;rcptAddress&gt;,&lt;rcptName&gt;[...]]]</b>  <b>OK</b>

Write Command <b>AT+SMTPRCPT=</b> <b>&lt;rcptType&gt;</b> <b>[,&lt;index&gt;</b> <b>[,&lt;rcptAddress&gt;</b> <b>[,&lt;rcptName&gt;]]]</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;rcptType&gt;</b> The type of recipient, the types of TO and CC are used to construct email header in the field: "To:" or "Cc:".</p> <p><b>0</b> TO, Normal Recipient. <b>1</b> CC, Carbon Copy recipient. <b>2</b> BCC, Blind Carbon Copy recipient.</p> <p><b>&lt;index&gt;</b> Index of the type of recipient, decimal format.</p> <p><b>&lt;rcptAddress&gt;</b> The Email recipient address.</p> <p><b>&lt;rcptName&gt;</b> The Email recipient name.</p> <p><b>&lt;rcptAddressLength&gt;</b> The max length of &lt;rcptAddress&gt;.</p> <p><b>&lt;rcptNameLength&gt;</b> The max length of &lt;rcptName&gt;.</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>If only &lt;rcptType&gt; is given, it will delete all items of &lt;rcptType&gt;</li> <li>If only &lt;rcptType&gt; and &lt;index&gt; are given, it will delete the &lt;index&gt; item of &lt;rcptType&gt;.</li> </ul>

## 14.2.7 AT+SMTPSUB Set the Email Subject

<b>AT+SMTPSUB</b>	<b>Set the Email Subject</b>
Test Command <b>AT+SMTPSUB=?</b>	Response <b>+SMTPSUB: &lt;subjectLength&gt;</b>  <b>OK</b>
Read Command <b>AT+SMTPSUB?</b>	Response <b>+SMTPSUB: &lt;subject&gt;</b>  <b>OK</b>
Write Command <b>AT+SMTPSUB=</b> <b>&lt;subject&gt;</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>

Parameters	<p><b>&lt;subject&gt;</b> The Email subject, string type. It will be present in the header of the Email sent by SMTP client in the field:“Subject:”.</p> <p><b>&lt;subjectLength&gt;</b> The max length of &lt;subject&gt;.</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>If the Email charset is not ASCII,&lt;subject&gt; must be in hexadecimal format.</li> </ul>

## 14.2.8 AT+SMTPBODY Set the Email Body

AT+SMTPBODY Set the Email Body	
<p>Test Command</p> <p><b>AT+SMTPBODY=?</b></p>	<p>Response</p> <p><b>+SMTPBODY: &lt;bodyLength&gt;</b></p> <p><b>OK</b></p>
<p>Read Command</p> <p><b>AT+SMTPBODY?</b></p>	<p>Response</p> <p><b>+SMTPBODY: &lt;bodyContext&gt;</b></p> <p><b>OK</b></p>
<p>Write Command</p> <p><b>AT+SMTPBODY=&lt;bodyLength&gt;</b> ,then type data as Email body. When body’s length equal length, command is over!</p>	<p>Response</p> <p><b>DOWNLOAD</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p>
Parameters	<p><b>&lt;bodyLength&gt;</b> The max length of Email body.</p> <p><b>&lt;bodyContext&gt;</b> The context of Email body.</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>If the Email charset is not ASCII, the body of Email must be in hexadecimal format.</li> </ul>

## 14.2.9 AT+SMTPFILE Set the Email Attachment

AT+SMTPFILE Set the Email Attachment	
<p>Test Command</p> <p><b>AT+SMTPFILE=?</b></p>	<p>Response</p> <p><b>+SMTPFILE: (range of &lt;fileType&gt;s),&lt;fileNameLength&gt;,(range of &lt;encodeType&gt;s)</b></p> <p><b>OK</b></p>

Read Command <b>AT+SMTPFILE?</b>	Response <b>+SMTPFILE: &lt;fileType&gt;,&lt;fileName&gt;,&lt;encodeType&gt;</b>  <b>OK</b>
Write Command <b>AT+SMTPFILE=</b> <b>&lt;fileType&gt;[,&lt;fileName&gt;,&lt;encodeType&gt;]</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;fileType&gt;</b> The type of the Email attachment.</p> <p><b>0</b> no attachment</p> <p><b>1</b> attach a txt file</p> <p><b>2</b> attach a binary file (bmp, mp3, video...)</p> <p><b>&lt;fileName&gt;</b> The name of the Email attachment.</p> <p><b>&lt;fileNameLength&gt;</b> The max length of &lt;fileName&gt;.</p> <p><b>&lt;encodeType&gt;</b> Content-Transfer-Encoding used for attachment</p> <p><b>0</b> "7bit" means data all represented as short lines of US-ASCII data</p> <p><b>1</b> "base64" designed to represent arbitrary sequences of octets in a form that need not be humanly readable</p>
Reference	<p><b>Note:</b></p> <p>If a txt file (&lt;fileType&gt;=1) is attached, &lt;encodeType&gt; must be 0.</p> <p>If a binary file (&lt;fileType&gt;=2) is attached, &lt;encodeType&gt; must be 1.</p>

## 14.2.10 AT+SMTPSEND Send Emails

<b>AT+SMTPSEND Send Emails</b>	
Test Command <b>AT+SMTPSEND=?</b>	Response  <b>OK</b>
Write Command <b>AT+SMTPSEND</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If send successfully or not, return: <b>+SMTPSEND: &lt;code&gt;</b>

Parameters	<p><b>&lt;code&gt;</b> The result of sending Email.</p> <p><b>1</b> The Email has been sent successfully</p> <p><b>61</b> Network error</p> <p><b>62</b> DNS resolve error</p> <p><b>63</b> SMTP TCP connection error</p> <p><b>64</b> Timeout of SMTP server response</p> <p><b>65</b> SMTP server response error</p> <p><b>66</b> Not authentication</p> <p><b>67</b> Authentication failed. SMTP user name or password may be not right.</p> <p><b>68</b> Bad recipient</p>
Reference	Note

### 14.2.11 AT+SMTPFT Transfer the Email Attachment

AT+SMTPFT Transfer the Email Attachment	
Test Command <b>AT+SMTPFT=?</b>	Response  <b>OK</b>
Execution Command <b>AT+SMTPFT=&lt;reqLength&gt;</b>	<p>Response</p> <p>When the URC below is reported, the attachment can be transferred: <b>+SMTPFT: 1,&lt;maxLength&gt;</b></p> <p>If <b>&lt;reqLength&gt;</b> is not 0 and send data successfully: <b>+SMTPFT: 2,&lt;cnfLength&gt;</b> ..... <b>//Input data</b> <b>OK</b></p> <p>If <b>&lt;reqLength&gt;</b> is not 0 and send data unsuccessfully: <b>+SMTPFT: 2,&lt;cnfLength&gt;</b> ..... <b>//Input data</b> <b>ERROR</b></p> <p>If <b>&lt;reqLength&gt;</b> is 0,it indicates that transferring the attachment have finished: <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>If some error occur:</p>

	<b>+SMTPSEND: &lt;code&gt;</b>
Parameter	<p><b>&lt;reqLength&gt;</b> Requested number of data bytes(0-&lt;maxLength&gt;) to be transmitted</p> <p><b>&lt;cnfLength&gt;</b> Confirmed number of data bytes to be transmitted</p> <p><b>&lt;maxLength&gt;</b> The max length of data can be sent at a time. It depends on the network status.</p> <p><b>&lt;code&gt;</b> See AT+SMTPSEND</p>
Reference	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• &lt;reqLength&gt; cannot be greater than &lt;maxLength&gt;.</li> <li>• When “+SMTPPFT: 1,&lt;maxLength&gt;” is reported, then use AT+SMTPPFT=&lt;reqLength&gt; to send data.</li> </ul>

## 14.2.12 AT+SMTPCS Set the Email Charset

AT+SMTPCS Set the Email Charset	
Test Command <b>AT+SMTPCS=?</b>	Response <b>+SMTPCS: &lt;charsetLength&gt;</b>  <b>OK</b>
Read Command <b>AT+SMTPCS?</b>	Response <b>+SMTPCS: &lt;charset&gt;</b>  <b>OK</b>
Write Command <b>AT+SMTPCS=</b> <b>&lt;charset&gt;</b>	Response  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;charset&gt;</b> The Email charset, string type. It shows which charset the subject and the body are encoded in. If &lt;charset&gt; is not ASCII but UTF-8 or other, the subject and the body must be in hexadecimal format (e.g. “TEST” should be converted to “54455354”). The default charset is ASCII.</p> <p><b>&lt;charsetLength&gt;</b> The max length of &lt;charset&gt;.</p>
Reference	Note

### 14.2.13 AT+SMTPEXTFLIE SMTP Extend File Mode

AT+SMTPEXTFILE SMTP Extend File Mode	
Test Command <b>AT+SMTPEXTFILE =?</b>	Response <b>OK</b>
Read Command <b>AT+SMTPEXTFILE?</b>	Response <b>+SMTPEXTFILE: &lt;mode&gt;</b>  <b>OK</b>
Write Command 1) if mode is 0 or 1 <b>AT+SMTPEXTFILE=&lt;mode&gt;</b>	Response If mode is 0 or 1 <b>OK</b>
2) if mode is 2 <b>AT+SMTPEXTFILE</b> <b>=&lt;mode&gt;,&lt;id&gt;,&lt; file</b> <b>name&gt;,&lt;len&gt;</b>	If mode is 2, add attachment <id> <b>OK</b>
3) if mode is 3 <b>AT+SMTPEXTFILE=&lt;mode&gt;,&lt;id&gt;</b>	If mode is 3, delete attachment <id> <b>OK</b>
4) if mode is 4 <b>AT+SMTPEXTFILE=&lt;mode&gt;,&lt;id&gt;</b> <b>,&lt;pos&gt;,&lt;len&gt;,&lt;timeout&gt;</b>	If mode is 4, load data from serial port to attachment <id> <b>DOWNLOAD</b>  <b>OK</b>
5) if mode is 6 <b>AT+SMTPEXTFILE=&lt;mode&gt;,&lt;id&gt;</b> <b>[,&lt;pos&gt;[,&lt;len&gt;]]</b>	If mode is 6, print attachment<id> to serial port. <b>+SMTPEXTFILE: 6,&lt;id&gt;,&lt;pos&gt;,&lt;len&gt;</b> <b>//data</b> <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<b>&lt;mode&gt;</b> <b>0</b> Use default SMTP FILE method <b>1</b> Use extend SMTP FILE method <b>2</b> Add an attachment for SMTP. <b>3</b> Delete an attachment for SMTP. <b>4</b> Load data from serial port to an attachment. <b>6</b> Print an attachment to serial port.  <b>&lt;id&gt;</b> 0-9, from attachment <0> to <9>, total attachment size can not exceed 300k.  <b>&lt;pos&gt;</b> data offset address 0-300k  <b>&lt;len&gt;</b> data length 0-300k



	<p><b>&lt;timeout&gt;</b> timeout value of serial port. 1000ms-1000000ms</p> <p><b>&lt;file name&gt;</b> File name length should less or equal 32 characters.</p>
Reference	

SIMCOM CONFIDENTIAL FILE

## 14.2.14 AT+POP3SRV Set POP3 Server and Account

AT+POP3SRV	Set POP3 Server and Account
Test Command <b>AT+POP3SRV=?</b>	Response <b>+POP3SRV:</b> <pop3ServerLength>,<userNameLength>,<passwordLength>,(range of supported <pop3Port>s)  OK
Read Command <b>AT+POP3SRV?</b>	Response <b>+POP3SRV:</b> <pop3Server>,<userName>,<password>,<pop3Port>  OK
Write Command <b>AT+POP3SRV=</b> <pop3Server>, <userName>, <password> [,<pop3Port>]	Response  OK  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Parameters	<p><b>&lt;pop3Server&gt;</b> POP3 server address, string type. This parameter can be either: IP address in the format: xxx.xxx.xxx.xxx Host name to be solved with a DNS query</p> <p><b>&lt;userName&gt;</b> The user name to log in POP3 server, string type.</p> <p><b>&lt;password&gt;</b> The password to log in POP3 server, string type.</p> <p><b>&lt;pop3Port&gt;</b> The port of POP3 server. <b>1-65535</b> Default: 110</p> <p><b>&lt;pop3ServerLength&gt;</b> The max length of &lt;pop3Server&gt;.</p> <p><b>&lt;userNameLength&gt;</b> The max length of &lt;userName&gt;.</p> <p><b>&lt;passwordLength&gt;</b> The max length of &lt;password&gt;.</p>
Reference	Note

## 14.2.15 AT+POP3IN Log in POP3 Server

<b>AT+POP3IN Log In POP3 Server</b>	
Test Command <b>AT+POP3IN=?</b>	Response  <b>OK</b>
Execution Command <b>AT+POP3IN</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If logging in POP3 server or not, return: <b>+POP3IN: &lt;code&gt;</b>
Parameters	<p><b>&lt;code&gt;</b> The result of logging in POP3 server</p> <ul style="list-style-type: none"> <li><b>1</b> Log in POP3 server successfully</li> <li><b>61</b> Network error</li> <li><b>62</b> DNS resolve error</li> <li><b>63</b> POP3 tcp connection error</li> <li><b>64</b> Timeout of POP3 server response</li> <li><b>65</b> POP3 server response error</li> <li><b>66</b> POP3 server rejects to log in</li> <li><b>67</b> Incorrect user name</li> <li><b>68</b> Incorrect user name or password</li> </ul>
Reference	Note

## 14.2.16 AT+POP3NUM Get Email Number and Total Size

<b>AT+POP3NUM Get Email Number and Total Size</b>	
Test Command <b>AT+POP3NUM=?</b>	Response  <b>OK</b>
Execution Command <b>AT+POP3NUM</b>	Response <b>OK</b>  If error is related to ME functionality: <b>ERROR</b>  If POP3 server issues a positive response: <b>+POP3NUM: 1,&lt;totalNumber&gt;,&lt;totalSize&gt;</b>  If POP3 server issues a negative response: <b>+POP3NUM: 0</b>

	<p>If some error occur:  <b>+POP3OUT: &lt;code&gt;</b></p>
Parameters	<p><b>&lt;totalNumber&gt;</b> The Email number on the POP3 server, decimal format.</p> <p><b>&lt;totalSize&gt;</b> The total size of all Email and the unit is in byte.</p> <p><b>&lt;code&gt;</b> The result of logging out POP3 server</p> <p><b>1</b> Normally log out POP3 server</p> <p><b>61</b> Network error</p> <p><b>62</b> DNS resolve error</p> <p><b>63</b> POP3 tcp connection error</p> <p><b>64</b> Timeout of POP3 server response</p>
Reference	Note

### 14.2.17 AT+POP3LIST Get the Specific Size

AT+POP3LIST Get the Specific Email Size	
<p>Test Command  <b>AT+POP3LIST=?</b></p>	<p>Response  <b>+POP3LIST: (range of supported &lt;msgNumber&gt;s)</b></p> <p><b>OK</b></p>
<p>Write Command  <b>AT+POP3LIST=            &lt;msgNumber&gt;</b></p>	<p>Response  <b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR: &lt;err&gt;</b></p> <p>If POP3 server issues a positive response:  <b>+POP3LIST: 1,&lt;msgNumber&gt;,&lt;size&gt;</b></p> <p>If POP3 server issues a negative response:  <b>+POP3LIST: 0</b></p> <p>If some error occur:  <b>+POP3OUT: &lt;code&gt;</b></p>
Parameters	<p><b>&lt;msgNumber&gt;</b> The message number of Email.</p> <p><b>&lt;size&gt;</b> The size of Email &lt;msgNumber&gt; and the unit is in byte.</p> <p><b>&lt;code&gt;</b> The result of logging out POP3 server</p> <p><b>1</b> Normally log out POP3 server</p> <p><b>61</b> Network error</p> <p><b>62</b> DNS resolve error</p>

	<b>63</b>	POP3 tcp connection error
	<b>64</b>	Timeout of POP3 server response
Reference	Note	

## 14.2.18 AT+POP3UIDL Get the Specific Email Unique-id

AT+POP3UIDL Get the Specific Email Unique-id	
Test Command <b>AT+POP3UIDL=?</b>	Response <b>+POP3UIDL: (range of supported &lt;msgNumber&gt;s)</b>  <b>OK</b>
Write Command <b>AT+POP3UIDL= &lt;msgNumber&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If POP3 server issues a positive response: <b>+POP3UIDL: 1,&lt;msgNumber&gt;,&lt;uid&gt;</b>  If POP3 server issues a negative response: <b>+POP3UIDL: 0</b>  If some error occur: <b>+POP3OUT: &lt;code&gt;</b>
Parameters	<b>&lt;msgNumber&gt;</b> The message number of Email.  <b>&lt;UID&gt;</b> The Email unique-id, the unique-id is an arbitrary server-determined string, consisting of 1 to 70 characters in the range 0x21 to 0x7E, which uniquely identifies a message within a maildrop and which persists across sessions.  <b>&lt;code&gt;</b> The result of logging out POP3 server <b>1</b> Normally log out POP3 server <b>61</b> Network error <b>62</b> DNS resolve error <b>63</b> POP3 tcp connection error <b>64</b> Timeout of POP3 server response
Reference	Note

## 14.2.19 AT+POP3CMD Get Multi-line Response

AT+POP3CMD Get Multi-line Response	
Test Command <b>AT+POP3CMD=?</b>	Response <b>+POP3CMD:</b> (range of supported <b>&lt;cmdType&gt;s</b> ),(range of supported <b>&lt;msg Number&gt;s</b> ),(range of supported <b>&lt;lineNumber&gt;s</b> )  <b>OK</b>
Write Command <b>AT+POP3CMD=</b> <b>&lt;cmdType&gt;</b> <b>[,&lt;msgNumber&gt;</b> <b>[,&lt;lineNumber&gt;]]</b>	Response <b>OK</b>  <b>If error is related to ME functionality:</b> <b>ERROR</b>  If POP3 server issues a positive response: <b>+POP3CMD: 1</b>  If POP3 server issues a negative response: <b>+POP3CMD: 0</b>  If some error occur: <b>+POP3OUT: &lt;code&gt;</b>
Parameters	<b>&lt;cmdType&gt;</b> The values that supported POP3 user command <b>1</b> List command The "List" command returns a multi-line "scan listing". For each message on the maildrop list of the server the POP3 service returns a line containing the message number and its size in bytes. A final "dotline" will be printed at the end of the "scan listing". If there are no messages on the maildrop list of the server, the POP3 service returns a positive response, i.e. It does not issue an error response, but the "scan listing" will be empty. In either case,each scan listing will be finished by so-called "dotline", i.e. a new line with just a single dot. <b>&lt;msgNumber&gt;</b> and <b>&lt;lineNumber&gt;</b> must not be given. <b>2</b> Uidl command The "Uidl" command returns a multi-line "unique-id Listing". For each message on the maildrop list of the Server the POP3 service returns a line containing the message number and its unique-id. A final "dotline" will be printed at the end of the "unique-id listing" If there are no messages on the maildrop list of the server. The POP3 service returns a positive response,i.e. It does not issue an error response, but the "unique-id listing" will be empty. In either case, each unique-id listing will be finished by so-called "dotline", i.e.a

	<p>new line with just a singledot. &lt;msgNumber&gt; and &lt;lineNumber&gt; must not be given.</p> <p><b>3</b> Top command The command retrieves the number of lines of the message's body from the POP3 server's maildrop list. The POP3 server sends the headers of the message, the blank line separating the headers from the body, and then the number of lines of the message's body. If the number of lines requested by The POP3 client is greater than the number of lines in the body, then the POP3 server sends the entire message. If no such message exists on the server the POP3 service issues an error response to the user. Each email will be finished by a so-called "dotline", i.e.a new line with just a single dot. &lt;msgNumber&gt; and &lt;lineNumber&gt; must be given.</p> <p><b>4</b> Retrieve command The command retrieves the related message from the POP3 server's maildrop list. If no such message exists on the server the POP3 service issues an error response to the user. Each email will be finished by a so-called "dotline", i.e. a new line with just a single dot. &lt;msgNumber&gt; must be given.</p> <p><b>&lt;msgNumber&gt;</b> The message number of Email.</p> <p><b>&lt;lineNumber&gt;</b> The number of lines of the message body.</p> <p><b>&lt;code&gt;</b> The result of logging out POP3 server</p> <p><b>1</b> Normally log out POP3 server</p> <p><b>61</b> Network error</p> <p><b>62</b> DNS resolve error</p> <p><b>63</b> POP3 tcp connection error</p> <p><b>64</b> Timeout of POP3 server response</p> <p><b>If enabling SSL for POP3:</b></p> <p><b>80</b> SSL insufficient resource</p> <p><b>81</b> TCP send timeout in SSL transmission process</p> <p><b>82</b> SSL handshake timeout</p> <p><b>83</b> SSL handshake error</p> <p><b>84</b> SSL alter error</p>
Reference	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>After sending these POP3 commands and POP3 server issuing a positive response, you can get the response by AT+POP3READ.</li> </ul>

## 14.2.20 AT+POP3READ Read Multi-line Response

AT+POP3READ Read Multi-line Response	
Test Command <b>AT+POP3READ=?</b>	Response <b>+POP3READ: (range of supported &lt;reqLength&gt;s)</b>  <b>OK</b>
Write Command <b>AT+POP3READ=&lt;reqLength&gt;</b>	Response If the data of response not to be read completely: <b>+POP3READ: 1,&lt;cnfLength&gt;</b>  If the data of response to be read completely: <b>+POP3READ: 2,&lt;cnfLength&gt;</b>  If some data need to be read,the URC below is reported: <b>+POP3READ: 3,&lt;dataLength&gt;</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If some error occur: <b>+POP3OUT: &lt;code&gt;</b>
Parameters	<b>&lt;reqLength&gt;</b> Requested number of data bytes (1-1460) to be read  <b>&lt;cnfLength&gt;</b> Confirmed number of data bytes to be read, which may be less than <reqLength>. 0 indicates that no data can be read.  <b>&lt;dataLength&gt;</b> Received number of data bytes.  <b>&lt;code&gt;</b> The result of logging out POP3 server <b>1</b> Normally log out POP3 server <b>61</b> Network error <b>62</b> DNS resolve error <b>63</b> POP3 tcp connection error <b>64</b> Timeout of POP3 server response
Reference	Note: <ul style="list-style-type: none"> <li>• Other AT commands (but AT+POP3OUT) can not be executed until the data of response are read completely.</li> <li>• If &lt;cnfLength&gt; is less than &lt;reqLength&gt;, you should wait for a URC "+POP3READ: 3,&lt;dataLength&gt;" reported. Then you may continue to read data by AT+POP3READ.</li> <li>• If the module has some unread data, the URC "+POP3READ: 3,&lt;dataLength&gt;" is reported every once in a while. After some time, these data are not still read, the module will quit the POP3 process.</li> </ul>

## 14.2.21 AT+POP3DEL Mark the Specific Email to Delete



<b>AT+POP3DEL Mark the Specific Email to Delete</b>	
Test Command <b>AT+POP3DEL=?</b>	Response <b>+POP3DEL:</b> (range of supported <msgNumber>s)  <b>OK</b>
Write Command <b>AT+POP3DEL=&lt;msgNumber&gt;</b>	Response <b>OK</b>  If error is related to ME functionality: <b>ERROR</b>  If POP3 server issues a positive response: <b>+POP3DEL: 1</b>  If POP3 server issues a negative response: <b>+POP3DEL: 0</b>  If some error occur: <b>+POP3OUT: &lt;code&gt;</b>
Parameters	<b>&lt;msgNumber&gt;</b> The message number of Email  <b>&lt;code&gt;</b> The result of logging out POP3 server <b>1</b> Normally log out POP3 server <b>61</b> Network error <b>62</b> DNS resolve error <b>63</b> POP3 tcp connection error <b>64</b> Timeout of POP3 server response
Reference	<b>Note:</b> <ul style="list-style-type: none"> <li>The POP3 server marks the Email as deleted. Any future reference to the message-number associated with the Email in a POP3 command generates an error. The POP3 server does not actually delete the Email until the POP3 client logs out POP3 server and closes the session normally.</li> </ul>

### 14.2.22 AT+POP3RSET Unmark the Emails that Be Marked as Deleted

<b>AT+POP3RSET Unmark the Emails that Be Marked as Deleted</b>	
Test Command <b>AT+POP3RSET=?</b>	Response  <b>OK</b>

Execution Command <b>AT+POP3RSET</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If POP3 server issues a positive response: <b>+POP3RSET: 1</b>  If POP3 server issues a negative response: <b>+POP3RSET: 0</b>  If some error occur: <b>+POP3OUT: &lt;code&gt;</b>
Parameters	<b>&lt;code&gt;</b> The result of logging out POP3 server <b>1</b> Normally log out POP3 server <b>61</b> Network error <b>62</b> DNS resolve error <b>63</b> POP3 tcp connection error <b>64</b> Timeout of POP3 server response
Reference	Note

### 14.2.23 AT+POP3OUT Log Out POP3 Server

<b>AT+POP3OUT Log Out POP3 Server</b>	
Test Command <b>AT+POP3OUT=?</b>	Response <b>OK</b>
Execution Command <b>AT+POP3OUT</b>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If the process is completed, return: <b>+POP3OUT: &lt;code&gt;</b>
Parameters	<b>&lt;code&gt;</b> The result of logging out POP3 server <b>1</b> Normally log out POP3 server <b>61</b> Network error <b>62</b> DNS resolve error <b>63</b> POP3 tcp connection error <b>64</b> Timeout of POP3 server response

Reference	Note
-----------	------

SIMCOM CONFIDENTIAL FILE

# 15. Supported Unsolicited Result Code

## 15.1 Summary of CME ERROR Codes

Final result code +CME ERROR: <err> indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adaptor link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long

27	invalid characters in dial string
30	no network service
31	network timeout
32	network not allowed - emergency call only
40	network personalisation PIN required
41	network personalisation PUK required
42	network subset personalisation PIN required
43	network subset personalisation PUK required
44	service provider personalisation PIN required
45	service provider personalisation PUK required
46	corporate personalisation PIN required
47	corporate personalisation PUK required
99	resource limitation
100	unknown
103	Illegal MS
106	Illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	service option not supported
133	requested service option not subscribed
134	service option temporarily out of order
148	unspecified GPRS error
149	PDP authentication failure
150	invalid mobile class
160	DNS resolve failed
161	Socket open failed
171	MMS task is busy now
172	The MMS data is oversize
173	The operation is overtime
174	There is no MMS receiver
175	The storage for address is full
176	Not find the address
177	The connection to network is failed
178	Failed to read push message
179	This is not a push message
180	gprs is not attached
181	tcpip stack is busy

182	The MMS storage is full
183	The box is empty
184	failed to save MMS
185	It is in edit mode
186	It is not in edit mode
187	No content in the buffer
188	Not find the file
189	Failed to receive MMS
190	Failed to read MMS
191	Not M-Notification.ind
192	The MMS inclosure is full
193	Unknown
753	missing required cmd parameter
754	invalid SIM command
755	invalid File Id
756	missing required P1/2/3 parameter
757	invalid P1/2/3 parameter
758	missing required command data
759	invalid characters in command data
765	Invalid input value
766	Unsupported mode
767	Operation failed
768	Mux already running
769	Unable to get control
770	SIM network reject
771	Call setup in progress
772	SIM powered down
773	SIM file not present
791	Param count not enough
792	Param count beyond
793	Param value range beyond
794	Param type not match
795	Param format invalid
796	Get a null param
797	CFUN state is 0 or 4
810	No Error
811	Unrecognized Command
812	Return Value Error
813	Syntax Error

814	Unspecified Error
815	Data Transfer Already
816	Action Already
817	Not At Cmd
818	Multi Cmd too long
819	Abort Cops
820	No Call Disc
821	BT SAP Undefined
822	BT SAP Not Accessible
823	BT SAP Card Removed
824	AT Not Allowed By Customer

## 15.2 Summary of CMS ERROR Codes

Final result code +CMS ERROR: <err> indicates an error related to message service or network. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
1	Unassigned(unallocated) number
3	No route to destination
6	Channel unacceptable
8	Operator determined barring
10	Call barred
11	Reserved
16	Normal call clearing
17	User busy
18	No user responding
19	User alerting, no answer
21	Short message transfer rejected
22	Number changed
25	Pre-emption
26	Non-selected user clearing
27	Destination out of service
28	Invalid number format (incomplete number)
29	Facility rejected

30	Response to STATUS ENQUIRY
32	Normal, unspecified
34	No circuit/channel available
38	Network out of order
41	Temporary failure
42	Switching equipment Congestion
43	Access information discarded
44	Requested circuit/channel not available
47	Resources unavailable, unspecified
49	Quality of service unavailable
50	Requested facility not subscribed
55	Requested facility not subscribed
57	Bearer capability not authorized
58	Bearer capability not presently available
63	Service or option not available, unspecified
65	Bearer service not implemented
68	ACM equal or greater than ACM maximum
69	Requested facility not implemented
70	Only restricted digital information bearer capability is available
79	Service or option not implemented, unspecified
81	Invalid transaction identifier value
87	User not member of CUG
88	Incompatible destination
91	Invalid transit network selection
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message type not compatible with protocol state
99	Information element non-existent or not implemented
100	Conditional information element error
101	Message not compatible with protocol
102	Recovery on timer expiry
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported



129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be acted
161	Command unsupported
175	Unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported
199	TP-VP not supported
208	SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy
213	SIM data download error
224	CP retry exceed
225	RP trim timeout
226	SMS connection broken
255	Unspecified error cause
300	ME failure
301	SMS reserved
302	operation not allowed
303	operation not supported
304	invalid PDU mode
305	invalid text mode
310	SIM not inserted
311	SIM pin necessary

312	PH SIM pin necessary
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
323	invalid input parameter
324	invalid input format
325	invalid input value
330	SMSC address unknown
331	no network
332	network timeout
340	no cnma ack
500	Unknown
512	SMS no error
513	Message length exceeds maximum length
514	Invalid request parameters
515	ME storage failure
516	Invalid bearer service
517	Invalid service mode
518	Invalid storage type
519	Invalid message format
520	Too many MO concatenated messages
521	SMSAL not ready
522	SMSAL no more service
523	Not support TP-Status-Report & TP-Command in storage
524	Reserved MTI
525	No free entity in RL layer
526	The port number is already registered
527	There is no free entity for port number
528	More Message to Send state error
529	MO SMS is not allow
530	GPRS is suspended
531	ME storage full
532	Doing SIM refresh

---

## Contact us:

Shanghai SIMCom Wireless Solutions Ltd.

Add: Bldg A, SIM Technology Bldg., No.633, Jinzhong Road, Changning Dist., Shanghai P.R. China 200335

Tel: +86 21 32523424

Fax: +86 21 32523020

[URL:www.simcomm2m.com](http://www.simcomm2m.com)

SIMCOM CONFIDENTIAL FILE